

1 Before Initial Use

Please read IMPORTANT SAFETY INSTRUCTIONS on pages 19-20 before use.
Read and understand all instructions.

Thank you for purchasing your new Voice 2000 mini cordless + hands free headset telephone.

(Accessories)

Belt Clip



 
Telephone Line Cord



Headset



AC Adaptor

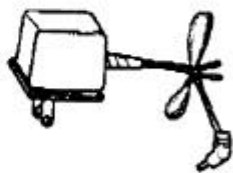

2 For Best Performance

(Battery Charge)

 
A rechargeable Ni-MH battery powers the handset. Charge the battery for about 12 hours before initial use.



The battery is beneath this cover.

(Operating Distance / Noise)

Calls are transmitted between the base unit and the handset using wireless radio waves.
For maximum distance and noise free operation, the recommended base unit location is:

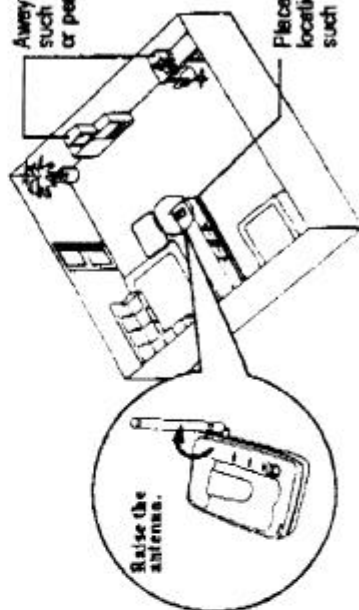


Away from electrical appliances such as a TV, radio, speakers, or personal computer.

Place it on a high and central location with no obstructions such as walls.

Raise the antenna.


3 Location or Controls

 
(Handset)

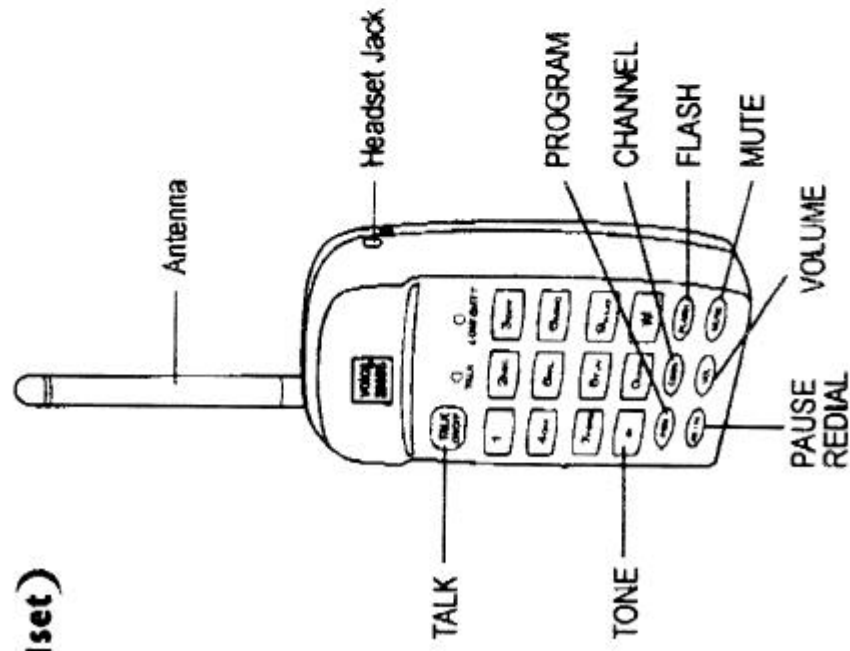


4 Location or Controls

  (Base Unit)

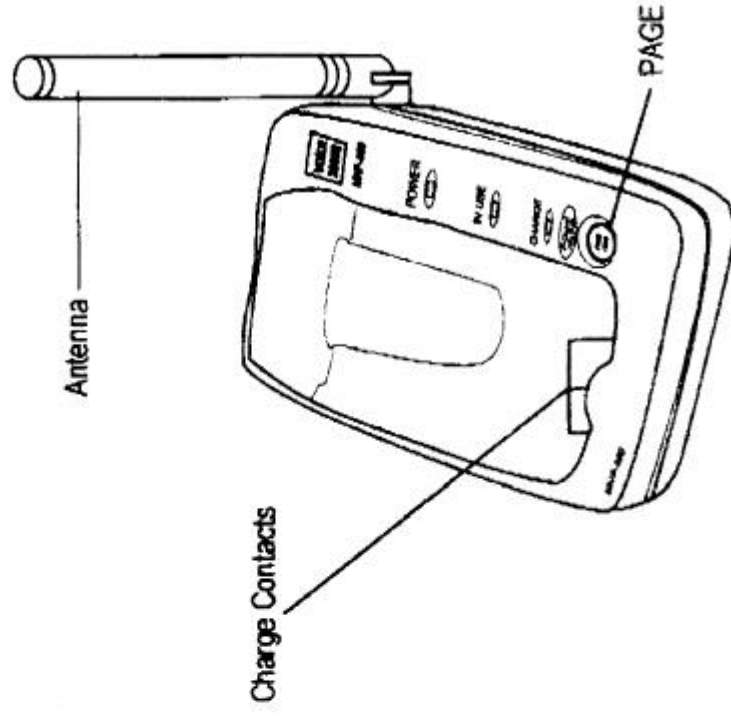

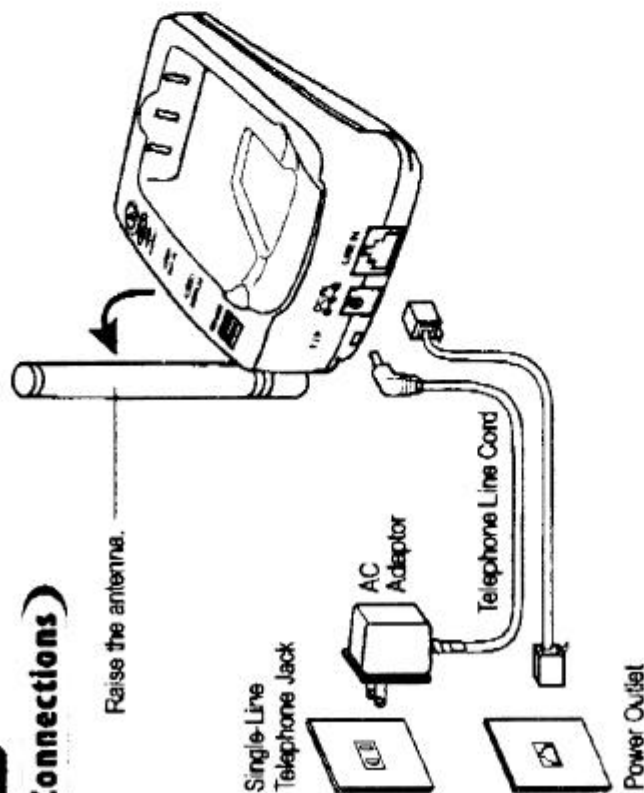(Connections)

 - Use the AC adaptor that comes with the Phone or use 110 AC adaptor from your nearest store.
- The AC adaptor must remain connected at all time. (it is normal for the adaptor to feel warm during use.)
- To connect a standard telephone on the same line, see page 17.

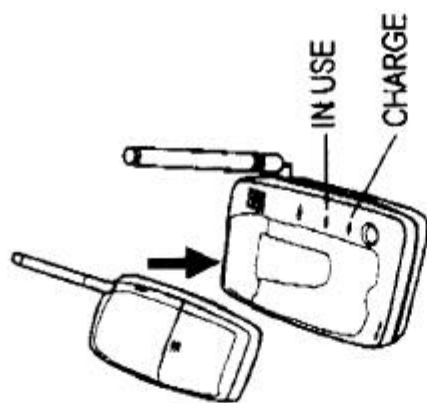(Battery Charge)

Place the handset on the Base unit and charge for about 7 hours before initial use.

Recharge

When the RECHARGE indicator flashes or the unit beeps intermittently, recharge the battery for about 7 Hours.

- If you DO NOT recharge the handset battery for more than 30 minutes, the RECHARGE Indicator will continue to flash.

(Battery Information)

If your battery is fully charged:


Operation	Approx. battery life
While in use (TALK)	Up to about 7 Hours
While not in use (STAND-BY)	Up to about 7 Hours

- * Battery life may vary depending on usage conditions and ambient temperature.
- * Clean the handset and the base unit charge contacts with a soft dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity. If not, the battery may not charge properly.
- * If the battery is fully charged, you do not have to place the handset on the base unit until the RECHARGE indicator flashes. This will maximize the battery life.
- * The battery cannot be overcharged.


(Using the Belt Clip)

You can hang the handset on your belt or pocket using the belt clip.

 To install the belt clip:

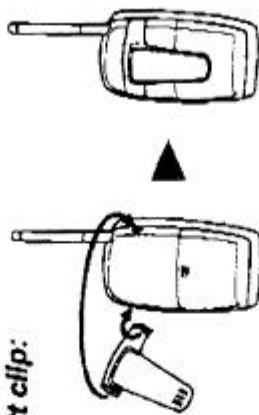


To remove the belt clip:

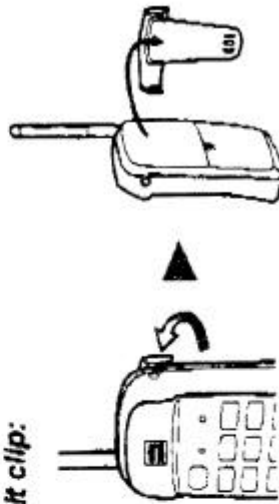 


Using the Headset

 Plugging the headset into the handset provides a hands-free phone conversation.

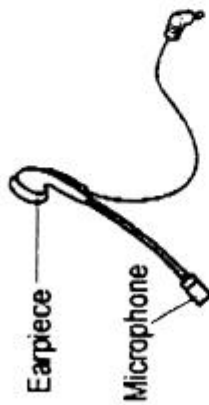

Connecting the Headset to the Handset

 Just simply plug the headset connector into the handset jack as shown.

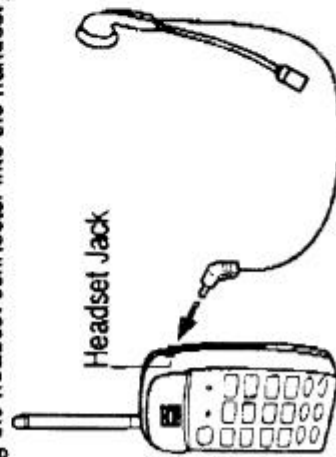

To wear your Headset, just simply put the ear-piece into your ear and make sure the mouth-piece is downward

1 Press TALK

* The TALK indicator lights.

2 Dial a telephone number.

* If you misdial, press FLASH firmly then dial again.

3 To hand up, just press TALK or place the handset on the base unit.

* The TALK indicator light goes out.

* If an alarm tone sounds or nothing happen in step 1, move closer to the base unit or place the handset on the base unit. Then try again.

To redial the last number dialed

Press TALK + RE/PA

 
To select the receiver volume

Press VOLUME while talking.

Each time you press the button, the volume level will change from MEDIUM (preset) to HIGH to LOW.

If noise interferes with the conversation


Press CHAN to select a clearer channel or move closer to the base unit.

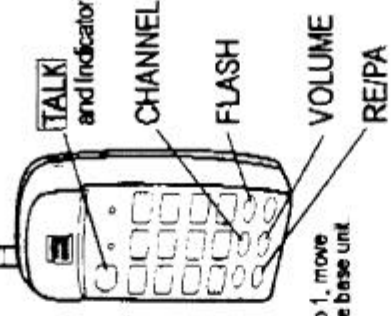

11

Answering Calls

 If the handset is off the base unit, press **TALK**.

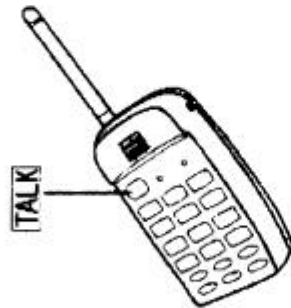

Lighted handset keypad

The handset dialing buttons will light up when the TALK Button are press, will not go out until the TALK button are press again.

12

Speed Dialer

Storing Phone Numbers in Memory

You can store up to 10 phone numbers in the handset. The dialing buttons (1 to 0) function as memory stations.

The talk indicator light must be off before programming.

1 Press **PGM**.

- * The TALK Indicator flashes.

2

 
Enter a phone number up to 16 digits.

- * The TALK Indicator keeps flashing.

3

Press **PGM** again, then press a memory station number (1 to 0).

- * The TALK Indicator flashes goes out.
- * A confirmation tone sounds.
- * To store other numbers, repeat steps 1 through 3.

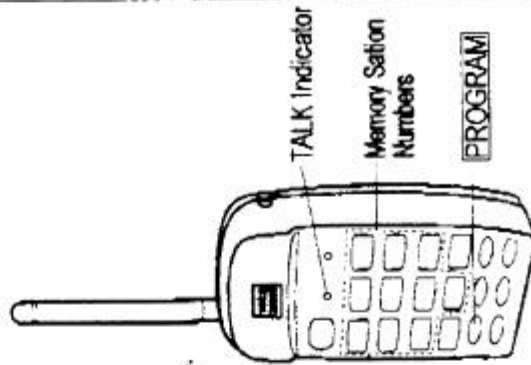

13

 
Speed Dialer

Dialing a Stored Number

- 1** Press **TALK**.
* The TALK indicator light up.
- 2** Press **PGM**.
* The TALK indicator keeps light up.
- 3** Enter the memory station's number (1 to 0).

Clear a Stored Number

- 1** Press **PGM**.
* The TALK indicator flash.
- 2** Enter the memory station's number (1 to 0).
* The TALK indicator keeps flashing.
- 3** Press **PGM** twice.
* A confirmation tone sounds.

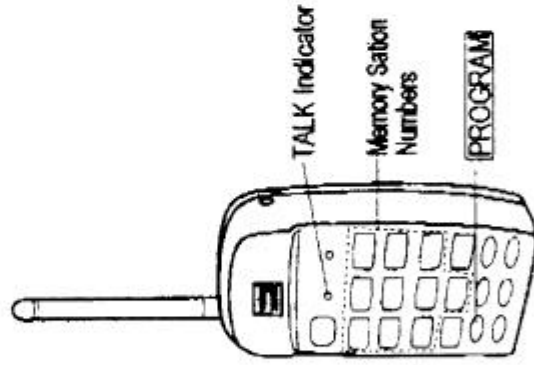

14

Special Features

Handset Locator

You can locate the handset or page the handset user with beep tones.

- 1** Press **PAGE** on the base unit.
* The IN USE / CHARGE indicator flashes and the handset beeps.
- 2** To stop the paging, press **PAGE** on the base unit again or press **TALK** on the handset.
* The indicator's light goes out.

For call Waiting Service Users

Press **FLASH** briefly if you hear a call-waiting tone while talking.

- * The first call is put on hold and you can answer the second call.
- * To return to the first caller, press the **FLASH** button again.

15 Battery Replacement

If the **RECHARGE** indicator flashes after being fully charged, replace the battery with a new battery. To prevent memory loss, replace within 5 minutes.

- 1** Remove the cover by sliding it while pressing the arrow.
- 2** Replace the battery, then close the cover.
- 3** Be sure to charge the new battery for about 7 hours.

 
(Attention)

The product you have purchased is powered by a nickel cadmium battery, which is recyclable. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream. Please call 1-800-8-BATTERY for information on how to recycle this battery.



16 Adding Another Phone

This unit will not function during a power failure. To connect a standard telephone on the same line, use the T-adaptor.

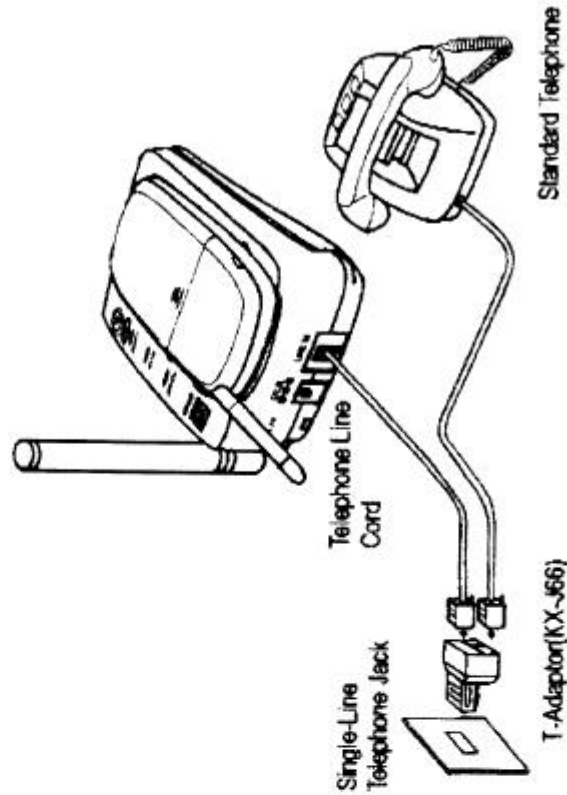

17 Before Requesting Help

PROBLEM	REMEDY
The unit does not work.	• Check the settings (p. 6~10). • Charge the battery fully (p. 7). • Clean the charge contacts and charge again (p. 8). • Place the handset on the base unit and unplug the AC adaptor to reset. Plug in, then try again. • Re-insert the handset battery within 5 minutes to avoid memory loss and place the handset on the base unit. Then try again.
An alarm tone sounds when you press TALK.	• You are too far from the base unit. Move closer and try again. • Place the handset on the base unit and try again. • Plug in the AC adaptor. • Raise the base unit antenna.
Static, sound cuts in / out, fades. Interference from other electrical units.	• Locate the handset and the base unit away from other electrical appliances (p. 5). • Move closer to the base unit. • Raise the base unit antenna. • Press [CHAN] to select a clearer channel.

18 Before Requesting Help

PROBLEM	REMEDY
The handset does not ring.	The ringer volume is set to OFF.
You cannot have a conversation using the headset.	Make sure that the optional headset is plugged into the headset jack properly (p. 10).
While storing a phone number, the unit starts to ring.	To answer the call, press [TALK] . The program will be canceled. Store the number again.
PAGE does not function.	The handset is too far from the base unit or is engaged in an outside call.
The RECHARGE indicator flashes or the unit beeps intermittently.	Charge the battery fully (p. 7).
You charged the battery fully, but the RECHARGE indicator flashes.	Clean the charge contacts and charge again (p. 8). Install a new battery (p. 16).
The IN USE / CHARGE indicator light never goes out while charging.	This is normal.
If you cannot solve your problem.	Call our customer call center at ???

19 Important Safety Instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and / or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local Power Company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.

20 Important Safety Instructions

10. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Shock spill any liquid on the unit.
11. To reduce the risk on electric shock, do not disassemble this unit. Take the unit to an authorized service center when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized service center when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized service center.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.

21 Save These Instructions

(CAUTION)

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery (ies) specified.
2. Do not dispose of the battery (ies) in a fire. They explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery (ies). Released electrolyte is corrosive and may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and / or conductor may overheat and cause burns.
5. Charge the battery (ies) provided with or identified for use with this product only in accordance with the instruction and limitations specified in this manual.

(WARNING)

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

22 Other Information

Some cordless telephone operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce or eliminate interference.

Privacy of communications may not be ensured when using this phone.

- Environment do not place the unit in room where the temperature is less than 5 degree C (41 degree F) or greater than 40 degree C (104 degree F). Allow 10-cm (4 unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
 - Routine care wipe the unit with a soft cloth. Do not use benzene, thinner, or any abrasive power. When you leave the unit unused for a long period of time, unplug the AC adaptor from the outlet.
 - If there is any trouble disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Voice 2000 Service Centers. If the known working phone does not operate properly, consult with your telephone company.
- When you ship the product**
- Carefully pack your unit, preferably in the original carton.
 - Attach a letter, detailing the symptom, to the outside of the carton.