



BASESET SELFTEST MODE TABLE

			Tx				Rx				VTX	Beep	TXD	Pin-5	10.250MHz
			MUTE	CP	AF	RF	MUTE	CP	AF	RF	Tx-RF	Rx-CP			Rx-AF:1/0=ND/CD Tx-CP:1/0=-/Rx Lock
1	KEY-3	Tx Power (vco Adjust)	1	1	1	0	1	1	1	0	On	-	-	N.D	0x EE
2	KEY-4	Tx DEV.	0	0	0	0	1	1	1	0	On	-	-	RX	0x EE
3	KEY-5	Tx Data	1	1	1	0	1	1	1	0	On	-	On	N.D	0x EE
4	KEY-6	Rx SINAD W/O Tx	1	1	1	1	0	1	0	0	Off	-	-	C.D	0x F4
5	KEY-7	Rx SINAD W/H-Tx	0	1	0	0	0	1	0	0	On	-	-	C.D	0x 44 BAT LED On
6	KEY-8	BeepTone Test	0	1	0	0	1	0	1	0	On	On	-	N.D	0x 44 INTC LED On
	KEY-9	Reserve													
	CHAN	Channel = Channel + 1													

1. Method to Selftest Mode : press FLASH/MEM key at the same time→plug in the battery.
 2. Press first key is KEY 0,1,2 that represent to change channel (01~25) example CH-25:press "2", "5"; CH-03: press "0", "3".
 3. Press "CHAN" key: Channel=Channel+1.
 4. Default Channel: 16(25-CH) or 06 (10-CH).
 5. Press KEY 3,4,5,6,7,8,9, to choose Mode 1 to 7, and reset Channel to default Channel=16 (CH-25) or 06 (CH-10).
 6. Press "TALK" key, and the time when talk LED is light represents entering the DTMF test then the Dial key changes to the number that you want to dial , If you want to return SELFTEST Mode, to press "TALK" key again (TALK LED is not light).
- P.S: must match with Mode-0 of main machine.

BASESET SELFTEST MODE TABLE

		T B 3 1 2 2 3								Lo	Hi	*	Lo	Pin-5	REF CLK
		Tx				Rx				VTX	Hook	TXD	SPON (Linemute)		10.245MHz
		MUTE	CP	AF	RF	MUTE	CP	AF	RF	Tx-RF	Rx-CP			Rx-AF:1/0=ND/CD Tx-CP:1/0=-/Rx Lock	
0	DTMF Test	0	1	0	0	1	1	1	0	On	On	-	Close (No Mute)	N.D	0x 4E
1	Talk Mode	0	1	0	0	0	1	0	0	On	On	-	Close (No Mute)	C.D	0x 44
2	Tx Power (vco)	1	1	1	0	1	0	1	0	On	Off	-	Close (No Mute)	N.D	0x EA
3	Tx DEV.	0	0	0	0	1	1	1	0	On	On	-	Close (No Mute)	RX	0x 0E
4	Tx Data	1	1	1	0	1	0	1	0	On	Off	On	Close (No Mute)	N.D	0x EA
5	Rx Sinad (w/o Tx)	1	1	1	1	0	1	0	0	On	On	On	Close (No Mute)	C.D	0x F4
6	Intercom Tx	0	1	0	0	1	0	1	0	On	Off	-	On (Mute)	N.D	0x 4A INTC-LED On
7	Intercom Rx	1	1	1	0	0	0	0	0	On	Off	-	On (Mute)	C.D	0x E0 INTC-LED On
8	DTMF Dialing	0	1	0	0	1	1	1	0	On	On	-	Close (No Mute)	N.D	0x 4E

1. Enter Selftest Mode→1.>Ringer On/Off switch turn with "Off" 2.>press Page key 3.>Off Cradle.4.>Plug in adaptor and enter MODE-0(DTMF TEST).
2. Press Page Key to change channel, and the order is 20→25→01→07→13→14→15...25,1→25CH
10→05→01→07→03→04→05...10,1→10CH
(P.S: CH=CH+1 wen Mode-0 to match with handset)
3. When Mode 8 press Page Key to do DTMF dialing 1,2,3,4,5,6,7,8,9,*,0,#→after finished the dialing, it automatically return To run Mode 1.(not run Mode-0 again)
4. Default Channel=16(CH-25) or 06(CH-10).
5. Switch the T.P Switch to choose Mode, and reset Channel to default Channel : 16(CH-25) or 06(CH-10).
6. TALK LED: Among the above MODES, if HOOK on then TALK-LED is light , otherwise TALK-LED is dark.

•This specification are subject to be changed without notice.