

[illegible]

Model No:MNP-320

Goodie™

Cordless Mini Phone with Caller ID

900 MHz

60 channels



USER'S GUIDE



1KJ

CHAW KUONG Technologies Corp.
<http://www.cikorp.com.tw>

Tel: 000 9 32002000

0000-0000-0000-0000

NO 29, Wu Chong And Reed Wu Ku Industrial Park
Tainan Hsien, Taiwan

[illegible]

volcanism. 0.3

VOICEDIRECT.COM
Toll-free 1-800-983-8778

1-800-400-0007

www.citibid.com

arvalued@att.net

Letter Street, Santa C

Patented Feb. 23, 1954, U.S.A.

Contents

o Before Initial Use	1
o For Best Performance	2
o Location or Controls	3
o Settings	5
o Making A Call	11
o Receiving A Call	13
o Headset Speakerphone Function	13
o Great Features	14
o Caller ID Function	17
o Battery Replacement	21
o Adding Another Phone	22
o Before Requesting Help	23
o Important Safety Instruction	25
o Other Information	28

Other Information

Some cordless telephone operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, move the cordless telephone further away from the TV or VCR. This will often reduce or eliminate interference.

Privacy of communications may not be ensured when using this phone.

- Environment do not place the unit in room where the temperature is less than 5 degree C (41 degree F) or greater than 40 degree C (104 degree F). Allow 10-cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
- Routine care: wipe the unit with a soft cloth. Do not use benzene, thinner, or any abrasive power. When you leave the unit unused for a long period of time, unplug the AC adapter from the outlet.
- If there is any trouble disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized C2000S Service Centers. If the known working phone does not operate properly, consult with your telephone company.

When you ship the product

- Carefully pack your unit, preferably in the original carton.
- Attach a letter, detailing the symptom, to the outside of the carton.

Before Initial Use

Please read IMPORTANT SAFETY INSTRUCTIONS on pages 25-27 before use. Read and understand all instructions.

Thank you for purchasing your new C2000S Cordless Mini Phone with Caller ID.

Accessories



 
Belt Clip



Telephone Line Cord



Headset

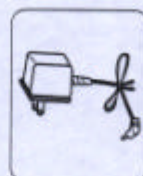


AC Adapter

F or Best Performance

Operating Distance / Noise

 - Calls are transmitted between the base unit and the handset using wireless radio waves.
- For maximum distance and noise free operation, the recommended base unit location is:

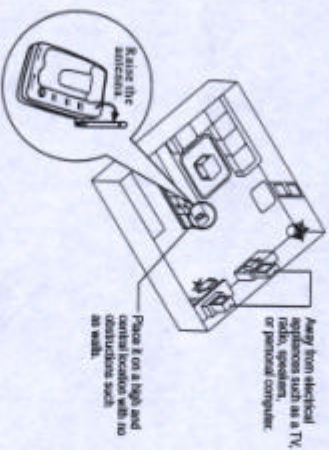

- When the transmission between the base unit and the handset becomes weak during conversation, the handset beeps to warn you that you are about to go out of the transmission range. Move closer to the base unit to avoid disconnection.
- If noise interferes with the conversation, move closer to the base unit.

26

I mportant Safety Instructions

CAUTION

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery (ies) specified.
2. Do not dispose of the battery (ies) in a fire. They explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery (ies). Released electrolyte is corrosive and may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery to conductive materials such as rings, bracelets, and keys. The battery and / or conductor may overheat and cause burns.
5. Charge the battery (ies) provided with or identified for use with this product only in accordance with the instruction and limitations specified in this manual.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE

 
27

I mportant Safety Instructions

11. To reduce the risk on electric shock, do not disassemble this unit. Take the unit to an authorized service center when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the unit is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to an authorized service center when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized service center.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types.
14. Do not use this unit to report a gas leak, when in the vicinity of the leak.


Location or Controls

Handset

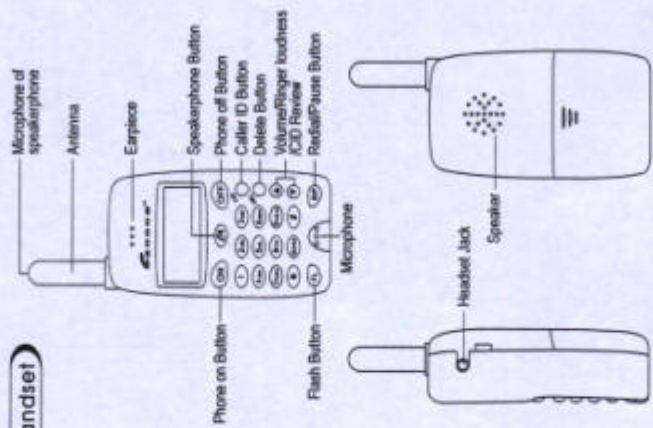

L Location or Controls

 (Base Unit)

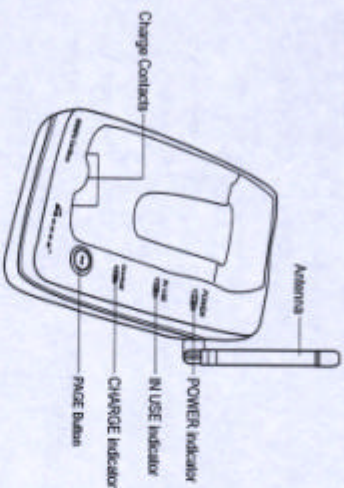

I Important Safety Instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this from AC outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water. For example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and / or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local Power Company.
8. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
9. Do not overload wall outlets and extension cords. This can result in the risk of fire or electric shock.
10. Never push any objects through slots in the unit. This may result in the risk of fire or electric shock. Shock spill any liquid on the unit.


B before Requesting Help

PROBLEM	REMEDY
PAGE does not function.	The handset is too far from the base unit or is engaged in an outside call.
The LCD screen shows BATTERY LOW or the unit beeps intermittently.	Charge the battery fully. (p. 6)
You changed the battery fully, but the LCD screen shows BATTERY LOW.	- Clean the charge contacts and charge again. (p. 7) - Install a new battery. (p. 21)
If you cannot solve your problem.	Call our customer call center at 1-800-952/778(Main Number)

24

S Settings

 Connections

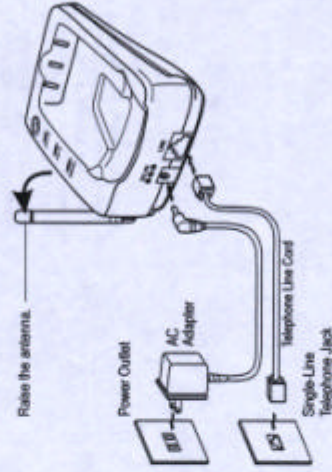


- Use the AC adapter that links with the Phone .
- The AC adapter must remain connected at all time. (It is normal for the adaptor to feel warm during use.)
- To connect a standard telephone on the same line, see page 22.

25

S Settings

Battery Charge

 Place the handset in the base unit either in face-down or face-up position. The battery must be charged for about 12 hours before initial use. The handset beeps and the CHARGE indicator lights up while the battery is being charged.

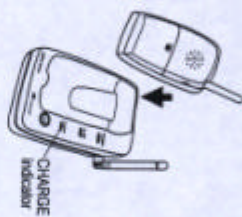

A rechargeable Ni-MH battery powers the handset.



Recharge

In the Off-Hook mode, if the battery voltage is low, the handset LCD will display "BATTERY LOW" and speaker of handset shall beep to inform the user to charge.

Always, handset is in the recharge cradle of base, the charge LED is ON.

65


B Before Requesting Help

PROBLEM	REMEDY
The unit does not work.	• Check the settings. (p. 5-10) • Charge the battery fully. (p. 6) • Clean the charge contacts and charge again. (p. 7) • Place the handset on the base unit and unplug the AC adapter to reset. Plug in, then try again. • Re-insert the handset battery and place the handset on the base unit. Then try again.
An alarm [ong] sounds when you press [ON].	• You are too far from the base unit. Move closer and try again. • Place the handset on the base unit and try again. • Plug in the AC adapter. • Raise the base unit antenna.
Static, sound cuts in / out, fades, interference from other electrical units.	• Locate the handset and the base unit away from other electrical appliances. (p. 2) • Move closer to the base unit. • Raise the base unit antenna.

23

Adding Another Phone

 This unit will not function during a power failure. To connect a standard telephone on the same line, use the T-adaptor.

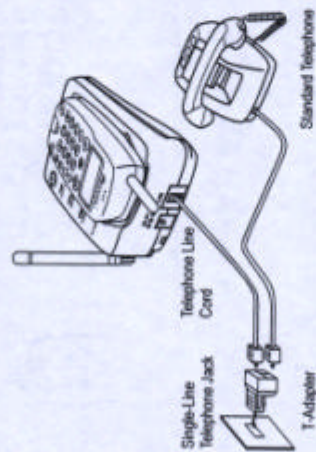

22

Settings

Battery Information

If your battery is fully charged:

Operation	Approx. battery duration
While in use (TALK)	Up to about 5 Hours
While not in use (STAND-BY)	Up to about 4 Days

 
- Battery life may vary depending on usage conditions and ambient temperature.
- Clean the handset and the base unit charge contacts with a soft dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity. If not, the battery may not charge properly.
- If the battery is fully charged, you do not have to place the handset on the base unit until LCD displays BATTERY LOW. This will maximize the battery life.
- The battery cannot be overcharged.

7


S ettings

Using the Belt Clip


You can hang the handset on your belt or pocket using the belt clip.

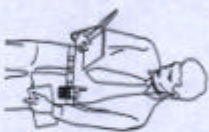

To install the belt clip:

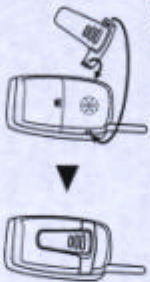 

To remove the belt clip:

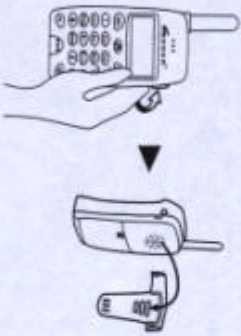 


B attery Replacement

If the LCD shows **BATTERY LOW** and handset beeps at intervals after being fully charged, replace the battery with a new battery.

- Remove the cover by sliding it while pressing the arrow.



 - Replace the battery, then close the cover.
- Be sure to charge the new battery for about 12 Hours.

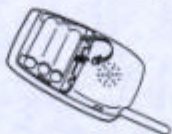

Attention

The product you have purchased is powered by a Ni-Mh battery, which is recyclable. At the end of its useful life, under various state and local laws, it is illegal to dispose of this battery into your municipal waste stream.



Caller ID Function

Caller ID Dialing

- During standby, press **⓪** button, then press **⓪** or **Ⓢ** button to select Caller ID message.
- Press **Ⓢ** button, the LCD screen will show "DUAL NUMBER?"

DUAL NUMBER?
1-315-288-8478
see 30

- Press **Ⓢ** button again to seize line and dial out this Caller ID telephone number.

Ecceive "Private" or "Out of Area" format Caller ID Message

- If incoming "Private" Caller ID message, LCD screen will display "PRIVATE", and new message count will be increased.

PRIVATE
see 1

- If incoming "Out of Area" Caller ID message, LCD screen will display "UNAVAILABLE", and new message count will be increased.

UNAVAILABLE
see 2

20

Settings

 
Using the Headset

Plugging the headset into the handset to provide a handsfree phone conversation.



Connecting the Headset to the Handset

Just simply plug the headset connector into the handset jack as shown.

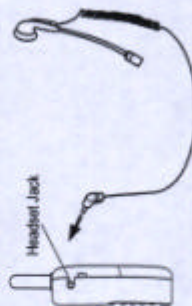


To wear your Headset, just simply put the ear-piece into your ear and make sure the mouthpiece is downward.

21

S Settings

Four Levels Volume Setting

 - During phone on, press the **▲** button or **▼** button to control the volume of the handset's receiver.
- Press **▲** button to increase volume and press **▼** button to decrease volume.

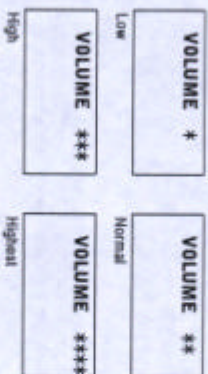

Two Levels Ringer Loudness Setting

- During standby, press the **▲** button or **▼** button to control the ringer loudness.
- Press **▲** button to increase the ringing loudness and press **▼** button to decrease the ringing loudness.

10

C Caller ID Function

Caller ID Message Review

- During standby, press **○** button, then press **▲** or **▼** button to select the entry which you want to cancel.
- Press **○** button, the LCD screen displays "REMOVE ITEM?" for confirmation:

REMOVE ITEM?
1-315-288-8478
*** 30

- Press **○** button to confirm the Caller ID message delete or press **▲** or **▼** button to cancel delete and review next Caller ID message. If **○** button is pressed, cancel this delete and quit the reviewing mode.
- Press and hold **○** button for 3 seconds while Caller ID message review mode to delete all Caller ID message, the LCD screen displays "REMOVE ALL?"

REMOVE ALL?
1-315-288-8478
*** 30

- Press **○** button to confirm the all message delete or press **▲** or **▼** button to cancel delete. If **○** button is pressed, cancel this delete and quit the reviewing mode.

19

Caller ID Function

Caller ID Message Review

- During standby, press  button, the LCD screen will show last Caller ID message.

JOHN SMITH
1-315-288-8478
new 30

- Press  or  button to review other Caller ID message.

The Reviewed Caller ID message will become old message.

18

Making A Call

After initial set up, put handset in the recharge cradle of base for 12 hours to charge the battery

- Pick up the handset and press  button to seize line.
- A word "CONNECTING ..." will be displayed on the LCD and handset will scan a free channel for communication.

CONNECTING . . .

- A word of "CHANNEL XX" (XX is number of communication channel, from "01" to "50") will be displayed on the LCD on the handset.

CHANNEL 58

- Follow to show "LINE IN USE" and it will show the call timer after 15 seconds.

LINE IN USE

00:00:15

- The  LED on the base will be on for on line indication.
- If any digit key is pressed and dialed, the display will show the dialed numbers until press the  button to hang up.

19

Making A Call

Auto Phone On Function

- When you put the handset to recharge cradle and coming ringing, pick the handset up directly, the handset will enter auto phone on mode.

Phone Off Function

- After talk, press **(OFF)** button to hang up or replace the handset to the recharge cradle to auto phone off.
- The unit will automatically release the telephone line and enter standby mode.
- The call timer will be stopped and displayed on handset LCD screen for 10 seconds.

OFF 00:01:36

1 2

Caller ID Function

Incoming Caller and New Caller Indication

- During standby, incoming caller, the LCD will show caller name and caller number, the "NEW" icon will be blinked, too.

JOHN SMITH
1-315-288-8478
NEW 30

- After return to standby mode, the LCD screen will show new received caller ID messages total.

NEW CALLS 30
NEW 30

- Maximum 30 Caller ID messages can be stored, after 30 calls, new received Caller ID messages will replace original Caller ID messages.

1 7

Great Features

Battery Low Indication

- In the Off-Hook mode, if the battery voltage is low, the handset LCD will display "BATTERY LOW" and speaker of handset shall beep to inform the user to charge.
- Always, handset is in the recharge cradle of base, the charge LED is ON.

BATTERY LOW

Out Of Range Warning Indication

- If walk range is too far, the handset will generate an out of range warning tone, and the LCD will display "OUT OF RANGE", user must be nearby base, otherwise the unit will automatically hang up the telephone line and enter standby mode after 20 seconds.

OUT OF RANGE

16

Receiving A Call

- If the handset put in recharge cradle of base, while ringing signal received, pick up the handset from the base will result in auto phone on.
- If handset and base are separate, to answer a call, you must press **(ON)** button to seize line.

Headset Speakerphone Function

- During regular use mode, press **(SP)** button, handset will enter the speakerphone use mode.
- Press **(SP)** button again, handset will return to regular use mode.
- Press **(SP)** button or place the handset in the base to hang up.

13

Great Features

Redial/Pause Function

- Pick up the handset and press **(ca)** button to seize line.
- Then press the **(ce)** button, the LCD screen will show last number you called and the unit will transmit it to telephone line later.
- During standby, dial phone number digit first, then press the **(ca)** button, digits and the "P" character immediately being displayed in the LCD, it means pause function will be performed.

Pre-Dialing Mode to Redial

- During standby, press **(ce)** button first, the redial number will be displayed on LCD screen, the redial number can be edited if press **(O)** button to erase last digit and enter new digits.
- Press **(ca)** button to seize line and dial out this number.

Flash Function

- Use **(ce)** button to activate custom calling services such as Call Waiting or call transfer, which are available through your local phone company.

14

Great Features

Handset Locator

You can locate the handset or page the handset user with beep tones.

- During standby, press **(ca)** button on the base to locate a missing handset.
- The handset beeps.
- Press **(ca)** button on base or any button except **(ce)** on handset to cancel the repeating page signal.

Pre-Dialing Phone Number

- During standby, enter phone number through keypad.
- If wrong digit is entered, press **(O)** button to erase previous entries.

123-456-789-000

- Press **(ca)** button to seize line and dial out the pre-dialing phone number.

15