

Quix

USER'S MANUAL FOR NUMERIC DISPLAY PAGER


¶ This device complies with part 15 of the FCC Rules.

Operation is subject to the condition that this device does not cause harmful interference.

⚠ Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


1. FUNCTION OF THE BUTTONS
2. ICONS DESCRIPTION ON LCD
3. FUNCTION SELECTION AND DISPLAY IN SEQUENCE
4. VIBRATION(SILENT)/BEEP/MELODY 1,2 SELECTION
5. POWER ON/OFF SELECTION
6. MESSAGE CHECKING (LOCK/UNLOCK/INDIVIDUAL CLEAR)
7. ALL MESSAGE CLEAR (EXCEPT LOCKED MESSAGE)
8. A DAY OF THE WEEK AND TIME ADJUSTMENT
9. ALARM ON/OFF SELECTION
10. AUTOMATIC POWER ON/OFF SELECTION
11. OTHER MAIN DISPLAYS
12. HOW TO REPLACE BATTERY

1. FUNCTION OF THE BUTTONS

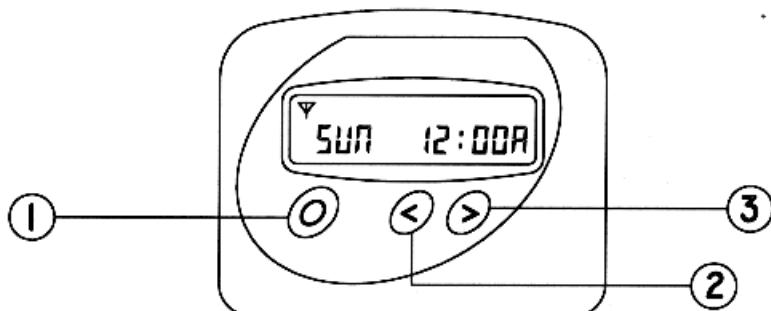

- ① (0) (READ BUTTON) : FOR READING MESSAGES AND SETTING CONDITIONS ON LCD.
- ② (◀) (FUNCTION BUTTON) : FOR SELECTING MENU, CHANGING DIGITS, (UN)LOCKING MESSAGES AND SELECTING INDIVIDUAL MESSAGE CLEARING.
- ③ (▶) (SELECTION BUTTON) : FOR SELECTING FUNCTIONS, MOVING AND OPERATING LAMPS.


2. ICONS DESCRIPTION ON LCD

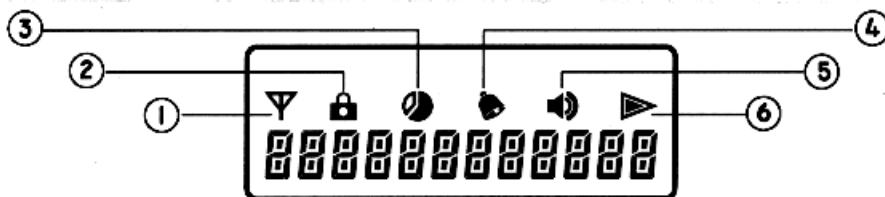

- ① SERVICE AREA INDICATION ()
- ② RECEIVED MESSAGE(S) LOCKING INDICATION ()
- ③ AUTOMATIC ON/OFF SELECTION INDICATION ()
- ④ MORNING CALL INDICATION ()
- ⑤ PAGING SOUND(MELODY) SELECTION INDICATION ()
⇒ (TAKING FADE-OUT IN VIBRATION)
- ⑥ MESSAGE EXTENTION INDICATION ()

3. FUNCTION SELECTION AND DISPLAY IN SEQUENCE

 ① CURRENT TIME(STARTING STAGE) DISPLAY



② VIBRATION/PAGING SOUND SELECTION DISPLAY



③ POWER ON/OFF SELECTION DISPLAY



④ ALL MESSAGES CLEARING SELECTION DISPLAY



⑤ TIME AND A DAY OF THE WEEK SELECTION DISPLAY



 
⑦ ALARM OFF SELECTION DISPLAY




⑥ ALARM ON SELECTION DISPLAY



⑨ AUTOMATIC POWER OFF SELECTION DISPLAY



⑧ AUTOMATIC POWER ON SELECTION DISPLAY

 

** IF YOU PUSH BUTTON EACH ONE TIME IN ①, ABOVE FUNCTIONS WILL BE DISPLAYED IN SEQUENCE.


IF YOU PUSH BUTTON DURING ABOVE FUNCTIONS, DISPLAY WILL BE RETURNED TO ①, CURRENT TIME.

4. VIBRATION(SILENT)/BEEP/MELODY 1 /MELODY 2 SELECTION

- ① IN CURRENT TIME(STARTING STAGE), PUSH  BUTTON ONE TIME. IF YOU PUSH  BUTTON ONE TIME, "SILENT" WILL BE DISPLAYED AND VIBRATION WILL BE OPERATED FOR A FEW SECONDS. IF YOU PUSH  BUTTON, VIBRATION FUNCTION WILL BE SELECTED AND CURRENT TIME(STARTING STAGE) WILL BE DISPLAYED.
- ② IN THE FIG. ①, IF YOU PUSH  BUTTON TWO TIMES, "BEEP" WILL BE DISPLAYED ON LCD AND YOU CAN HEAR BEEP SOUND. IF YOU PUSH  BUTTON, BEEP SOUND WILL BE SELECTED AS PAGING SOUND AND CURRENT TIME (STARTING STAGE) WILL BE DISPLAYED.
- ③ IN THE FIG. ①, IF YOU PUSH  BUTTON THREE TIMES, "MELODY 1" WILL BE DISPLAYED AND YOU CAN HEAR MELODY. IF YOU PUSH  BUTTON, CURRENT TIME(STARTING STAGE) WILL BE DISPLAYED AND "MELODY 1" WILL BE SELECTED AS PAGING SOUND.
- ④ IN THE FIG. ①, IF YOU PUSH  BUTTON FOUR TIMES, "MELODY 2" WILL BE DISPLAYED AND YOU CAN HEAR MELODY. IF YOU PUSH  BUTTON, "MELODY 2" WILL BE SELECTED AS PAGING SOUND AND CURRENT TIME(STARTING STAGE) WILL BE DISPLAYED.



5. POWER ON/OFF SELECTION

- ① IN THE CURRENT TIME(STARTING STAGE), PUSH  BUTTON TWO TIMES.
- ② IF YOU PUSH  BUTTON ONE TIME, POWER TURNS OFF (AT THIS TIME, PAGER CAN'T RECEIVE MESSAGE AND TIME ONLY WILL BE DISPLAYED.).
- ③ TO TURN POWER ON, PUSH  BUTTON IN THE FIG.② (POWER OFF) AND DISPLAY WILL BE RETURNED TO CURRENT TIME(STARTING STAGE).

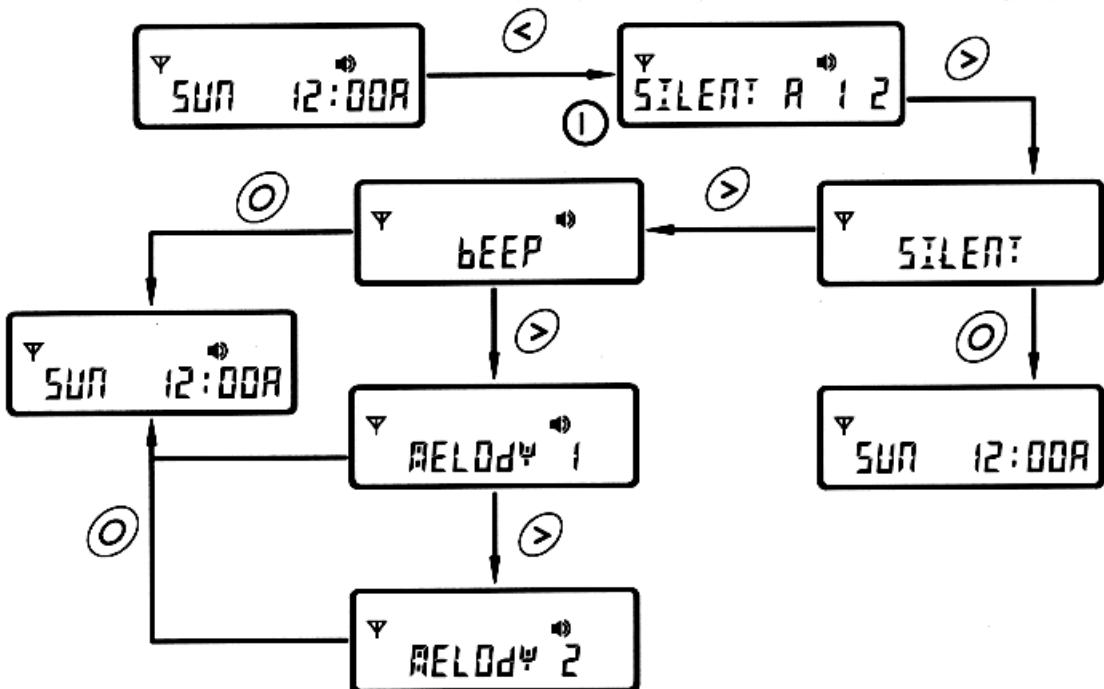


6. MESSAGE CHECKING (LOCKING/UNLOCKING/INDIVIDUAL CLEARING)

- ① IN CURRENT TIME(STARTING STAGE), IF YOU PUSH  BUTTON ONE TIME, RECEIVED TIME, ADDRESS, AND CALL TYPE OF THE MESSAGE WILL BE DISPLAYED.
- ② IN THE FIG. ①, IF YOU PUSH  BUTTON ONCE MORE, THE RECEIVED MESSAGE WILL BE DISPLAYED AND KEEP THE  BUTTON PUSHING ON, READING MESSAGES WILL BE DISPLAYED CONTINUOUSLY (AT THIS TIME, IF THE RECEIVED MESSAGES ARE OVER 13 DIGITS, "►" WILL BE DISPLAYED AND THE MESSAGE WILL BE EXTENDED BY PUSHING  BUTTON)
- ③ IN THE FIG.②, IF YOU PUSH  BUTTON ONE TIME, MESSAGE WILL BE LOCKED AND "" WILL BE DISPLAYED. AT THIS TIME, IF YOU PUSH  BUTTON FOR OVER TWO SECONDS CONTINUOUSLY, MESSAGE WILL BE CLEARED AND THE NEXT MESSAGE WILL BE DISPLAYED BY PUSHING  BUTTON.
- ④ IN THE FIG.③, IF YOU PUSH  BUTTON ONCE MORE, LOCKING WILL BE RELEASED AND AT THE SAME TIME, NORMAL MESSAGES WILL BE STORED. AT THIS TIME, IF YOU PUSH  BUTTON FOR OVER TWO SECONDS, MESSAGE WILL BE CLEARED AND IF YOU PUSH  BUTTON, THE NEXT MESSAGE WILL BE DISPLAYED.
- ⑤ AFTER CHECKING ALL RECEIVED MESSAGES, IF YOU PUSH R BUTTON, YOU CAN HEAR BEEP SOUND AND CURRENT TIME (STARTING STAGE) WILL BE DISPLAYED.

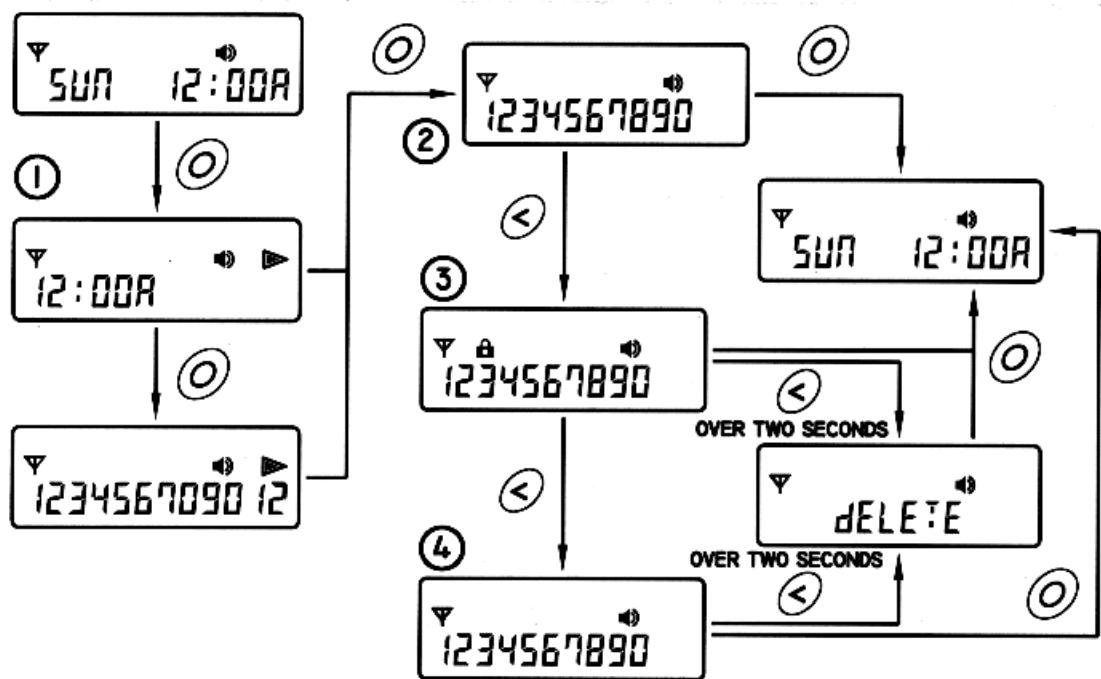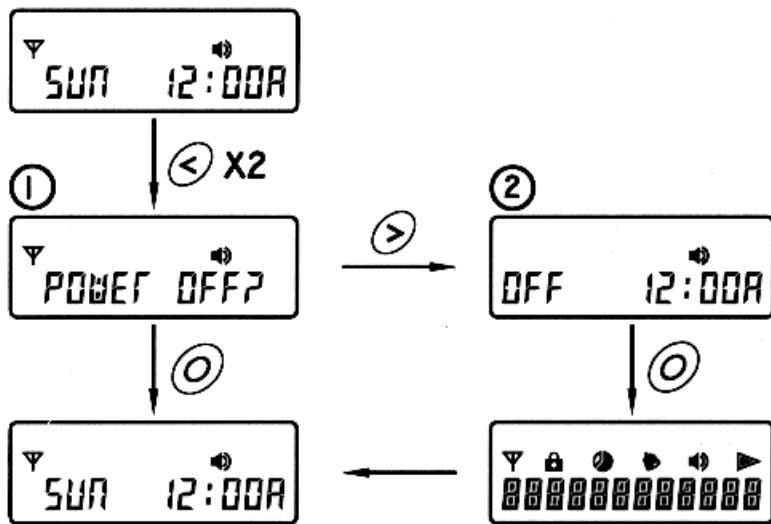


7. ALL MESSAGES CLEARING (EXCEPTING THE LOCKED MESSAGE)

- ① IN THE CURRENT TIME(STARTING STAGE), PUSH  BUTTON THREE TIMES.
- ② IN THE FIG.①, IF YOU PUSH  BUTTON ONE TIME, ALL RECEIVED MESSAGES WILL BE CLEARED AND CURRENT TIME(STARTING STAGE) WILL BE DISPLAYED.
(EVEN AT THIS TIME, THE LOCKED MESSAGE WON'T BE CLEARED. USE LOCKING FUNCTION FOR NECESSARY MESSAGE PRIOR TO CLEARING).

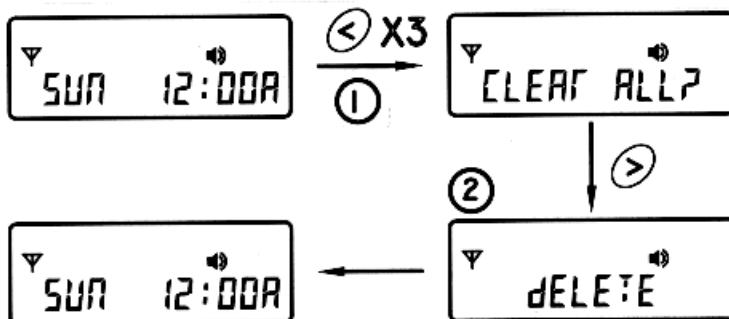

8. A DAY OF THE WEEK AND TIME ADJUSTMENT

- ① PUSH  BUTTON FOUR TIMES IN CURRENT TIMES(STARTING STAGE).
- ② IF YOU PUSH  BUTTON ONE TIME IN THE FIG.①, A DAY OF THE WEEK WILL BE BLINKING IN THE FIG.②.
AT THIS TIME, YOU CAN CHANGE DIGITS WITH  BUTTON AND CAN ADJUST DISPLAY WITH  BUTTON BY MOVING.
- ③ AFTER ADJUSTMENT, IF YOU PUSH  BUTTON, ADJUSTED TIME AND THE DAY OF THE WEEK WILL BE DISPLAYED.

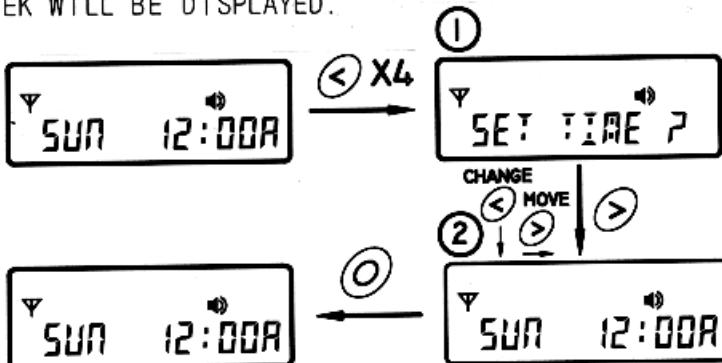

9. ALARM ON/OFF SELECTION

- ① IN CURRENT TIME(STARTING STAGE), PUSH  BUTTON FIVE TIMES.
- ② IN THE FIG.①, IF YOU PUSH  BUTTON ONE TIME, THE FIG.② WILL BE DISPLAYED.
AT THIS TIME, YOU CAN CHANGE DIGITS WITH  BUTTON AND CAN ADJUST THEM WITH  BUTTON BY MOVING.
AFTER ADJUSTMENT, IF YOU PUSH  BUTTON, ALARM WILL BE ON AND CURRENT TIME(STARTING STAGE) WILL BE DISPLAYED.
(IN POWER OFF OR AUTOMATIC POWER ON/OFF, YOU CAN ALSO DO IT.)
- ③ IN THE FIG.①, IF YOU PUSH  BUTTON ONCE MORE AND PUSH  BUTTON, ALARM WILL BE OFF AND CURRENT TIME(STARTING STAGE) WILL BE DISPLAYED.

** IN ALARM, YOU CAN HEAR BEEP SOUND FOR 30 SECONDS.
(IF YOU WANT TO STOP ALARMING, PUSH ANY BUTTON ON YOUR PAGER).



10. AUTOMATIC POWER ON/OFF SELECTION

- ① IN CURRENT TIME (STARTING STAGE), PUSH  BUTTON SEVEN TIMES.
- ② IF YOU PUSH  BUTTON ONE TIME, SELECTION CONDITION WILL BE AUTOMATIC POWER ON/OFF.
- ③ IN THE FIG.②, YOU CAN CHANGE DIGITS WITH  BUTTON AND CAN AMEND THEM WITH  BUTTON BY MOVING. AFTER AMENDMENT, IF YOU PUSH  BUTTON, AUTOMATIC POWER ON/OFF CONDITION WILL BE SELECTED AND CURRENT TIME(STARTING STAGE) WILL BE DISPLAYED.

EXAMPLE

 : IN CASE YOU WANT TO SELECT TIME LIKE THE FIG.②, POWER WILL TURN OFF AT TWELVE O'CLOCK NIGHT AND TURN ON AT SIX O'CLOCK MORNING.
(THE PAGER CAN'T RECEIVE MESSAGE DURING POWER TURNS OFF AND ONLY TIME WILL BE DISPLAYED.)

- ④ IN THE FIG.①, IF YOU PUSH  BUTTON ONCE MORE AND PUSH  BUTTON, AUTOMATIC POWER ON/OFF WILL BE CANCELED AND DISPLAY WILL TURN TO CURRENT TIME (STARTING STAGE).

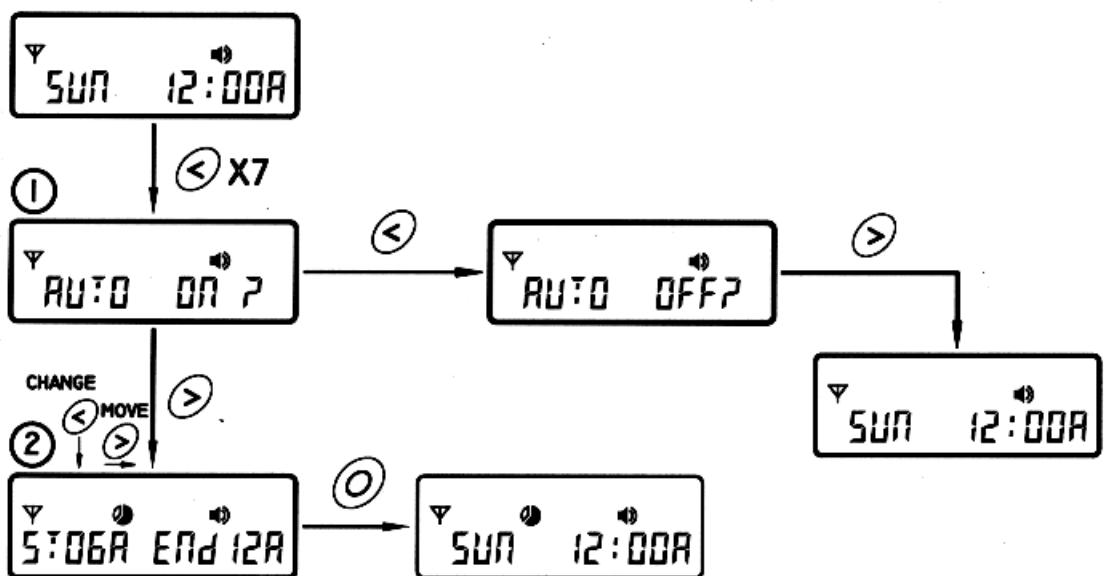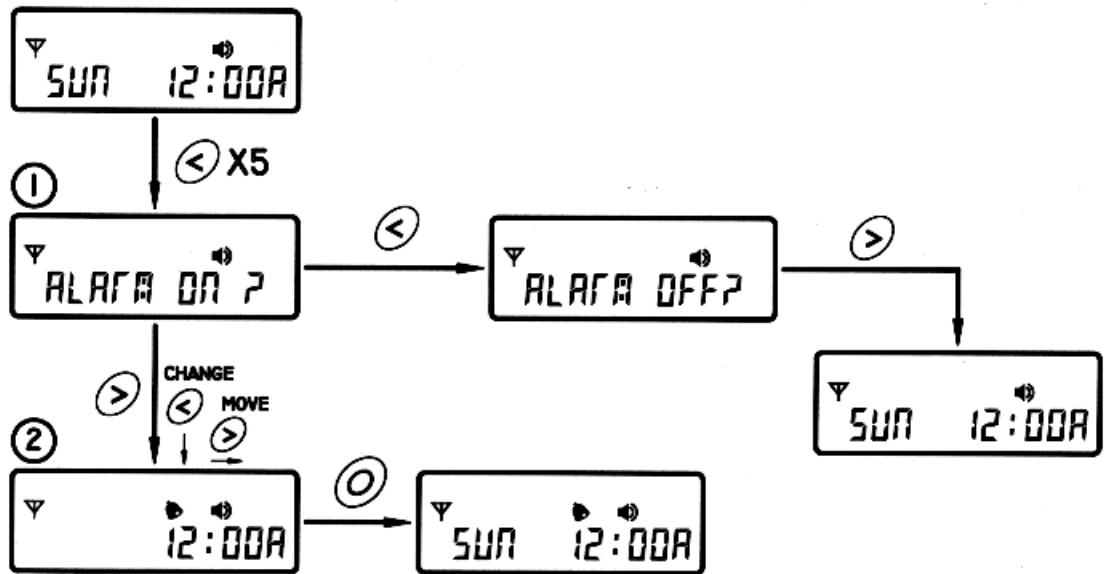

11. OTHER MAIN DISPLAYS

① LOW VOLTAGE ALARMING


(SHORT ALERTING SOUND/VIBRATION PER 60 MINS.)

---PLEASE CHANGE BATTERY TO NEW ONE.



② DUPLICATE MESSAGE RECEIVING
→THE LATEST RECEIVED TIME,
ADDRESS AND CALL TYPE
(A,B,C AND D) ARE DISPLAYED.

③ DUPLICATE MESSAGE LOCKING.

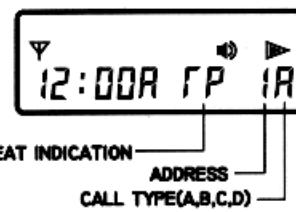

④ PAGING BY PULSE DIAL TELEPHONE OR PAGING WITHOUT MESSAGE.

⑤ NONE RECEIVED MESSAGE.



⑥ UNREAD MESSAGE.



⑦ THE LOCKED MESSAGES ARE OVER 10.



12. HOW TO REPLACE BATTERY

- ① DURING REPLACING BATTERY, ALL UNLOCKING MESSAGES SHOULD BE CLEARED. SO REPLACE BATTERY AFTER "LOCKING" NECESSARY MESSAGES.
- ② IN LOW VOLTAGE, ALERT SOUND (SHORT ALERT SOUND/VIBRATION PER ONE HOUR) WILL COME OUT AND "LOW BATTERY" WILL BE SHOWN ON LCD. IN THIS TIME, REPLACE BATTERY AT ONCE.
- ③ WHEN YOU REPLACE BATTERY, PUSH THE BATTERY LOCKING TAB BACK SIDE OF THE PAGER TO ARROW DIRECTION AS FIG. ①.
- ④ SLIDE THE BATTERY DOOR UNTIL IT IS COMPLETELY FREE FROM THE HOUSING AND THE BATTERY IS EXPOSED AS FIG. ②.
- ⑤ ORIENT NEW AAA-SIZE BATTERY SO THAT THE " + " AND " - " MARKING MATCH THE DIRECTION OF THE POLARITY MARKING EMBOSSED ON THE BATTERY COMPARTMENT AS FIG. ③ AND INSERT NEW BATTERY.
- ⑥ ALIGN THE GROOVES ON THE BATTERY DOOR WITH THE GROOVES ON THE FRONT AND BACK HOUSING. SLIDE THE BATTERY DOOR UNTIL IT IS FULLY CLOSED AND POSITIVE CLICK IS HEARD.

