

Table of Contents

1. Overview.....	3
2. Safety instruction.....	3
2.1 Right Place.....	3
2.2 Battery.....	4
2.3 Alternating Current.....	4
2.4 Using Tablet.....	4
3. Getting started.....	5
3.1 Getting to know you Tablet	5
3.2 Power on and off.....	6
3.3 Using the touch screen.....	7
3.4 Battery and charging	10
3.5 Crate shortcut icon on the home page.....	13
3.6 Delete shortcut icon from the homepage	14
3.7 Add to Home Screen Setting.....	14
4. More: Icon style, change application icon.....	16
4.1 Application install and uninstall.....	16
4.2 Wireless & networks.....	18
5. Webcam:	20
5.1 Taking pictures.....	21
5.2 Taking videos.....	21

6. Music Player	21
6.1 Playing Videos.....	23
6.2 Viewing your pictures.....	24
6.3 File Manager.....	25
6.4 Recording.....	26
7. Settings	27
7.1 Wireless & networks.....	27
7.2 Sound	29
7.3 Display.....	31
7.4 Location & security settings.....	31
7.5 Application.....	32
7.6 Accounts & sync.....	32
7.7 Privacy	32
7.8 Storage	33
7.9 Language & keyboard settings.....	33
7.10 Voice input & output.....	34
7.11 Date & time.....	34
7.12 About device	34
FCC STATEMENT	35
RF warning statement:.....	36

1. Overview

- ◆ CPU: A10 Cortex A8 1.2 GHz (Up to 1.5 GHz)
- ◆ Android 4.0.4 OS
- ◆ GPU: GC800, Mali400 Graphic Processor. Built in Graphic 2D/3D.
- ◆ Display: 8" (4:3) 1024*768, Support 3D
- ◆ Capacitive Five point touch screen.
- ◆ RAM: 1GB DDR3; 8GB SSD Storage Memory;
Micro SD Card Expansion Slot Up to 32 GB
- ◆ Support 2160P super HD.
- ◆ Video Format: MKV, AVI, RM, RMVB, MP4, MOV, DAT, FLV, 3GP
- ◆ Picture format: JPG, JPEG, BMP, GIF.
- ◆ Music format: MP3, WMA, OGG, APE, FLAC, AAC, WAV.
- ◆ Camera: 2MP (Front) 5MP (Back)
- ◆ Support the wired network.

2. Safety instruction

2.1 Right Place

- a. The tablet is not waterproof and cannot be used underwater. If you accidentally drop the tablet into water, wipe off any water droplets with a dry cloth.
- b. Do not leave the tablet in excessive heat such as in a car or in direct sunlight. High temperatures can cause the

tablet to malfunction.

c. Please keep the tablet clean. Dust could cause tablet to malfunction.

d. Do not leave the tablet near anything having a strong magnetic field or leaving the tablet near anything emitting strong radio waves.

2.2 Battery

a. Please only use Tablet AC adapter to charge your Tablet tablet.

b. Do not use tablet near fire source. The fire could cause battery explosion.

2.3 Alternating Current

a. Do not use damaged plug to charge your tablet. It may cause electric shock.

b. Please do not touch the power plug with wet hand. It may cause electric shock.

c. Please use the tablet in proper voltage and current. Improper voltage and current will damage the tablet.

2.4 Using Tablet

a. Please use proper computer cleaning material to clean tablet. Make sure the tablet is dry before turning on the power.

b. If the LCD touch screen gets broken, please carefully avoid the liquid which can leak from the screen. If this liquid mercury gets on you, please use water to clean it or consult with a doctor.

c. Please avoid anything with sharp end to touch the screen. Sharp end will scratch the screen.

d. Please do not put heavy pressure on the screen. It may break or damage the screen.

e. Please do not take apart or repair the tablet. This may void the warranty. Bring the tablet to a service center if necessary.

3. Getting started

3.1 Getting to know you Tablet



No.	Button	Function
1	POWER Button	Short press for application functions menu Long press for power on and off.
2	Home Button	Short press to return to previous page. Long time Press will shows recent applications used on the tablet.
3	Menu Button	Short press will see the function menu,you can choose what

		function you need
4	ESC Button	Return to previous page
5	Camera	2MP (Front)
6	MIC port	Microphone
7	Headphone port	Headphone port
8	HDMI port	Support 2160P HD video
9	TF card slot	TF card slot
10	Mini USB	Mini 5 Pin USB
11	DC port	5V DC port

3.2 Power on and off.

a. Power on

Press and hold power button for 5 seconds, the tablet will turn on. Touch and slide up to lock on the bottom of the screen  to unlock the touch screen.




b. Power off

When the tablet is on, press and hold the power button for 3 seconds, a shut down window will appear on the screen. Click on "Yes" the tablet will power off.

3.3 Using the touch screen


a. Swipe

To scroll a webpage, or move between pictures, use the finger to touch the screen and slide up and down or right and left.

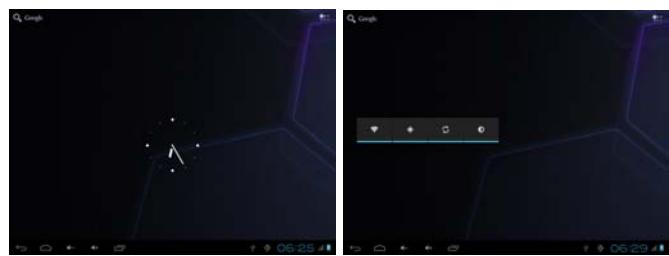

b. Pinch

To zoom in and out of a webpage, or a picture, touch the screen with two fingers pinch them together or apart.

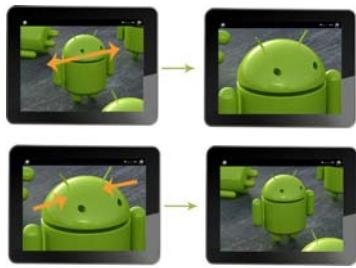

c. Drag

To move something from one place to another, touch and hold the item you want to move, slide your finger to position where you want to put it.



3.4 Battery and charging

For the first time, charge the battery for 8-12 hours. When battery is low, a low battery icon appears in the top right of the screen.



When the battery falls below 15%, this message appears on the screen.



How to charge battery

- a. Connect Tablet to a power adapter.
- b. On the right top corner, the screen will display the flashing battery picture as below.



- c. When finish charging, the screen will display a full battery picture.



- d. When the battery falls below 15%, it will takes 4-5 hours to finish charge.

Status bar icons and indicators

Icon	What is mean	图标	功能说明
	Go back to home page		New external device connect
	Wi-Fi Signal		calendar
	Shows the battery level or charging status.		Time
	Volume down		Volume up
	Back function		Menu
	Google search		Go to application page
	Play Videos		Music player
	File manager		Recorder
	Internet Browser		Clock

	Calculator		Settings

3.5 Crate shortcut icon on the home page

Go to the application page, press and hold the application icon for 5 seconds. The icon will appear on the home page.



3.6 Delete shortcut icon from the homepage

Press and hold the shortcut icon for 5 seconds. When the “” logo change to Recycle Bin , drag the  icon to the Recycle Bin logo. After the icon change to red color, release it. The icon deleted.

3.7 Add to Home Screen Setting

A: Press the home page for 3 seconds, a menu will appear on the screen.

Shortcuts: Could put all application's shortcut to home page.

Widgets: Widgets let you check email, flip through a calendar, play music, check social streams, and more — right from the home screen, without having to launch apps. Widgets are resizable, so you can expand them to show more content or shrink them to save space.


Folders: New home screen folders offer a new way for you to group your apps and shortcuts logically, just by dragging one onto another. Also, in All Apps launcher, you can now simply drag an app to get information about it or immediately uninstall it, or disable a pre-installed app.

Wallpapers: Setting wallpaper as Live wallpapers, Super-HD Player or Wallpapers.

B: Click on the top right of the homepage  a window with a menu will display on bottom of the screen.



- 1.Add: Add to Home Screen
- 2.Manage apps: Manage applications.
- 3.Wallpaper: Set wallpaper for homepage.
- 4.Search: Open Google browser.
- 5.Notifications: Will shows the applications runing on the tablet list.

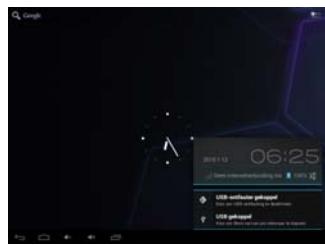

4. More: Icon style, change application icon

Settings, go to settings.

4.1 Application install and uninstall.

4.1.1 install: click on install go to install page.

After install, a small window appears on the bottom with two buttons. One is "Open" for open the application, the other is "Finished" for go back function. After install, there is an icon shows on the application page.

4.1.2 Uninstall

Go to application page, click on menu logo  on the top of the right corner.
Chose manage apps.



Click on the application icon which want to uninstall.




Click on uninstall button. The application uninstalled.

4.2 Wireless & networks

Connect With Internet

Tablet tablet can connect to the internet by using Wi-Fi. Go to Settings > Wireless & Networks > Wi-Fi Setting.

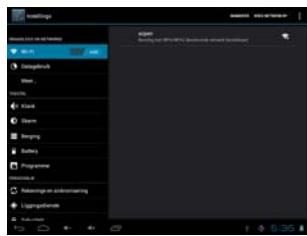

Make sure turn on Wi-Fi first, then select Wi-Fi Setting.



On the drop-down list, select the network and type your router password.

5. Webcam:

The Tablet has 2 megapixel front-facing webcam. Click on the  icon to start.

5.1 Taking pictures.

Tap  logo to take a quick picture. Click on right side menu will shows more camera options.


5.2 Taking videos.

Tap  logo to record videos.

6. Music Player

Tablet support most of the popular types of audio formats, including MKV、AVI、RM、RMVB、MP4、MOV、VOB、DAT、FLV、3GP. Plug in your headphones, use the built-in Stereo speakers, or hook up your tablet to a home entertainment system using HDMI for some serious sound.

Tap on the top right corner  logo to open your music list.

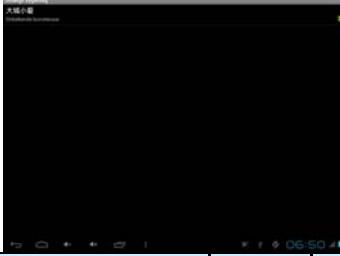

Buttons	Functions	Buttons	Functions
	Random plan		Search music online
	Repeat play		Back
	Play/Stop		Next

6.1 Playing Videos

Tablet support supper HD 2160P videos in a variety of video formats, such as MKV、AVI、RM、RMVB、MP4、MOV、VOB、DAT、FLV、3GP. With Tablet, watch supper high-resolution videos wherever you go.




Buttons	Functions	Buttons	Functions
	Back		Next
 	Play/Stop		Video format 16: 9 /4: 3
	Exit video player		More video options menu.
	Volume down		Volume up

6.2 Viewing your pictures

3.2 Viewing your pictures
Tablet support BMP, JPG, JPEG, PNG pictures format. Tablet tablet is the perfect way to take you pictures with you and share them with friends and family on a high-resolution screen.



6.3 File Manager

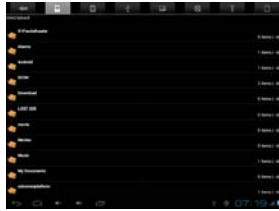

Click on  File manager logo to start manage your file.

Manage three types of memory in this tablet.

Storage memory

SD card memory

External storage

1. The name "sdcard" is storage memory file.

2. The name "extern_sd" is card memory file.


3. The name "usbhost1" is external storage file.

File manager features.


* Operate files (Copy, Paste, Cut/Move, Create, Delete and Rename, Share/Send) in the phone and computers.

* Multi select files
* Application manager -- Manage apps (Install, Uninstall, Backup, Shortcuts, Category)
* View Different file formats, photos, docs, videos anywhere, support third party applications such as Document To Go to open document files

6.4 Recording.

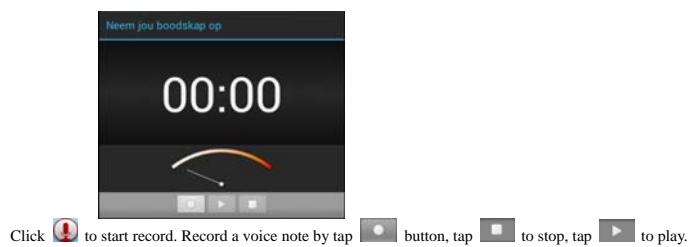


7. Settings

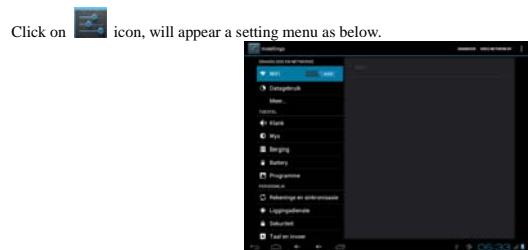

7.1 Wireless & networks

Connect With Internet

Tablet tablet can connect to the internet by using Wi-Fi. Go to Settings > Wireless & Networks > Wi-Fi Setting.

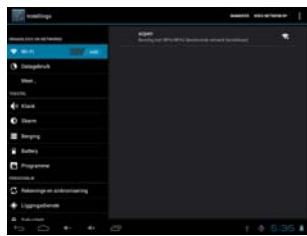

Make sure turn on Wi-Fi first, then select Wi-Fi Setting.



On the drop-down list, select the network and type your router password.


7.2 Sound

Click on “Sound” to go to sound setting.



- A: Silent mode: Silence all sounds except media & alarms
- B: Volume: Notifications
- C: Notification ringtone: Feedback
- D: Audible selection: Play sound when making screen selection
- E: Screen lock sounds: Play sounds when locking and unlocking the screen.
- F: Haptic feedback: Vibrate when pressing soft keys and on certain UI interactions.

7.3 Display

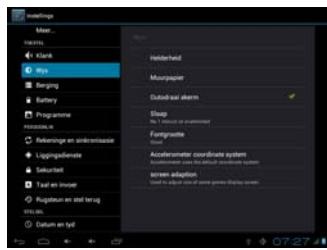

A: Brightness
B: Auto-rotate screen
C: Accelerometer coordinate system: Accelerometer uses a special coordinate system, for some games.
D: Animation: All window animations are shown
E: Screen timeout: Adjust the delay before the screen automatically turns off.
F: Screen adaption: Used to support some of the low-resolution games.

7.4 Location & security settings

A: Use wireless networks: See location in applications (such as Maps) using wireless networks.
B: Set up screen lock: Lock screen with a pattern, PIN, or password.

- C: Visible passwords: Show password as you type.
- D: Select device administrators: Add or remove device administrators.
- E: Use secure credentials: Allow applications to access secure certificates and other credentials.
- F: Install from TF card: Install encrypted certificates from TF card.
- G: Set password: Set or change the credential storage password.
- H: Clear storage: Clear credential storage of all contents and reset its password.

7.5 Application

- A: Unknown sources: Allow installation of non-Market applications.
- B: Manage applications: Manage and remove installed applications.
- C: Running services: View and control currently running services.
- D: Storage use: View storage used by applications.
- E: Development: Set options for application development.
- F: Hidden google application: Become effective after restart.

7.6 Accounts & sync


- A: Background data: Applications can sync, send, and receive data at any time.
- B: Auto-sync: Applications sync data automatically

7.7 Privacy

- A: Back up my data: Back up application data, Wi-Fi passwords, and other settings to Google servers.
- B: Automatic restore: If I reinstall an application, restore backed up settings or other data
- C: Factory data reset: Erases all data on device.

7.8 Stoorage

To check the TF card space, Total space, Available space.

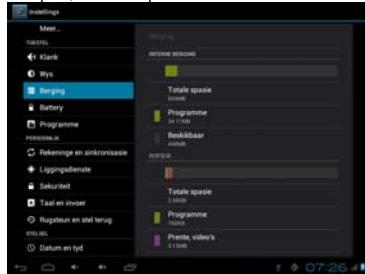

7.9 Language & keyboard settings

A: Select language: Chose a language to setting you tablet.
B: Android keyboard: Setting for keyboard.
Vibrate on keypress.
Sound on keypress.
Popup on keypress.
Touch to correct words: Touch entered words to correct them.

Auto-capitalization.
Show settings key: Automatic.
Voice input: Mic on main keyboard.
Input languages: Slide finger on spacebar to change language.
Quick fixes: Corrects commonly typed mistakes.
Show suggestions: Display suggested words while typing.
Auto-complete: Spacebar and punctuation automatically insert highlighted word.
C: EasyInput InputMethod: EasyInput InputMethos settings.

7.10 Voice input & output

A: Voice recognizer settings
B: Text-to-speech settings

7.11 Date & time

A: Automatic: Use network-provided values
B: Select time zone
C: USE 24-hour format
D: Select date format

7.12 About device

Shows Tablet device basic information
Model number: MID-A10
Android version 4.0
Baseband version 2.0
Kernel version

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.