



BATTERY INSTALLATION

- 1) Turn the ON/OFF SWITCH to the OFF position.
- 2) Open the BATTERY COVER by sliding it toward the bottom of the unit.
- 3) Snap a 9V battery firmly to the battery connector inside the compartment, replace the BATTERY COVER, Alkaline battery is recommended for longer operating time.

TO OPERATE

- 1) Turn the ON/OFF SWITCH to ON position. Continue to turn the control in the counter clockwise direction until a rushing sound is heard.
- 2) To transmit, press the "PUSH TO TALK" button with the microphone at about 4" from your mouth, Speak in a normal voice.
- 3) To receive, release the "PUSH TO TALK" button.
- 4) To transmit code, depress the "PUSH TO TALK" button and tap the CODE KEY to produce the desired coded characters.
- 5) To switch off the unit, turn the ON/OFF volume control in the clockwise direction until a click is heard.

CARE AND MAINTENANCE

- 1) If your walkie talkie does not operate properly, try a new battery.
- 2) Your walkie talkie has been factory adjusted prior to shipment. Do not attempt to open the unit other than replacing the battery.
- 3) Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
- 4) Avoid leaving your unit in direct sunlight or in hot, humid, or dusty places.
- 5) Keep your unit away from heating appliances.
- 6) Never dispose batteries in fire, as they will explode.
- 7) Never attempt to recharge ordinary batteries.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS