


# LONG RANGERS WALKIE TALKIE

## How to Use Your Walkie Talkie:

- To access the battery compartment, use a screwdriver to remove the screw for each walkie talkie. Place a 9-volt battery in the compartment.
- Depending on your preference, turn the HI/LO/OFF switch to VOLUME LOW or VOLUME HIGH. You can now operate your walkie talkies.
- Press the PUSH-TO-TALK switch to transmit your message. Release the PUSH-TO-TALK switch to hear your partner's message.
- Hold the walkie talkie approximately 3 inches from your mouth and speak clearly to transmit your message. Never shout into your walkie talkie.
- For the best transmission. Keep the antenna in a vertical position. To use MORSE CODE features: You must hold down the TALK button while you press the MORSE CODE button located on the front of the unit. You can press the MORSE CODE button in the sequences shown on the MORSE CODE Chart.

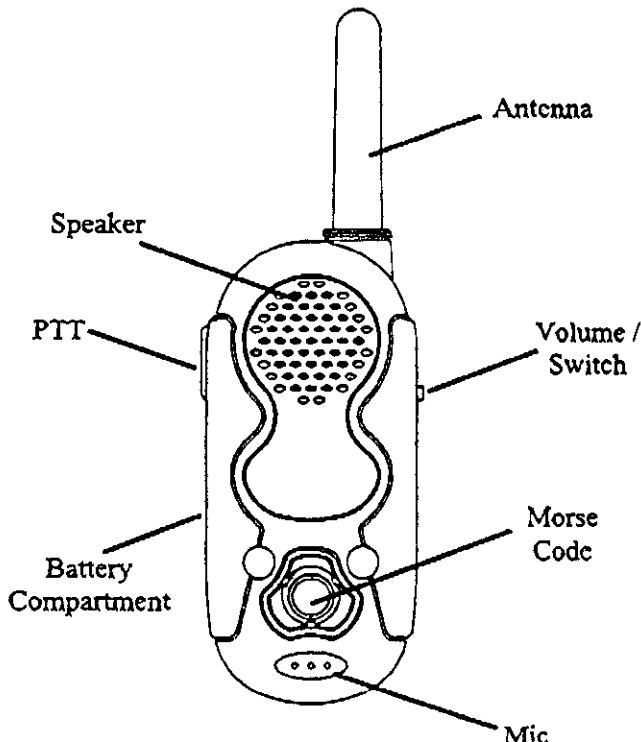

## Caution:

- Do not tamper with the inside components of your walkie talkie - this could cause improper function.
- When it becomes difficult to hear your walkie talkie partner, change your walkie talkie battery.
- After using your walkie talkie, always turn the HI/LO/OFF switch to the OFF position.
- Store your walkie talkie in a clean, dry place.
- In certain location, broadcast qualities may result in shorter walkie talkie transmission distance and static may occur.

**WARNING:**  
CHOKING HAZARD-Small parts.  
Not for children under 3 years.  
This is not a Toy.

 **COLUMBIA**  
TELECOMMUNICATIONS GROUP, INC.

Printed in China

150-868US-01

## BATTERY INSTALLATION INSTRUCTION


### Battery Installation

Battery is not included with your Long Ranger Walkie Talkie. To use the product, you must install 9V battery.

Caution: incorrect positioning of the battery can damage both the battery and the unit.

#### To install the battery

- Remove the belt clip by pulling the tab in the middle portion of the belt clip and sliding it up and off the unit.
- Loosen the screw and remove the battery door.
- Insert 9V battery. Position the battery according to the polarity markings on the plastic.
- Replace the battery cover. Tighten the screw and snap the belt clip back into place.

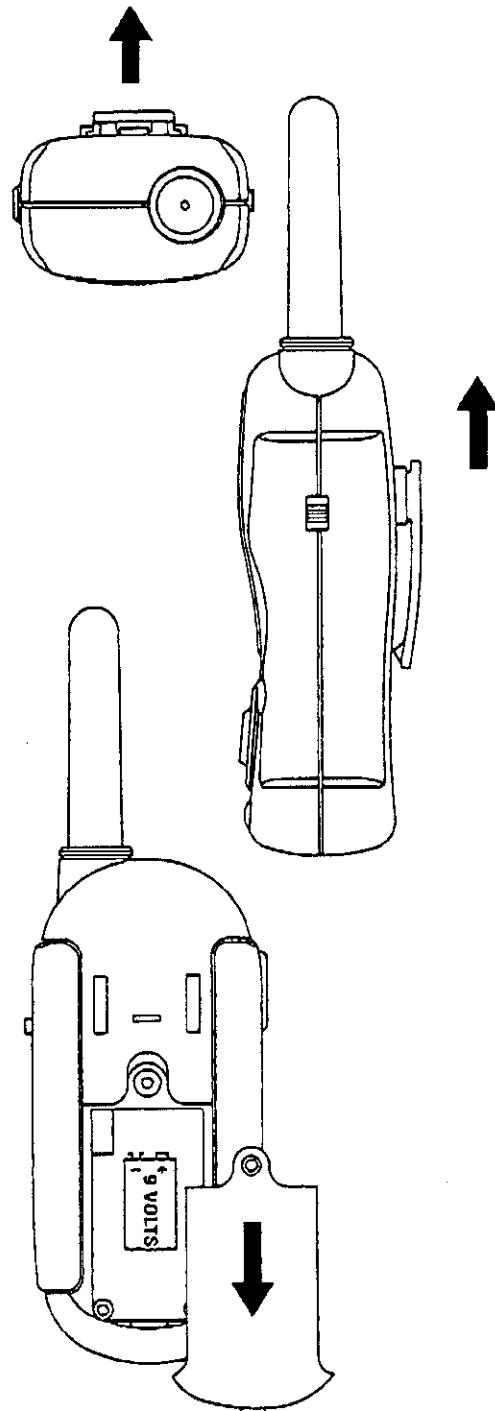

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician to help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC WARNING**