


COMMON HANGTAGS

PMS 285 C + BLACK



ENGLISH BACK

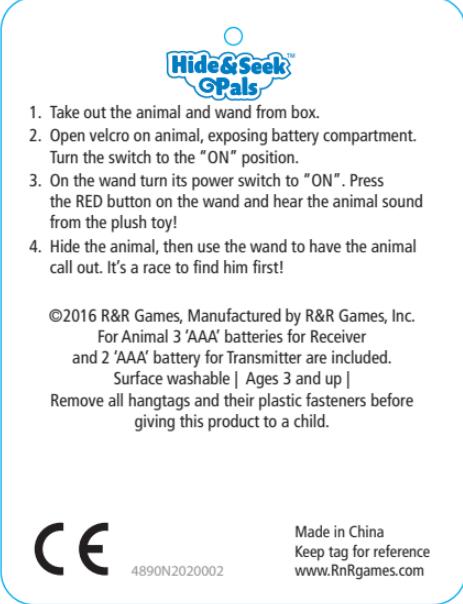

NOTE: VIP!!!

**attach these tags behind
the left ear or elsewhere
so that these tags are not
seen on the front of the
animal in the package.**

FRONT

Power switch must be in the "ON" position for proper operation.



To Replace Batteries by adult

1. Open velcro to expose battery compartment.
2. Remove screw.
3. Pull out the battery compartment inside of the plush toy, open battery cover and insert 3 'AAA' size batteries. Open battery cover of the Seeker wand and insert 2 'AAA' batteries.

- Non-rechargeable batteries are not to be re-charged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Charging removable batteries is only to be carried out under adult supervision.
- Different types of batteries (alkaline, standard carbon-zinc), or rechargeable (nickel-cadmium) or, new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Batteries should be removed from the toy if it is to be stored for a long period of time.
- Drained batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- The packaging has to be kept since it contains important information.

R&R GAMES, INC

BACK



 **WARNING:**
CHOKING HAZARD—Small parts
Not for children under 3 years.

4890N2020003

R&R GAMES, INC

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following
two conditions: (1) this device may not cause harmful
interference, and (2) this device must accept any interference
received, including interference that may cause undesired
operation.

Warning: Changes or modifications to this unit not expressly
approved by the party responsible for compliance could void
the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply
with the limits for a Class B digital device, pursuant to Part 15
of the FCC Rules. These limits are designed to provide
reasonable protection against harmful interference in a
residential installation.

This equipment generates, uses and can radiate radio
frequency energy and, if not installed and used in accordance
with the instructions, may cause harmful interference to radio
communications.

However, there is no guarantee that interference will not occur
in a particular installation. If this equipment does cause
harmful interference to radio or television reception, which
can be determined by turning the equipment off and on, the
user is encouraged to try to correct the interference by one or
more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different**
from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician**
for help.

4890N2030004

105 x 148mm
4890N2030004