

PenDtu



The GCS Pen **DTU** is the connection between the GCS **ProxiPen** and a PC or a modem.

#### **Power**

This **LED** lights up when the device is power supplied. The device is protected against wrong polarity, but for this fonction the polarity has to be right. The best is to use the original GCS power supply.

#### **Pen**

If you put a **ProxiPen** on the device this **LED** should light up. If it is not the case, it didn't recognize the Check then please the ProxiPen battery.

#### **Modem**

Lights up if the device is connected to a modem and recognized it. The device is ready for the remote data transmission. Put the **ProxiPen** on the PenDtu to start the remote data transmission.

Pay attention to the **modem settings in the ProxiPen** and the **modem settings in the PenDtu**.

#### **Data**

If data are transferred from the device to the PC, modem or ProxiPen this LED lights up.

**As long as the LED lights up the ProxiPen should remain on the PenDtu**, otherwise the data transfer would be interrupted.

#### **OnLine**

Lights up if the device is connected to a PC or a modem. This LED is the most important indicator for the operating readiness of the PenDtu! If the LED doesn't light up even the PC or modem is connected the cable could be wrong. Therefore always use the original GCS cable!

#### **FCC Notice:**

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

**Any unauthorised modification to this device may void the authority of the user to operate it.**

#### **Time Zones**

Since WinDau checks the correct time setting in the ProxiPen (+/- 5 minutes PC date/time), it is important that the time zone in the PenDtu is correctly set.

**Please note:**

**at delivery NO time zone is set in the PenDtu!**

If a ProxiPen is read out or the ProxiPen or PenDtu configuration window is open and no time zone is set in PenDtu, WinDau sets it automatically to the PC time zone!

**If you use the PenDtu in an other time zone than the one in the PC, you have to set the PenDtu and ProxiPen time zone manually!**

**Note:**

WinDau's logic is based on the presumption that the ProxiPen is used in the same time zone as the PenDtu! This is important for the ProxiPen time setting!

Example:

The PenDtu (and the ProxiPen) are used in Athens, but the data are downloaded via modem to a PC in A program calculates now the PC and the ProxiPen GMT time according to the time zone set in the PenDtu:

The GMT time is 13:00. Athens has a GMT+2, therefore it is 15:00 there. Vienna has a GMT +1, therefore it is 14:00 there. Assuming that the PC time and time zone are correct:

	<i>local time</i>	<i>GMT Offset</i>	<i>GMT calculated</i>
ProxiPen time in Athens	15:09	PenDtu +2 (Athens)	13:09
PC time in Vienna	14:00	PC +1 (Wien)	13:00

The time difference between ProxiPen and PC is bigger then 5 minutes, but it can easily be synchronized.

If a wrong time zone is set in the PenDtu (e.g. Vienna GMT +1):

	<i>local time</i>	<i>GMT Offset</i>	<i>GMT calculated</i>
ProxiPen time in Athens	15:09	PenDtu +1 (Vienna)	14:09
PC time in Vienna	14:00	PC +1 (Vienna)	13:00

If the time of the ProxiPen and the PC are synchronized, the ProxiPen time would be the time in Vienna even if it is 15:00 in Athens. All following readings would be 1 hour time-shifted! If a control point is visited e.g. 16:00 the ProxiPen would save this control point as visited at 15:00!

### Modem Settings

You can make settings in the PenDtu for the remote data transfer (e.g. cellular phone or modem).

If the [Dial String in the ProxiPen](#) is empty, the settings in the PenDtu are used for the dial-up of the remote transfer.

Three parameters regulate the modem transmission:



Replace the entry <NUMBER> by the receiver's telephon number:

e.g.: ATD0,31361

In this example „0“ is dialed for a trunk line. The comma (,) causes a pause before the rest of the number is dialed. This is necessary if the demand for a trunk line takes a certain time.

Redials indicates the number of dial tryings, is this number reached, the modem transmission is interrupted. Redial Interval indicates how many seconds should elapse between the different establishments of connections.

### Modem Type

For the communication with the modem certain parameters are required. They may differ for different modem types. A modem profile (standard), which can be used for most of the modems, is saved in the PenDtu. You can load this standard profile at any time with WinDau.

If this standard profil should not work, please contact your local GCS dealer (you will find a list on our [homepage](#)) for an update.

WinDau **doesn't support any remote data transmission!**