

Tally Representatives.

Great Britain.

Tally Ltd.
Molly Millars Lane
Wokingham
Berks. RG11 2QT
United Kingdom
Phone: +44 118 978 89711
Fax: +44 118 979 1491
<http://www.tally.co.uk>

United States.

Tally Printer Corporation
8301 S 180th Street
Kent WA 98064-9718
United States of America
Phone: +1 (425) 251-5500
Fax: +1 (425) 251-5520
<http://www.tally.com>

Germany.

Tally GmbH
Postfach 2969
D-89019 Ulm
Deutschland
Phone: +49 7308 80 0
Fax: +49 7308 5903
<http://www.tally.de>

Italy.

Tally S.R.L.
Via Borsini 6
I-20094 Corsico (MI)
Italia
Phone: +39 02 48608 1
Fax: +39 02 48601 141
<http://www.tally.it>

Austria.

Tally Ges.m.b.H.
Eduard Kittenberger Gasse 95 B
A-1232 Wien
Austria
Phone: +43 1 86340 0
Fax: +43 1 86340 240
<http://www.tally.co.at>

France.

Tally S.A.
Les Champs Philippe
-8, Avenue de Verdun
-92257 La Garenne - Colombes Cedex
Phone: +33 1 413011 00
Fax: +33 1 41 30 11 10
<http://www.tally.fr>

379701a

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio Communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Changes or modifications not expressly approved by i-data could void the user's authority to operate this equipment according to part 15 of the FCC rules.

CE conformance

This product has been developed and produced in accordance with the EMC directive and the Low Voltage directive and therefore carries the CE mark.

Company and product names mentioned in this guide are trademarks or registered trademarks of their respective owners.

Tally

plug & print solutions

TallyCom+™ IIF-4

PrintServer

Quick Installation Guide
Document no. 10414-00

ENGLISH | SPANISH

ENGLISH

This Quick Installation Guide explains how to install your PrintServer.

CAUTION

Static electricity can damage the interface. You should either wear an antistatic wrist wrap, or frequently touch the metal surface of the printer.

Install Interface in Printer


1. Make sure no power cord is connected to the printer.
2. Locate the printer's interface slot by way of the printer's manual.
3. Remove the plate covering the printer's interface slot.
4. Insert the interface in the slot as described in the printer's manual.

Network Installation

1. Make sure no power cord is connected to the printer.
2. Connect network cable to the **RJ45** port on the rear panel of the interface. Power on the printer.
3. The complete Installation Guide will be printed.
Note: If nothing is printed, please check that the printer is online and not in an error condition.

Generate Settings Printout

Press the **TEST** button on the back of the PrintServer.

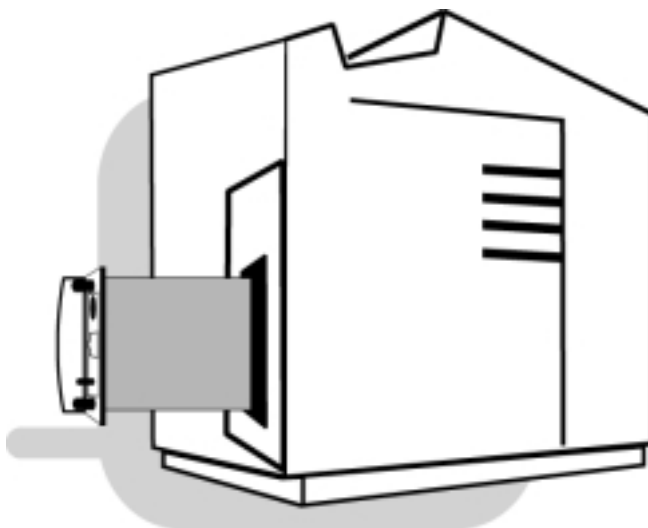

ESPAÑOL

Explica la manera de instalar el servidor de impresión.

PRECAUCIÓN

La electricidad estática puede producir daños en la interfaz. Deberá llevar puesta una muñequera antiestática o tocar con frecuencia la superficie metálica de la impresora.

Instalar la interfaz en la impresora

1. Asegúrese de que el cable de alimentación no esté conectado a la impresora.
2. Localice la ranura de la interfaz de la impresora utilizando el manual de la misma.
3. Quite la placa que cubre la ranura de la interfaz de la impresora.
4. Introduzca la interfaz en la ranura tal como se describe en el manual de la impresora.

Instalación de la red

1. Asegúrese de que el cable de alimentación no esté conectado a la impresora.
2. Conecte el cable de la red al puerto RJ45 situado en el panel posterior de la interfaz. Encienda la impresora.
3. Se imprimirá la Guía de instalación completa.
Nota: si no se imprime nada, compruebe si la impresora está en línea y no se encuentra en ningún estado de error y que el servidor de impresión está perfectamente conectado al puerto paralelo.

Generar el impreso de los ajustes

Pulse el botón **TEST** situado en el lado derecho del servidor de impresión.