 


The PET CHIME™ consists of the following 2 units:

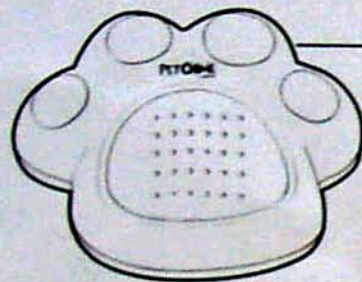

Pet Paw™

- Easy battery replacement
- Operates on one 9V battery (not included)



Pet Chime™

- Wireless chime operates up to 100 ft. from the Pet Paw™
- Wall mountable or stand on shelf
- Operates on three AA batteries (not included)

#### Training your pet to use the PET CHIME™:

The pet chime is easy to teach your pet to use. First allow your dog to get used to the sounding of the chime. Place the **PAW** next to the door that you will be training your animal to go out. With the **PAW** on the floor, place your hand on the device showing your pet how the chime works. **Next** push the **PAW** to sound the chime and open the front door tossing out a treat so to entice your pet to retrieve it. Once your dog has gone outside fetch him back in. **Repeat** the procedure several times. Always placing your hand onto the paw so that the chime rings before opening the door.

Once your dog is accustomed to the activity place their paw on the chime stating: **Do you want to go out? Do you want to go out?** Assist the dog in activating the chime rewarding him when he does. **Repeat** the activity assisting the dog to ring the chime and then opening the door until the dog is comfortable with stepping on the paw on its own.

 
 
The **Pet Touch™ technology** will allow any size dog to easily activate the chime. The activity must be repeated so that your pet will know that when they want to go out they must use PET CHIME™.

Each pet's behavior varies. It is important to make sure that the activity is repeated and done by every member of the family. The adaptation of your pet using the PET CHIME™ is dependent on your training.

 
 


**PET PAW™:**

 
1. To remove battery compartment cover, pinch rear clasp to release.
2. Insert one 9-V battery.
3. Reattach compartment cover.

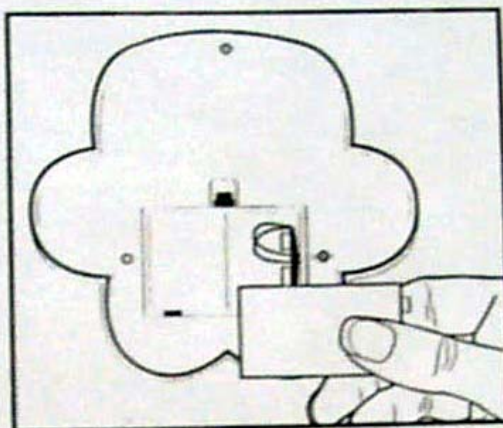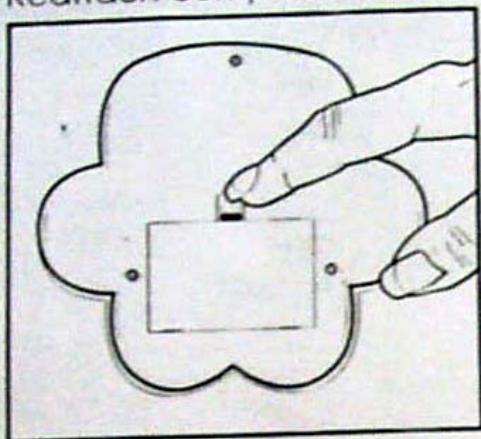**PET CHIME™:**

1. To open the battery compartment cover, press the dots, then push and slide upwards.
2. Insert three AA batteries, following the + and - diagram in the cavity for correct placement.

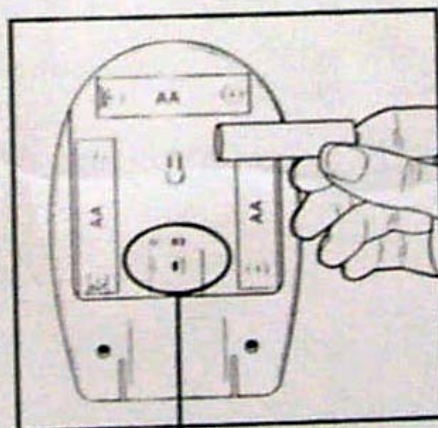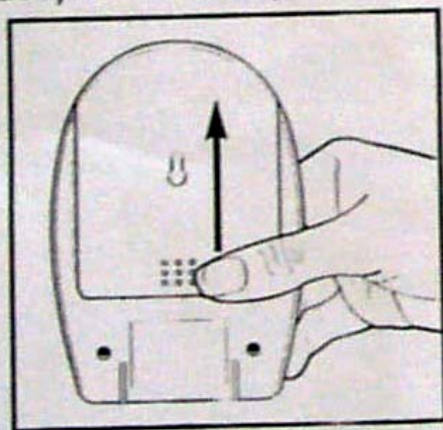

3. Select a chime:  
D = Regular (Ding-Dong)  
B3 = (Woof-Woof)
4. Reattach compartment cover.

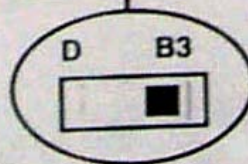



Dear Customer:

Thank you and congratulations on your purchase of this ingenious device. This product is the latest in new technology from Lentek™. We back our product with a two (2) year limited warranty. Your satisfaction is very important to us.

Visit our website at: [www.lentek.com](http://www.lentek.com) and view our products, such as our Siga™ line of pest purifier/deodorizers and PestControl® pest control devices. While you're there, register your new purchase, sign up to receive our company and learn more about our website, or Questions can also be asked on our website, or you can call: 1-888-353-6835, or 407-857-8786 or contact your local Lentek dealer.

We look forward to serving you now and in the future.

Enjoy!

Joe  
Joe Durek  
CEO

Lou  
Lou Lentek  
President

QUESTIONS?  
call  
888-3-LENTEK

visit us on the web:  
[www.lentek.com](http://www.lentek.com)

Should another PET CHIME™ PET PAW™ nearby activate your chime, you can set your own ringing code by disconnecting a wire in both the remote control and the chime. The PET PAW™ has a RED and GREEN wire in the battery case. Likewise, the chime has RED and GREEN wire in selection recess. To set your own ringing code, simply cut either the RED wires on both units or the GREEN wires on both units.

**WARNING: If you cut one RED and one GREEN or all FOUR (4) wires, you will disable the whole unit.**



LENTEK INTERNATIONAL, INC.  
PO Box 593812  
Orlando, FL 32859-3812

Phone: 407-857-8786  
Fax: 407-857-4045  
Toll Free: 800-456-3443  
E-Mail: [customerservice@lentek.com](mailto:customerservice@lentek.com)

visit us on the web:  
[www.lentek.com](http://www.lentek.com)

© 1999 Lentek International. All rights reserved.  
All specifications are subject to change without notice.

PP-10 INST

4200-PP-10021000

## INSTRUCTION TO THE USER

This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.