

TO USE THE UNIT AS A WALL PHONE

When using this unit as a wall phone, remove the cradle tab by sliding it upward. Rotate and flip the cradle tab around. Reinsert it with the lip up by sliding the cradle tab downward until it clicks in place. See Figures 1A and 1B below. Remove the mounting bracket on the back of the base unit, rotate and reinsert it. See figures 1C and 1D below.

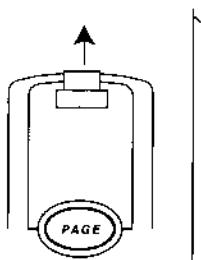


Figure 1A

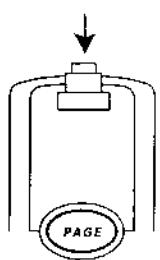


Figure 1B

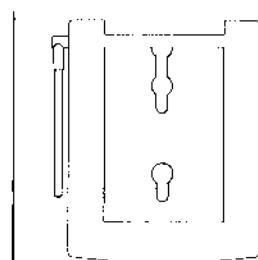


Figure 1C

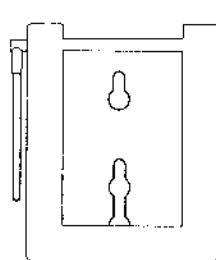


Figure 1D

WALL MOUNTING THE UNIT

1. Drill two holes with a vertical distance between the two marked positions of 83mm as shown in Figure 2.
2. Drive a screw into each of the holes. Tighten them to the end of the screw lines, only leaving the smooth part of the screw head outside the wall.
3. Plug the telephone line cord into the modular wall jack. Insert DC adapter plug into the rear of the Base unit.
4. Reverse the position of the Wall Mount Hook as described above.
5. Hang the unit onto the screws, then slide it down firmly to fasten the base securely as shown in Figure 3.
6. When using this phone as a hanging wall phone, please plug the short telephone line cord into the jack in the Base bottom and into the jack on the wall plate.
7. Plug the DC adapter to a conveniently located AC outlet having 120V and 60Hz only.


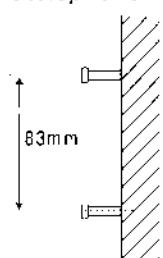




Figure 2

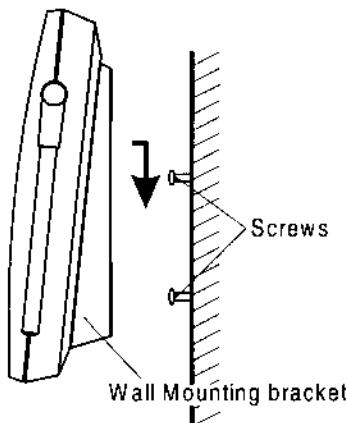

Base Unit (Side View)



Figure 3

TO PLACE A CALL

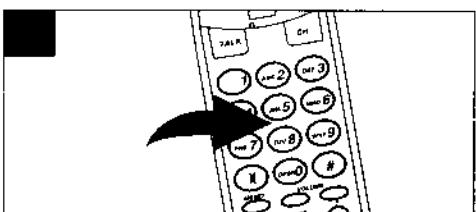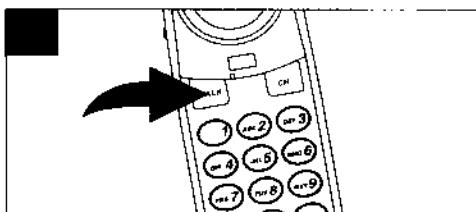

After the battery has been fully charged, lift the antenna on the base unit for best reception. Press the TALK button and listen for a dial tone; the IN-USE/BATT. LOW indicator will blink rapidly while scanning for a clear channel.



Press the key buttons (0-9) to dial the specified number you wish to call.

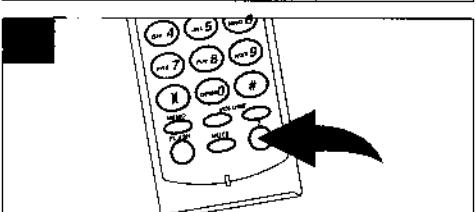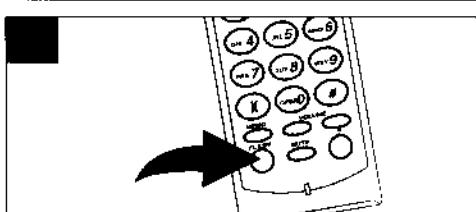

Busy Signal - Press the FLASH button to hang up and get a new dial tone.

To REDIAL the number, press the RE/PA (Redial/Pause) button. Please note that only the last number you called can be stored in the Redial memory. When your call is completed, hang up the handset.

TO END A CALL

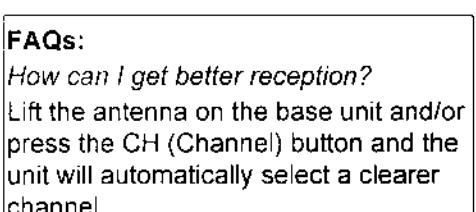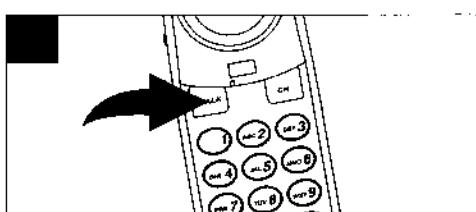


To end a call, simply return the handset to the base, or press the TALK button on the handset.


FAQs:
How can I get better reception?
Lift the antenna on the base unit and/or press the CH (Channel) button and the unit will automatically select a clearer channel.

I have Caller ID, how do I answer an incoming call when I am using the phone?
Simply press the FLASH button.

TO RECEIVE A CALL

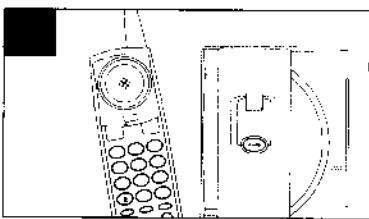


To receive a call if the phone is on the base, simply pick up the phone off the base when the phone rings and start the conversation.

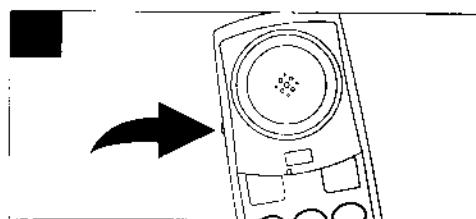


To receive a call if the phone is off the base, simply press the TALK button on the handset and start the conversation.

RINGER ON/OFF SWITCH

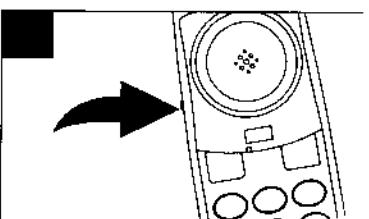


Slide the RINGER ON/OFF switch to the ON position to turn the ringer on. Slide the RINGER ON/OFF switch to the OFF position to turn the ringer off.

USING THE HEADSET

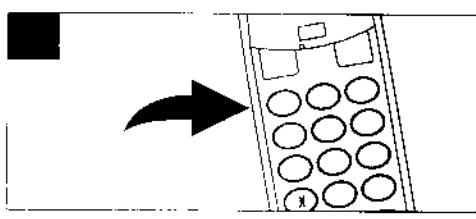


VOLUME BUTTONS

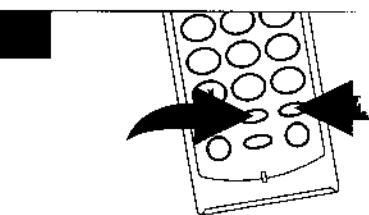

Press these buttons to set the handset receiver's volume.


CH (CHANNEL) BUTTON

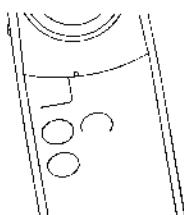

If you experience interference while using the telephone, press the CH button to switch to a clearer channel. It will take about 2 seconds for the unit to scan to the next clear channel.


This will not disconnect the call.

TONE/PULSE SWITCH

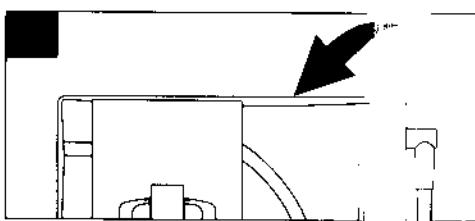


Slide the TONE/PULSE switch to TONE or PULSE to match the service provided on your telephone line. If you are not sure of your service, please contact your telephone company.

REDIAL BUTTON

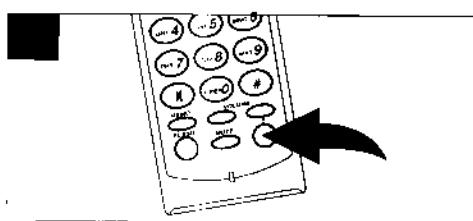


Press the Redial/Pause button to automatically redial the last number dialed. **NOTE:** Please note that only the last number you called can be stored in the Redial memory.

FLASH BUTTON

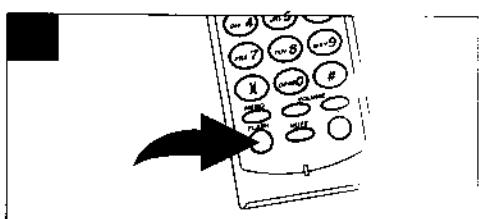

Press this button to momentarily hang up. This is useful for custom calling features, such as Call Waiting or Three-Way Calling provided by your local phone company.

PAGE BUTTON

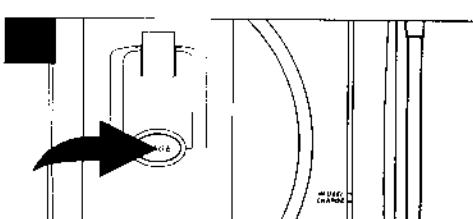


Press the PAGE button on the base to locate the handset when not in use. The unit will beep 5 times, or until the TALK button is pressed on the handset.


SECURITY CODE

This unit uses a digital coding security system to prevent unauthorized use of your telephone line by other cordless phones nearby. There are 65,536 security code combinations that are randomly generated every time you answer a call.


STORING/RECALLING NUMBERS INTO THE 10 MEMORIES

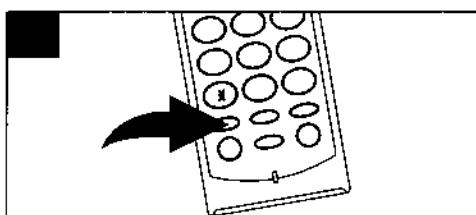


Make sure the phone is not online (the IN USE/BATT LOW and IN USE/CHARGE indicators will be off). Press the MEMO button on the handset; a beep will be heard.

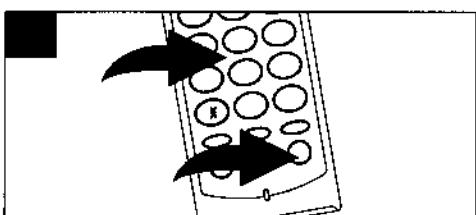


Enter the telephone number you want to store (up to 16 digits) on the handset. If you want a pause of 2 seconds, press the Redial/Pause button (this will count as one digit).

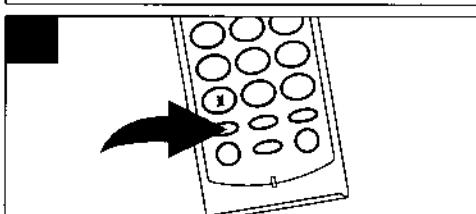

Press the MEMO button again and then press the key buttons (0-9); a beep will be heard and the number will be stored.

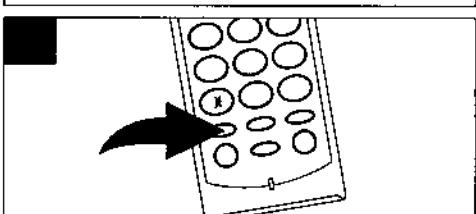


Repeat steps 1 through 3 to store additional numbers.

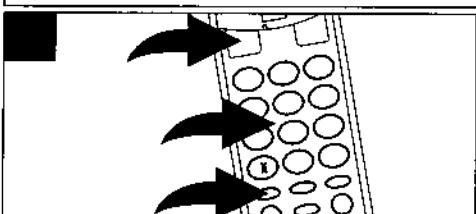

TO RECALL A MEMORY: Press the TALK button to get a dial tone.

Press the MEMO button followed by the key button (0-9) that corresponds to the stored number's memory location. The number will be dialed automatically.

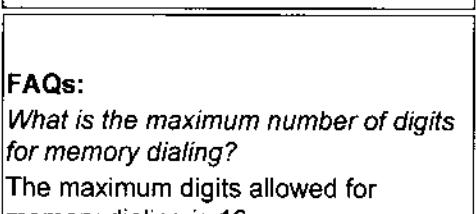

FAQs:

What is the maximum number of digits for memory dialing?

The maximum digits allowed for memory dialing is 16

How do I change a stored number?

new number will replace the old number.

How do I insert a pause?

Simply press the Redial/Pause button in place of a digit.

SYMPTOM	SOLUTION
No dial tone.	<ul style="list-style-type: none"> • Make sure the telephone line cord is connected properly to the modular wall jack. • If a power failure occurred or the base unit was unplugged, return the handset to the base for 3 to 5 seconds to reset the system.
Does not ring.	<ul style="list-style-type: none"> • Check the RINGER ON/OFF switch on the handset. Setting this switch to the OFF position disengages the ringer to conserve the battery power. Switch to ON position to enable the ringer. • You may have exceeded the Ringer Equivalence Number (REN) limit of how many phones can be connected to the same line. The REN total of all devices (printed on the bottom label of each unit) should not exceed five (5). Disconnect the appropriate units to lower the REN total.
No power on the Handset.	<ul style="list-style-type: none"> • Make sure the Ni-Cad battery pack is properly connected inside the handset. • The handset may need recharging, recharge handset.
Handset does not charge.	<ul style="list-style-type: none"> • Make sure the charging contacts on both the base and handset are in contact during charging. • The charging contacts may be dirty, clean with alcohol-moistened cloth. • The Ni-Cad battery may need to be discharged first to charge it fully. • The Ni-Cad battery may not be good anymore, replace Ni-Cad battery.
Range is limited.	<ul style="list-style-type: none"> • Raise or reposition the antenna on the base. • Move the base so it is centrally located in your residence or office and make sure the base is not located near an appliance.
Call received flutters or fades.	<ul style="list-style-type: none"> • The handset may need recharging, recharge handset.
Interference on reception.	<ul style="list-style-type: none"> • Choose an alternate channel using the CH button on the handset.

Care and Maintenance

1. Clean your phone with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances.

Trademark White-Westinghouse used under license
2001 White-Consolidated Industries, Inc.

Printed in China
05940EF01