

User Manual of N302 Mobile Phone

TABLE OF CONTENT

| | |
|---|----|
| 1 SAFETY ALERT AND CAUTIONS..... | 6 |
| 1.1 CAUTIONS OF USING THE PHONE | 6 |
| 1.2 CAUTIONS OF USING THE BATTERY | 7 |
| 1.3 CAUTIONS OF USING THE CHARGER | 10 |
| 2 BEFORE USE | 11 |
| 2.1 BATTERY | 11 |
| 2.1.1 <i>Install the Battery</i> | 11 |
| 2.1.2 <i>Charging</i> | 12 |
| 2.2 MEMORY CARD | 13 |
| 2.3 USB CABLE | 13 |
| 2.4 SECURITY PASSWORD | 14 |
| 3 NAME AND EXPLANATION OF EACH PART..... | 15 |
| 3.1 APPEARANCE SKETCH MAP | 15 |
| 3.2 DESCRIPTION OF KEYS | 15 |
| 3.3 DESCRIPTION OF THE STANDBY PICTURES | 17 |
| 4 FEATURE FUNCTIONS | 18 |
| 5 BASIC OPERATION | 20 |
| 5.1 POWER ON..... | 20 |
| 5.1.1 <i>Power on the phone</i> | 20 |
| 5.1.2 <i>Input PIN code</i> | 20 |
| 5.2 POWER OFF THE PHONE..... | 21 |

| | |
|---|----|
| 5.3CALL..... | 21 |
| 5.3.1 DIAL A CALL | 21 |
| 5.3.2 REJECT A CALL..... | 22 |
| 5.3.3 RECEIVE A CALL..... | 22 |
| 5.3.4 END A CALL | 22 |
| 5.3.5 EMERGENCY SERVICES | 23 |
| 5.3.6 EXTENSION SPEED DIAL | 23 |
| 5.3.7 DIALED CALLS/MISSED CALLS/RECEIVED CALLS/REJECTED CALLS..... | 23 |
| 5.3.8CALL FORWARD..... | 23 |
| 5.3.9CALL WAITING..... | 24 |
| 5.3.10..... CALL BARRING..... | 24 |
| 5.4TEXT INPUT..... | 24 |
| 6 FUNCTION MENU..... | 25 |
| 6.1FILE MANAGEMENT..... | 25 |
| 6.2PHONE BOOK..... | 26 |
| 6.3FUN&GAME..... | 26 |
| 6.3.1 FACEBOOK..... | 27 |
| 6.3.3 SOKOBAN..... | 27 |
| 6.4 Organizer..... | 22 |
| 6.4.1 BLUETOOTH | 27 |
| 6.4.2 EBOOK..... | 22 |
| 6.4.3 CALENDAR | 28 |

| | |
|-------------------------------|----|
| 6.4.4 CALCULATOR | 27 |
| 6.4.5 Alarm----- | 23 |
| 6.4.6 STOPWATCH----- | 23 |
| 6.5CALL CENTER | 29 |
| 6.5.1 CALL LOGS | 29 |
| 6.5.2 CALL SETTINGS | 30 |
| 6.6 MESSAGING | 35 |
| 6.6.1 WRITE MESSAGE | 35 |
| 6.6.2 INBOX..... | 36 |
| 6.6.3 OUTBOX..... | 36 |
| 6.6.4 DRAFTS | 36 |
| 6.6.5 ..SENTBOX..... | 36 |
| 6.7 MULTIMEDIA..... | 37 |
| 6.7.1 .. AUDIO PLAYER..... | 37 |
| 6.7.2 ... VIDEO PLAYER..... | 37 |
| 6.7.36.7.3 RECORDER..... | 37 |
| 6.7.4 .. IMAGE VIEWER..... | 37 |
| 6.7.5 .. FM RADIO..... | 38 |
| 6.7.6 ... CAMERA..... | 38 |
| 6.8 SERVICES..... | 38 |
| 6.9 ORGANIZER..... | 39 |
| 6.9.1 .. ALARM..... | 29 |
| 6.9.2 .. CALENDAR..... | 28 |

| | |
|---------------------------------------|----|
| 6.9.3 World Clock..... | 33 |
| 6.9.4 ..STK..... | 39 |
| 6.9.5 ..MSN..... | 39 |
| 6.10 SETTINGS..... | 40 |
| 6.10.1 DUAL SIM SETTINGS..... | 40 |
| 6.10.2 CONNECTIN MANAGEMENT | 40 |
| 6.10.3 PHONE SETTINGS | 40 |
| 6.10.4 SECURITY SETTINGS..... | 41 |
| 6.10.5 RESTORE DEFAULT SETTINGS | 42 |
| 6.11 USER PROFILES..... | 43 |
| 6.12 Shortcut settings..... | 38 |

Notice: The company reserves the rights to revise the contents of the manual without prior notice..

1 SAFETY ALERT AND CAUTIONS

1.1 Cautions of Using the Phone

- n** Don't take down or modify the phone; otherwise it may cause the damage, creepage and circuit failure of the phone.
- n** Please don't knock the LCD by force or use the LCD to knock other things; otherwise may cause the damage of liquid crystal plate and the leaking of liquid crystal. If liquid crystal enters the eyes, it may cause ablepsia. At this time, please rinse the eyes immediately with clean water (don't rub the eyes), and see a doctor immediately.
- n** In very rare cases, if the phone is used in some types of vehicles, it may have bad effect on the electronic equipments in the vehicle. At this time, please don't use the phone for fear of losing the safety guarantee.
- n** If your vehicle is equipped with the air bag, please don't place the phone above the air bag or the area that can be touched after the air bag is swelled, for fear that the phone is applied very strong external force and cause serious damage on the vehicle owner when the air bag is swelled.
- n** Please don't touch the keystroke using needles, pen nibs and other sharp objects; otherwise it may damage the phone or cause mis-operation.

- n** If the antenna is damaged, please don't use the phone; otherwise it may cause the personal injury.
- n** Don't make the phone approach to the magcard and other magnetic objects too closely; radiation wave of the phone may clean out the information stored in the floppy disks, stored value cards and credit cards.
- n** Please place the drawing pin and other small metal objects in the place that far from the headphone of the phone. The loudhailer is magnetic when it is working and will attract these small metal objects so that may cause personal injury or damage the phone.
- n** Avoid phone damping, prevent water and other liquid from entering the phone, and then cause short circuit, creepage or other failures of the phone.
- n** Please use the phone in the place that far from fixed telephone, TV, radio and office automation equipments, for fear that it may affect the using effects of these equipments and the phone.

1.2 CAUTIONS OF USING THE BATTERY

- n** Please don't take down or modify the battery; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of battery.

- n** Don't throw the old battery into general life rubbish. Treat the battery according to the regulated indication in the place that definitely regulates the waste battery treatment.
- n** Please don't throw the battery into the fire, otherwise it may cause the fire breakout or explosion of the battery.
- n** When installing the battery, don't apply pressure forcefully; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.
- n** Please don't make the battery short circuit using the electrical wire, needle and other metal objects; don't place the battery, necklace and other metal objects together; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.
- n** Please don't solder the battery contact; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.
- n** If battery liquid enter the eyes, it may cause ablepsia; at this time, please don't rub the eyes using the hand, please rinse the eyes with clean water, and then see a doctor immediately.
- n** Please don't use or place the battery near the fire or oven and other high temperature places; otherwise it may cause liquid leaking, overheat, explosion or fire breakout of the battery.
- n** If the battery is increasing the temperature abnormally, color

change, distortion and other phenomena during the using, charging or storing process, please stop using it and then change new battery.

- n** If leaking liquid of the battery contacts with the skin and clothing, it may cause skin burn, please rinse it with clean water immediately, and see a doctor if necessary.
- n** If the battery is leaking liquid or giving out strange odor, please take the battery away from open fire immediately, avoid fire breakout or explosion.
- n** Please don't make the battery damp, otherwise it may cause overheat, smoking or corrosion of the battery.
- n** Please don't use or place the battery under direct sunlight and other high temperature places, otherwise it may cause liquid leaking or overheat, reduce the performance and shorten the service life.
- n** Please don't charge the battery continuously for more than 24 hours.
- n** Please place the battery in the cool and ventilated place away from direct sunlight.
- n** Service life of the battery is limited. Service time of the battery is gradually shortened after the frequent charging. If many times of charging is failed, it means that battery life is drained, please replace the new battery of designated type.

1.3 CAUTIONS OF USING THE CHARGER

- n** Please don't take down or modify the charger; otherwise it may cause personal injury, electric shock, fire breakout or charger damage.
- n** Please use 220V alternating current. Using other voltage may cause creepage, fire breakout and damage the phone and the charger.
- n** Short circuit of the charger is forbidden; otherwise it may cause electric shock, smoking and charger damage.
- n** Please don't use the charger when the power cord is damaged; otherwise it may cause fire breakout or electric shock.
- n** Please clean the dirt that accumulates in the power socket in time.
- n** Please don't place the water container, and etc. near the charger, for fear of water splashing and then cause short circuit, creepage or other failures.
- n** If the charger contacts water or other liquid, please cut off power supply immediately, so that prevent short circuit, fire breakout, electric shock or charger failure.
- n** Don't use the charger in the bathroom and other high humidity places; otherwise may cause electric shock, fire breakout or charger damage.
- n** Please don't contact the charger, electrical wire and power

socket with wet hands; otherwise it may cause electric shock.

- n** Don't place heavy object on the power cord or reconstruct the electrical wire; otherwise may cause electric shock or fire breakout.
- n** Please pull out the charger plug from power socket before the cleaning and maintenance.
- n** Seize the charger when pulling the plug, pulling the power cord will damage the electrical wire, cause electric shock or fire breakout.
- n** Don't charge in the following places: direct sunlight and other high temperature places; wet and ashy place or the place with large vibration (will cause failure); near TV, radio and other home appliances (will affect the image and sound effects).

2 BEFORE USE

2.1 BATTERY

2.1.1 Install the Battery

- n** Take off the rear cover of the mobile.
- n** Make one end of battery with metal surface aim at the battery connector.

n Then gently press the battery downward using the finger, and then press the other end to install the battery.

Prompt: Please operate correctly to avoid damaging the battery connector.

2.1.2 Charging

Insert the charger on the charging interface at the side end of the phone.

After inserting the charging plug, battery strength icon stripe at the top right corner of the screen is scrolling, which means that the charging is processing; when the stripe is full of the whole icon and stop scrolling, which means that the battery charging is completed; when the charging is completed, please pull out the plug.

When electric quantity is not enough, warning message will be sent; and electric quantity shows empty. When electric quantity is too low, the phone will power off automatically. Please don't make the battery in the status of not enough electric quantity for a long time; otherwise it may damage the battery quality and service life. Please don't charge the battery for a long time.

Prompt: In order to ensure normal operation of the phone, please make sure to use the designated charger.

2.2 MEMORY CARD

Open T card cover, put TF card at the T card slot and push the T card gently, close the cover , the card will be inserted correctly.

Prompt: If the memory card is failed, please check whether it is correctly placed and good contact of metal point.

2.3 USB CABLE

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

The operating method is as follows:

—Connect: Plug the micro USB IO port of the cable into your phone micro USB, and the USB port into the PC.

Read & write mode:

T-Flash card: Install the T-Flash card, and connect the phone set to PC, if the phone set is power off, it can be charged only, if keep power on, to select mass storage, phone can be used as a U-disk.

—File transfer

·File folder instruction: Find the mobile memory (T-FLASH card) in "my computer", such as removable disk, double click it, and you will find the folders as follows:

"Photos" is used to store the picture.

"Videos" is used to store the MP4 format file.

These folders is preset by the system, don't change the folders' name.

·Read &Write: You can copy the files in T-Flash to PC hard disk, or copy the files in PC hard disk to the folder of the T-Flash card.

—Quit: On the PC side, select taskbar->delete hardware safely, exit the T-Flash card identified states, stop the T-Flash card, and pull out the USB cable.

2.4 SECURITY PASSWORD

n PIN

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. PIN is usually provided with SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operations company for more details.

n PIN 2

You need to input PIN2 when entering some functions (such as call charge); if you input wrong PIN2 for continuous three times, you need to input PUK2 to unlock it. Please contact with network operations company for more details.

n PUK

When changing the locked PIN, you need to input PUK

(Personal Unlock Key). PUK is provided with SIM card together. If it is not provided, please contact with your service provider. If you input wrong PUK for continuous ten times, the SIM card can't be used again. Please contact with your service provider to buy new card. You can't change PUK. If you lose the code, please contact with your service provider.

n PUK2

When changing the locked PIN2, you need to input PUK2. If you input wrong PUK2 for continuous ten times, you can't use the functions that need PIN2. Please contact with your service provider to buy new card. You can't change PUK 2. If you lose the code, please contact with your service provider.

3 NAME AND EXPLANATION OF EACH PART

3.1 APPEARANCE SKETCH MAP

The picture is only for your reference.







3.2 DESCRIPTION OF KEYS





| Keys | Function |
|------|----------|
|------|----------|

| | |
|-----------------------|--|
| Left soft key/ | 1. Execute functions that the left-down/right-down corner indicator shows. |
| Right soft key | 2. In the standby mode, press Left Soft key to access Menu, Right Soft key to access Camera |
| Navigation key | On other interfaces, it equals to navigation key and direction key except for special functions. |
| End key | <ol style="list-style-type: none"> 1. Mainly used as power on/off. 2. Press to return to standby screen in any interface. 3. End calls or reject incoming calls. |
| OK key | In the dial panel mode, press this key to show or hide dial panel. |
| Dial key | <ol style="list-style-type: none"> 1. Press this key to dial or receive an incoming call. 2. When in the standby mode, press this key to access all calls. |
| Number key | <p>It is used to dial and input numbers or characters.</p> <p>Press and hold Number key 1 to get through the preset voice inbox.</p> |
| Ctrl Key | <ol style="list-style-type: none"> 1. In text editing interface, press "Ctrl" key to switch text the input method. 2. On the standby interface Press and hold "Ctrl" key to transfer profile of General/Meeting. |

- * **Key** If phone with TV function, on the TV player mode and video player mode, press * to for full screen change. (TV is option base on hardware).

3.3 DESCRIPTION OF THE STANDBY PICTURES

| Icon | Descrip tion of functions | Ico n | Description of functions |
|---|--|---|-----------------------------|
|  | Battery strength The full the fill is, the more electric quantity is. Standby screen will show the icon. |  | Silent mode |
|  | Network signal strength |  | Vibrate mode |
|  | GPRS. |  | Flight mode |

| | | | |
|---|-------------------|---|-------------------------------|
| | | | |
|  | Missed calls。 |  | Downloaded MMS |
|  | Unread SMS |  | Alarm clock on and off |

4 FEATURE FUNCTIONS

The phone has not only the basic functions of mobile phone, but also support rich, practical and rapid feature functions, can be briefly introduced as follows:

- n** Phonebook: Each name card holder record stored in the phone can be related with telephone numbers, the phone can store 500 records at most; can send SMS and MMS in the name card holder; you can copy name card holder record between SIM card and the phone.
- n** User profiles: Custom the ringtone (include ringtone settings, volume adjustment, incoming call prompt, message prompt, alarm clock prompt, key-press tone, system alert tone, power-on and power-off tone) according to different events or

environment.

- n** Call center: The phone will automatically store the information of call log for you to check; support to call the telephone number in the call log; support to save the telephone number in the call log to name card holder and set as rejected call; support the function of sending SMS, MMS, and etc. to the telephone numbers in the call log.
- n** Message: The phone supports storing SMS and 200 pieces at most; and the max capacity of each MMS should be 100KB. You can individualize various settings to MMS. The phone supports the storing status of SMS in SIM card and the phone.
- n** Multimedia: Your phone provides all kinds of entertainment services including image, video, camera, FM radio and other functions.
- n** Camera: The phone supports camera and video function. You can customize the camera and video, and switch between prepositive and postpositive video captures through menu option.
- n** Fun&Game: The phone supports the game function.
- n** Network services: The phone supports WAP services. Using WAP browser to access and enjoy wireless network, obtain rich information.

- n** Organizer: The phone supports various practical functions. Supports bluetooth, EBOOK, alarm clock, calendar, calculator, stopwatch and other functions.
- n** System settings: You can customize the phone according to the needs, include phone settings, network settings, call settings, security settings and other functions.
- n** Input method: The phone supports various input modes, which is convenient for you to input English, letters, numbers, symbols, and etc.

5 BASIC OPERATION

5.1 POWER ON

5.1.1 Power on the phone

Press and hold End key to power on the phone.

5.1.2 Input PIN code

PIN (Personal Identification Number) is used to prevent your SIM card from being used illegally. PIN is usually provided with

SIM card together. If you input wrong PIN for continuous three times, please input PUK to unlock it. Please contact with network operations company for more details.

5.2 POWER OFF THE PHONE

In the standby mode, press and hold End key to power off the phone.

5.3 CALL

5.3.1 DIAL A CALL

In standby mode, press numerical keys to input phone number or touch corresponding icons to dial phone number. When you finish inputting phone number, press the dial key to make a call. If you're making a long distance call, add the area code preceding the telephone number.

Press left soft key to access Options.

- Add to contacts: Add a phone number to telephone directory
- Add to Existing Contact: Add a phone number to the name already existed

- Send SMS: Send message to a certain number
- Send MMS: Send MMS message to a certain number
- Insert WPN: Pause P/Wait W
- SIM 1 Call : Dial the number of SIM card 1
- SIM 2 Call: Dial the number of SIM card 2
- IP Call: Dial IP phone

5.3.2 REJECT A CALL

You can press End key to reject an incoming call.

5.3.3 RECEIVE A CALL

When an incoming call arrives, the phone will give out the corresponding prompt (such as vibration, ringtone, and etc.); if network support, the phone screen will show the name and telephone number of the caller; at this time, you can press Dial key to receive an incoming call.

5.3.4 END A CALL

After finishing a call, you can press End key to end a call.

5.3.5 EMERGENCY SERVICES

You can directly dial an emergency service call without SIM card.

Different network uses different emergency numbers, please consult your network operations company for more details.

5.3.6 EXTENSION SPEED DIAL

After inputting telephone number, if you want to input branch number, please press and hold “*”, input your extension number after the display screen shows “P”. After getting through the call, it will directly dial the extension.

5.3.7 DIALED CALLS/MISSED CALLS/RECEIVED CALLS/REJECTED CALLS

You can enter call log to check the relevant details of dialed calls, missed calls, received calls and rejected calls.

Prompt: The record of incoming call from blacklist number will be saved in Rejected Calls.

5.3.8 CALL FORWARD

After call forward function is started, according to different

forward conditions settings (Call Forward Unconditionally, Forward Busy, Forward No Answer, Forward Can Not Reach), you can select to switch the incoming call to voice inbox or other telephone numbers.

5.3.9 CALL WAITING

After call waiting function is started, when you are calling, the other call can be put through.

5.3.10 CALL BARRING

After call barring function is started, according to different restricted conditions settings (all the dialed calls, all the incoming calls, incoming calls when roaming, dialed international calls, outgoing international calls when roaming), you can restrict the call under the corresponding conditions (need to apply to network operator for business).

5.4 TEXT INPUT

The device provides several text input modes so that you can write text or input data in your “contacts”, edit “contacts” record, search English names and write SMS and to-do list.

In “text input” mode, if you want to change the input way, you

can press “Ctrl” key. The selected input way will appear on the top left of the screen.

Letter (Capital, Normal)

Enter edit page, press “Ctrl” key and switch the input mode to “letter”, then press the keys on keypad, selected letters will appear on the screen.

Number

Enter “edit” mode, press “Ctrl” key you can change the input way to “ number”. Then press the keys, number will appear on the screen. The key 0-9 separately represents the figure from 0 to 9. You can press corresponding key to get desired number. Press right soft key can delete the number you input.

Punctuation

Enter the “edit” mode, press key “Sym”, the punctuations will appear. You can scroll the direction key so that the cursor can select desired punctuation. Press left soft key can select the desired punctuation.

6 FUNCTION MENU

6.1 FILE MANAGEMENT

You can check the specific content and service condition of

the phone memory via this function. Meanwhile, you can format memory, too.

6.2 PHONE BOOK

This function could help you browse the name card holder, store, edit and delete the names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group function, collecting the similar items into a group. The storage capacity of the SIM card varies and the maximum storage capacity of this phone is 500.

On the standby interface, press right soft key to enter the interface of the name card holder. When the record of the name card holder is not empty, press left soft key for the following operation:

6.3 FUN&GAME

6.3.1 FACEBOOK

Default face book link is www.facebook.com, you can change it according to local network.

6.3.2 GAME

- You can play a push cases game Magic Sushi imbedded.

6.4 ORGANIZER

6.4.1 BLUETOOTH

n Open/Close Bluetooth

You can choose to “open” or “close” Bluetooth.

n Bluetooth visibility

You can choose “show phone” or “hidden” Bluetooth. If the Bluetooth is hidden, others cannot search your phone.

n Paired device

You can search different Bluetooth equipments and find compatible ones (as long as the PIN codes of two Bluetooth equipments are identical with each other, the match will be successful. The PIN code of Bluetooth earphone is different due to different type, and you can find the code in operating manual of the Bluetooth earphone.).

n Set shared files

-- Directory sharing authority: You can choose “free read and write” or “read only”.

--Sharing directory: You can choose folder in the phone

memory as the storage position of received files by Bluetooth.

n My Bluetooth name

You can change the name of the phone.

n Bluetooth file location

n Help

You can view the operating instruction of Bluetooth.

6.4.2 E-BOOK

You can read e-book with txt format with the aid of this function.

6.4.3 CALENDAR

You can use this feature to view the year, date and solar term easily. Use up/down/left/right direction key to navigator other date.

6.4.4 CALCULATOR

The function will make your device a calculator with which you can carry out simple math calculation.

Enter the numbers. Use following direction keys to calculate:

Up, down, left, right key: +、-、×、/

OK key: Show the calculation result.

6.4.5 ALARM

You can edit alarm, time, ring and repeated ring mode.

In “alarm edit” mode, you can scroll up or down direction key, when the cursor goes to the desired option, press “OK”, then you can select desired settings.

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify.

- Alarm1

- Edit: Set alarm of name, time, ring and mode.

- Enable/Disable: Set alarm1 activate or deactivate.

- Alarm2: Refer to "Alarm1".

- Alarm3: Refer to "Alarm1".

6.4.6 Stopwatch

You can select typical stopwatch, nWay stopwatch mode.

6.5 CALL CENTER

6.5.1 CALL HISTORY

Display your recent call log.

6.5.2 CALL SETTINGS

n Multi-SIM

——Set Dual Sys Call Forward

——SIM Enable Select: Only SIM1 Open/ Only SIM2 Open/ Dual SIM Open

——SIM Settings: Call/ SMS/ MMS/ Internet/ Prompt Dial/
Original SIM Reply

——Set SIM Name: You can set any name you like as the name of SIM card slot.

——Dual SIM Settings Wizard

——Help

n Network settings:

This function can let you select the network manually or automatically when the phone is in the roaming state. You can use this function only after you have made an effective roaming.

Select SIM1/SIM2 and then access:

—Auto Select: Press the left key and Ok, the mobile phone will search various networks. This operation will let your phone register the most suitable network.

—Manual Select: Press the left soft key and Ok, the mobile phone will search various networks. You can select the suitable network from the listed networks.

n Call divert : When “call divert” function is started up, you can transfer the incoming call to voice inbox or other phone number according to the scheduled “ call divert” conditions.

——Unconditional: All incoming calls will be transferred to voice inbox or other phone number according to the setup.

——If Busy: When your number is busy, the incoming calls will be transferred to voice inbox or other phone number according to the setup.

——If No Answer: When there are missed calls in your phone, they will be transferred to voice inbox or other phone number according to the setup.

——If Unreachable: When your phone is power off or out of the service area, the incoming calls will be transferred to voice inbox or other phone number according to the setup.

——Cancel All Diverts: You can delete all settings of

call divert.

n Call barring: All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are available.

——All outgoing calls: Activate/Deactivate/Check Status

——All incoming calls: Activate/Deactivate/Check Status

——Incoming when roam: Activate/Deactivate/Check Status

—— All Intl Outgoing: Activate/Deactivate/Check Status

——Outgoing Intl Roam: Activate/Deactivate/Check Status

——Cancel all barring: Cancel all restrictions on the call.

——Change Password: You can consult your network operator about the call barring password.

Prompt: The above-mentioned function will have to need network support. To use the function, please contact your network service provider.

n Call waiting: You can start up or shut down the function. When it is started up, even when you are making a call, you can also receive another income call.

n Hide ID: This function must be supported by network.
Select SIM1/SIM2
 — Hide ID
 — Display ID
 — Display ID by Network

n Select line: There are two lines can be selected: line 1 and line 2. But the function just for the phone which has one SIM card and two numbers. If your phone is not the type like that, please just select line 1, because if you choose line 2, dialing will be limited.

Select SIM1/SIM2
 — Line 1
 — Line 2

n Flight mode: You can start up the function directly or choose when power on. It is used on flight. When flight mode is working all the functions connect with network, such as SMS, MMS, dialing back, WAP network, will be unavailable, to avoid interfering the signal of the flight you take.

—Active

—Select When Power On

n Others:

——IP Number: In this function, you can set IP call to enter the number.

Select SIM1/SIM2 first and then use the up/down navigation key to select the number and press left soft key to access:

SIM1

—Active/ Cancel

—Modify

SIM2

—Active/ Cancel

—Modify

——50 secs warning

——Connect Prompt: Activate/ Deactivate.

——Any key/reject mode: SMS reply after reject/ anykey
answer

——Auto redial:Activate/Deactivate

6.6 MESSAGING

6.6.1 WRITE MESSAGE

n New SMS

You could write new message by using this function. When you input the message to be sent, press left soft key to send, to insert the templates, to add contact person information and symbol, and to save, etc.

n New MMS

You could edit the MMS, and insert pictures or ringtones with this function.

Select the “New MMS” and enter, you could edit the receiver, forwarder, confidential receiver, the title and content, and operate the functions of send, preview, save and set the timing send.

6.6.2 INBOX

Store the SMS, MMS and Push message you've received. The SMS, MMS and Push message could be differentiated by different icons. The icons before the message list means whether this message is SMS, MMS or Push message and which is stored in SIM1, SIM2 or the phone.

6.6.3 OUTBOX

Store the SMS and MMS you've sent in failure. The SMS and MMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS or MMS, and it is stored in SIM1, SIM2 or the phone.

6.6.4 DRAFTS

Store the SMS and MMS you've edited. The SMS and MMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS or MMS, and it is stored in SIM1, SIM2 or the phone.

6.6.5 SENT BOX

Store the SMS and MMS you've sent successfully. The SMS

and MMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS or MMS, and it is stored in SIM1, SIM2 or the phone.

6.7 MULTIMEDIA

6.7.1 AUDIO PLAYER

This phone could play the MP3 stored in the phone memory and support the background play.

6.7.2 VIDEO PLAYER

This phone supports the video format of 3pg ,AVI and mp4

6.7.3 .6.7.3 RECORDER

Use this function you can record or listen to your own record.
The record file format: wav.

6.7.4 IMAGE VIEWER

You can view the pictures saved in the phone memory as well as edit them freely.

6.7.5 FM RADIO

Pls pull out the antenna; you can listen to Fm radio freely. Enter the radio interface, search the frequency automatically by pressing the up and down direction keys, and change previous or next channel by pressing the left and right direction keys.

Prompt: Please pull out TV antenna or connect with the earphone before you listen to the radio, for the device is equal to radio antenna. When the battery of your cell is insufficient, you may not enter the TV or Radio channel.

6.7.6 CAMERA

The device is equipped with a webcam with high pixels. You can take photo at any time and save the photo in the device or SIM card. The photo can be used as wallpaper of your device or you can send it to your friends through MMS (multimedia messaging service) or Bluetooth.

6.8 SERVICES

The device is compatible with WAP service. You can visit various WAP services, for instance, news, weather forecast and airlines etc. The services are specially designed for the device and

are maintained by WAP service supplier.

WAP service requires network backup. You can consult the network operator or service supplier about the availability, rates and tax of WAP services.

Select SIM/SIM2 to enter:

6.9 ORGANIZER

6.9.1 STK

Enter STK submenu, you can use the additional services that the network service operator provided.

The device has STK function. The service is provided by network operator. If SIM card or network operator fails to provide the service, the function can not be available. Contact network service operator, if you want to have more information.

6.9.2 MSN

This function could provide a chatting tools, is your SIM card need to open GPRS service.

6.10 SETTINGS

6.10.1 DUAL SIM SETTINGS

You can set dual SIM open or only one SIM open.

6.10.2 CONNECTION MANAGEMENT

You can select network account which you want to use.

6.10.3 PHONE SETTINGS

- n** Time and date: You can set up the time and date on the phone as well as their display mode.
- n** Select language: You can select phone language.
- n** Input method:
 - Pinyin fuzzy setting
- n** Shortcut settings: You can set the menu when you long press direction keys.
- n** Auto Power on/off: You can set the time and repeat mode of power-on and power-off.
- n** Power management: You can view the electric quantity of your battery.
- n** Restore settings: You can restore part of the phone settings as factory settings. The default code of restoring factory

settings is: 1122.

- n Enter display settings option,, you can set wallpaper、Idle display、Screen savers、Contrast、Backlight、Keypad light and animation effect.

6.10.4 SECURITY SETTINGS

——PIN code

You can start up, shut down or modify PIN code. Correct PIN code shall be input when you unlock or shut down PIN code. If PIN code verification is started up, each time when you switch on your phone, you will have to input PIN code. If you input mistaken PIN codes three times in a row, SIM card will be locked. You will have to get PUK1 code to unlock it. Please contact network operator to get PUK1 code when necessary.

The default PIN code is 1234.

——PIN2 code:

You can review PIN2 code. For details, please contact network operator.

——Privacy

You can review privacy protection password. Besides, you can also set passwords for some menus, in this way, you will

have to input password each time when you desire to open the menus.

The default password of privacy protection mode is 1122.

—Auto Key

—Deactivate

—5 sec

—15 sec

—30 sec

—1 minute

—5 minutes

—Lock screen by end-key

—Activated

—Off

—Power-on password

You can start up or shut down “phone password” or revise it. When “phone password” is started up, you will have to input “password” each time when you use the phone.

The default phone password is 1122.

6.10.5 RESTORE DEFAULT SETTINGS

You can restore the phone settings as factory settings. The

default code of restoring factory settings is: 1122.

6.11 USER PROFILES

You could set different scene modes.

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This **GSM Mobile Phone** meets the government's requirements for exposure to radio waves. The guidelines

are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: **N302 (FCC ID:OKIN302)** has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the **ear is 0.59W/kg** and when properly worn on the **body is 0.74W/kg**. This device was tested for typical body-worn operations with the back of the handset kept **1.5cm** from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a **1.5cm** separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **1.5 cm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.