



## **LOW BATTERY INDICATORS:**

When the batteries grow weak, Miposaur™ will move very slowly and easily fall down while moving or turning. When this occurs, power OFF and replace all batteries. When the batteries for the Trackball are low, the LED Power Indicator will not light up. When this occurs, power OFF and replace all batteries.


**NOTE:** You will know when Miposaur™'s batteries are nearly depleted because it will make a low battery indication sound and then power off. You can also see current battery levels via the Miposaur™ App.

## **IMPORTANT BATTERY INFORMATION:**

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries [standard (Carbon-Zinc), Alkaline or rechargeable] or rechargeable batteries of different capacities.
- Remove rechargeable batteries from the toy before recharging them.
- Rechargeable batteries are only to be charged under adult supervision.
- Please respect the correct polarity, (+) and (-).
- Do not try to recharge non-rechargeable batteries.
- Do not dispose of batteries into fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Remove batteries if the toy is not going to be played with for some time.



# MIPOSaur™ OVERVIEW

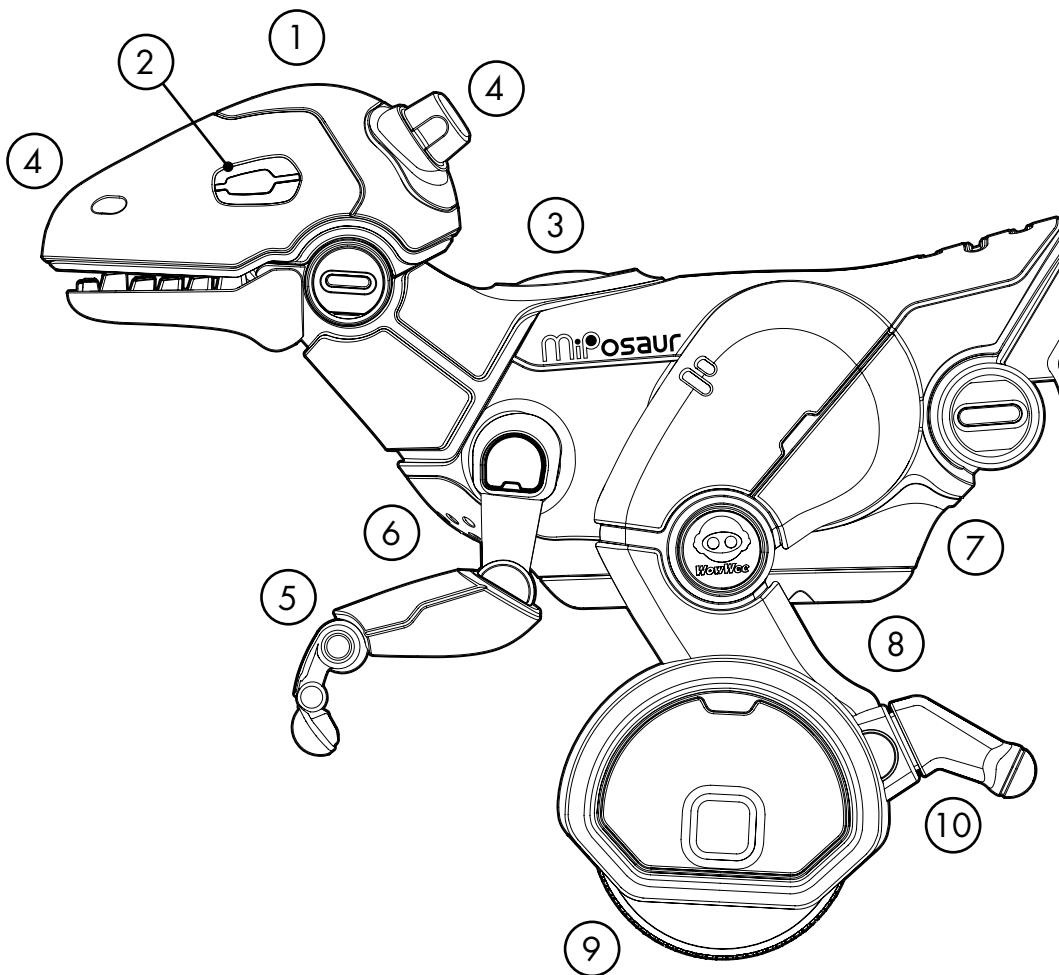

## MIPOSaur™

1. Microphone
2. LED Eyes
3. LED Mood Indicator
4. IR Sensors
5. Arms
6. Speaker
7. ON/OFF Switch
8. Battery Compartment
9. Wheels
10. Heel
11. Tail