

TRACKBALL



- 12. Item Selection Wheel
- 13. Item Selection Window
- 14. Beacon Sense™ Array
- 15. ON/OFF Switch
- 16. LED Power Indicator
- 17. Battery Compartment



GETTING STARTED


(1) With the batteries inserted, locate the power switch underneath the tail and activate Miposaur™ by toggling it to ON.

(2) Place Miposaur™ upright on its wheels on a flat and smooth surface, away from edges and obstacles. On successful balancing, you should feel traction in its wheels. At this point, let go and Miposaur™ will stand on its own with slight movements to correct its balance.

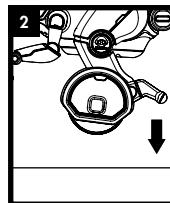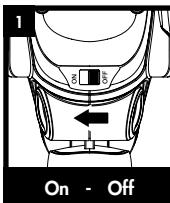


Miposaur™ can respond to various hand gestures and clapping and will react differently depending on its current mood (see pg 8-10). After Miposaur™ is balancing, you can use the actions below to interact with Miposaur™.


BASIC COMMANDS

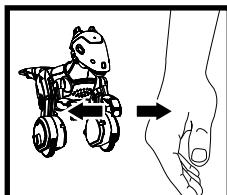


Swipe Left or Right

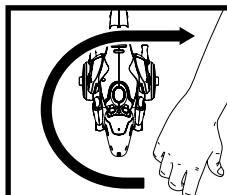


Spin Clockwise

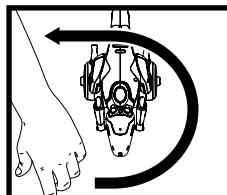


Spin Counter-Clockwise

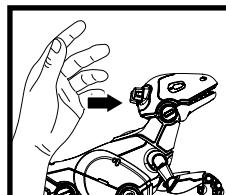


Back Hold

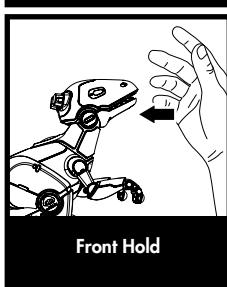


Front Hold

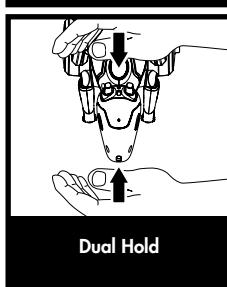


Dual Hold

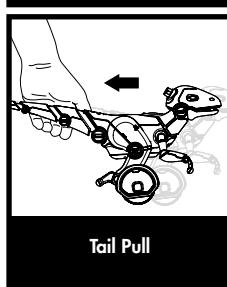


Tail Pull

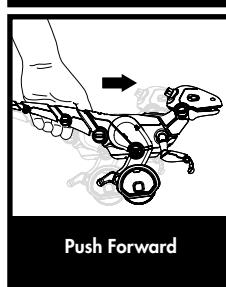

Push Forward

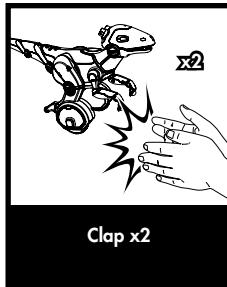

Clap x2

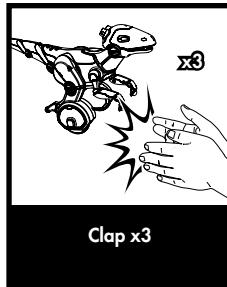

Clap x3