

MARVEL

USER MANUAL



www.Disney.com
Distributed by
Disney Theme Park Merchandise
Lake Buena Vista, FL 32830

©Disney
©Marvel
MADE IN CHINA
FAC-082040-23213




Package Contents:
1 x Spider-Bot
1 x Controller
1 x Base
1 x Micro USB cable
1 x User Manual

Required:
3 x 1.5V "LR44 / AG13"
Button Cell Batteries
(included)

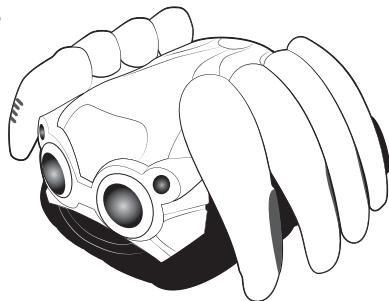
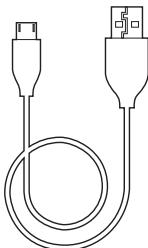


HOW TO PLAY

HOW TO WEAR

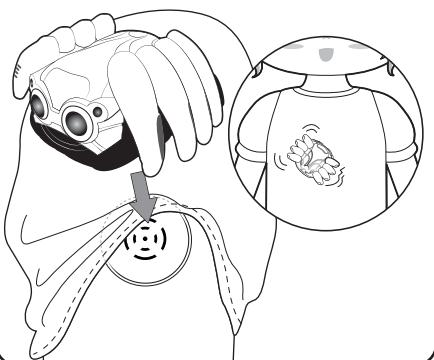

CONTROL

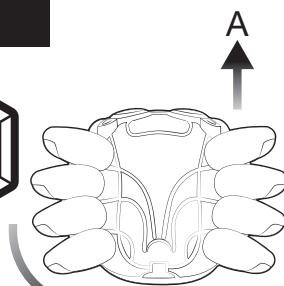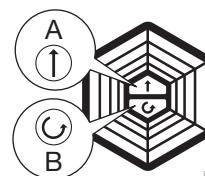

Control Distance:
Approximately 5m / 16.4 ft

Note: Controls may work differently
while worn vs. flat surface.

For Lithium-ion Batteries:

- Charge battery in isolated area.
- Never charge battery unattended.
- Always keep battery away from flammable materials.
- Do not expose to direct sunlight.
- There is a risk of the battery exploding, punctured, damaged, overheating, igniting or misused.
- Do not disassemble, modify, short circuit or heat the battery.
- Do not place them in fires or leave them in hot places.
- Do not drop or subject to strong impacts.
- Only use the specified Rechargeable Battery in the device and USB Charging Cable provided.

- Do not allow the Rechargeable Battery or charging contacts to get wet.
- Carefully read the instruction guide, and use the Rechargeable Battery correctly.
- In the unlikely event of leakage or explosion, use sand or a chemical fire extinguisher for the battery.
- Battery must be recycled or disposed of properly.
- Battery should be recycled or disposed of as per state and local guidelines.
- Keep small cells and batteries which are considered swallowable out of the reach of children.
- Swallowing may lead to burns, perforation of soft tissue, and death. Severe burns can occur within 2 h of ingestion.
- In case of ingestion of a cell or battery, seek medical assistance promptly.

WARNING!

The Rechargeable Battery is only to be charged or replaced by adults.
The Rechargeable Battery must only be used with the included USB Charging Cable.



Parts to be cleaned are to be disconnected from the USB Charging Cable before cleaning.

This product is intended for indoor use only.

The product is not recommended for use on loose dirt or wet surfaces.

Do not immerse in water. Immersing Spider-Bot can result in electric shock.
Burn hazard, fire hazard, and explosion hazard associated with mishandling of the battery.

To avoid possible hazards, do not crush, disassemble, or dispose of in fire.
An adult should periodically check this toy to ensure no damage or hazards exist; if so, remove from use.

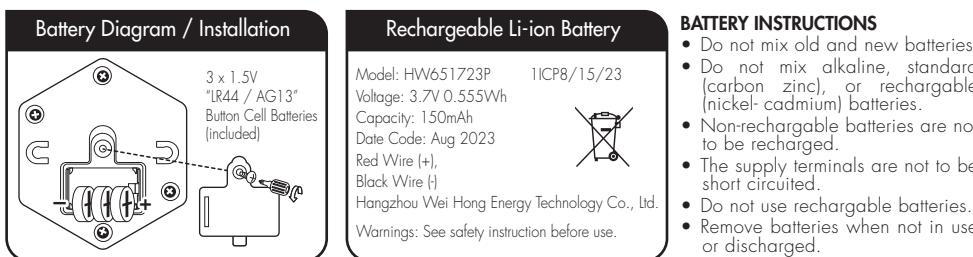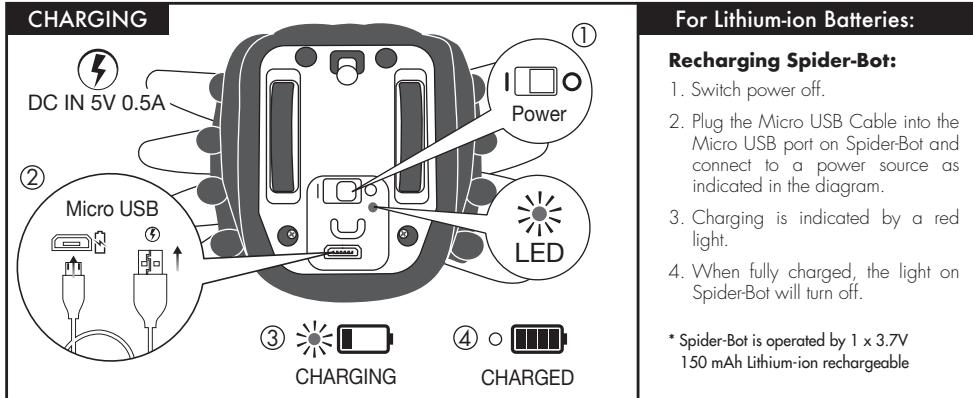

Installing or changing batteries in Control:

Lay Control down so that the battery compartment faces upwards. Control requires 3x1.5V "IR44/AG13" Button Cell Batteries (included).

WARNING! This product is not suitable for children under 3 years because of small parts - choking hazard.

CAN ICES-003(B)/NMB-003(B)

MADE IN CHINA

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

BATTERY REPLACEMENT

1. Remove the screw to access the battery compartment.
2. Open battery door.
3. Exhausted batteries are to be removed.
4. New batteries are to be inserted with correct polarity.
5. Replace the battery door and secure with screw.

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or experienced radio/TV technician for help

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

For these purposes, the party responsible is:

WowWee USA Inc.
 5845 Camino de la Costa, La Jolla, CA, USA 92037
 1-800-310-3033



© 2023 WowWee Group Limited.

WOWWE CANADA INC.

3700 Saint Patrick Street, Suite 206,
 Montreal, QC, H4E 1A2, Canada

WOWWE GROUP LIMITED.

Energy Plaza, 301A-C, 92 Granville Road,
 T.S.T. East, Hong Kong

Customer Service:

<https://support.wowwee.com>

Age:

3+

For Lithium-ion Batteries:

Recharging Spider-Bot:

1. Switch power off.
2. Plug the Micro USB Cable into the Micro USB port on Spider-Bot and connect to a power source as indicated in the diagram.
3. Charging is indicated by a red light.
4. When fully charged, the light on Spider-Bot will turn off.

* Spider-Bot is operated by 1 x 3.7V 150 mAh Lithium-ion rechargeable

BATTERY INSTRUCTIONS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Remove batteries when not in use or discharged.