

OTIC[®]

11.6 INCH PORTABLE DVD PLAYER



MODEL: DP-3310K

PLEASE READ CAREFULLY BEFORE OPERATING THIS EQUIPMENT
KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

Use under supervision of an adult due to long cord.

NOTE:

The mains plug is used as the disconnect device. The socket-outlet shall be installed near the equipment and shall be easily accessible.



DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

CAUTION:

This digital video disc player employs a laser system.

Use controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation may be present when the enclosure is opened. Do not stare into beam.

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

FCC Radiation Exposure Statement:

The product complies with the US portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



WARNING:

This product can expose you to chemicals including arsenic, which is known to the State of California to cause cancer. For more information, go to www.P65Warnings.ca.gov.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions:** The safety and operating instructions should be well kept for future reference.
3. **Heed Warnings:** All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and use instructions should be followed.
5. **Power Sources:** The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
6. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point at which they exit from the appliance.
7. **Overloading:** Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
8. **Grounding or Polarization:** Precaution should be taken to insure that the grounding or polarization means of an appliance is not defeated.
9. **Severe weather:** In extreme weather such as lightning storm, hurricane, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to unexpected power surges.
10. **Water and Moisture:** The appliance should not be used near water-for example, near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool, or a wet basement.
11. **Heat:** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
12. **Object/Liquid Entry:** Care should be taken so that no object/liquid enter into the enclosure through openings.
13. **Ventilation:** The appliance should not be situated so that its location (on a bed, sofa, rug, or similar surface) or position (such as a bookcase or cabinet) interferes with its proper ventilation.
14. **Mounting:** The appliance should be mounted only as recommended by the manufacturer.
15. **Cleaning:** Only use a soft dry cloth to clean the appliance.
16. **Servicing:** The user should not attempt to service the appliance beyond that described in the user's operating instructions. All other servicing should be referred to qualified personnel.
17. **Replacement Parts:** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer. Unauthorized substitutions may result in fire, electric shock or other hazards.
18. **Damage Requiring Service:** The appliance should be serviced by qualified service personnel when:
 - The power-supply cord or plug has been damaged.
 - Objects have fallen into, or liquid has been spilled into the appliance enclosure.
 - The appliance has been exposed to rain.
 - The appliance has been dropped, or the enclosure damaged.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. **Carts and Stands:** An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces cause the appliance and cart combination to overturn.
20. **Non-use Periods:** The power cord of the appliance should be unplugged from the outlet/The batteries should be removed when the appliance is to be left unused for a long period of time.



IMPORTANT SAFETY INSTRUCTIONS

NOTES ON HANDLING:

- When shipping the unit, always use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory.
- Do not use volatile liquids, such as insect spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long time. They will leave marks on the finish.
- The top and rear panels of the unit may become warm after a long period of use. This is normal and not a malfunction.
- When the DVD player is not in use, be sure to remove the disc and turn off the power.

NOTES ON LOCATING THE DVD PLAYER:

When you place this unit near a TV, radio or VCR, the playback picture may become poor and the sound may be distorted. In this case, move the unit away from the TV, radio or VCR.

NOTES ON CLEANING:

Use a soft, dry cloth for cleaning

- For stubborn dirt, soak the cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry. Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the unit.
- If you use a chemical-saturated cloth to clean the unit, follow that products' instructions.

Warning: Cleaning and adjustment of lenses and /or other components of playback mechanism should be performed by a qualified service technician.

NOTES ON MOISTURE CONDENSATION:

Moisture condensation damages the DVD player. Please read the following carefully.

- Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD player.


Moisture condensation occurs during the following cases:

- When you bring the DVD player directly from a cold place to a warm place.
- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD player in a hot and humid place just after you moved the unit from an air conditioned room.
- When you use the DVD player in a humid place.


Do not use the DVD player when moisture condensation may occur.

If you use the DVD player in such a situation, it may damage discs and internal parts. Remove the disc, connect the AC/DC Adaptor to the DVD player and the wall outlet, turn on the DVD player and leave it ON for two or three hours. After two or three hours, the DVD player will have warmed up and evaporated any moisture.

Contents

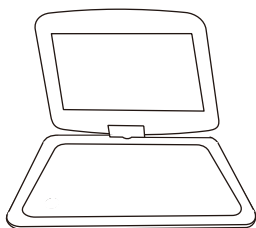


Main Unit

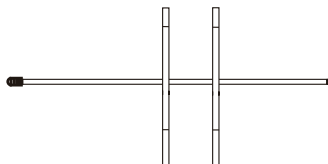

Mounting Strap



 Earphone

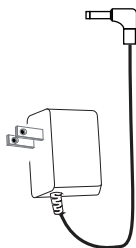


AC Adapter



Car Adapter



 AV Cable

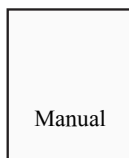

Manual



Remote Control



Batteries

ABOUT DISCS

The region number for this DVD Player is: 1
See the following page for information regarding region numbers.



PLAYABLE DISCS:


The following discs can be played back on this DVD player:



DISC TYPES:


DVD

Data on most DVDs is divided into sections called titles and then into subsections called chapters, each of which is given a title or chapter number. Some features of this DVD player will not operate with some DVD discs as they are preset. If a function you selected does not run as desired, refer to the manual accompanying the DVD disc.

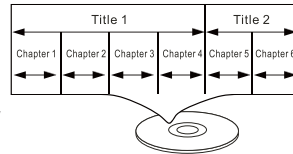

AUDIO CD

Data on an audio CD is divided into sections called tracks, each of which is given a track number.

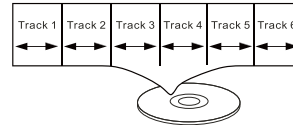

IMPORTANT:

It is important that you read the manual that accompanies the DVD disc, as there are features that are on the DVD player that cannot be used with certain DVDs. There are also extra features on the DVD disc that are different for each DVD disc, so they are not explained in this owner's manual.

This player conforms to the NTSC and PAL color systems. However, if you are in the USA, Canada or Mexico, leave this setting on NTSC. If incorrectly set to PAL, the TV picture may roll vertically. In this case, set the TV system to NTSC.

This player only supports DVD discs with a maximum resolution of 720 x 576, USB and SD cards with a maximum pixel of 1080P video. It does not support playing 2K and 4K videos and pictures.

Notes on Copyright:


It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public and rent copyrighted material without permission. DVD video discs are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Region Management Information:

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play that disc. You may not be able to play back some DVD video discs on this player if they were purchased from outside your geographic area or made for business purposes. When you try to play back an unauthorized disc, Wrong Region appears on the TV screen.


LOCATION OF CONTROLS (PLAYER)

FUNCTION PANEL

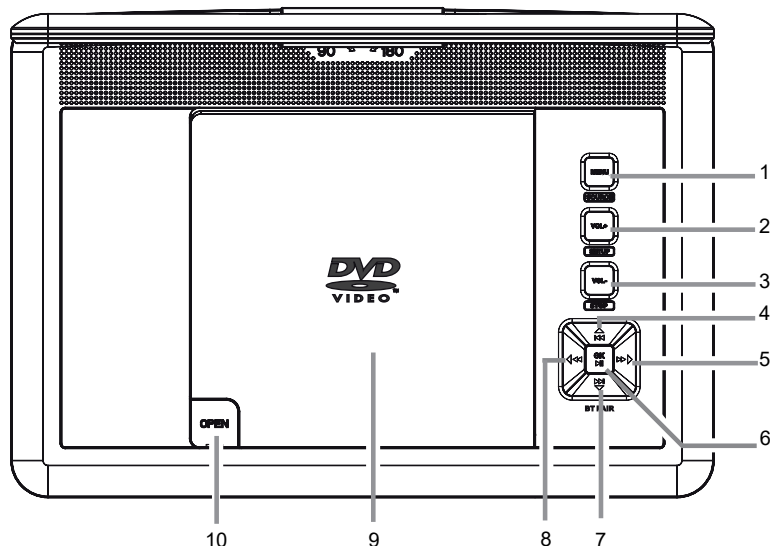

1. **MENU / SOURCE:** Press and release to enter to disc menu. (Function depends on the disc recording)
Press and hold to switch the playback mode (disc, USB, card, AV IN), press and hold again to resume.
2. **VOL +/-:** Press and release repeatedly to increase volume.
SETUP: Press and hold to enter set up menu.
3. **VOL -/:** Press and release repeatedly to decrease volume.
STOP: Press and hold once to pre-stop, press and hold twice to fully stop.
4. **▲ / ◀◀**
 - In setting menu, press to move the cursor upward.
 - In disc playback mode, press to skip track or chapter backward.
5. **▶▶ / ▶**
 - In setting menu, press to move the cursor to right.
 - In disc playback mode, press to fast search forward.
6. **OK / ||**
 - In setting menu, press to confirm the selection.
 - In disc playback mode, press to start playback or pause.
7. **▶▶ / ▼ / BT PAIR:**
 - In disc playback mode, press to skip track or chapter forward.
 - In setting menu, press to move the cursor downward.
 - Press and hold to disconnect the current external Bluetooth device; press and hold again to reconnect the external Bluetooth device.
8. **◀◀ / ◀**
 - In setting menu, press to move the cursor to left.
 - In disc playback mode, press to fast search backward.
9. Disc Door
10. **OPEN:** Press to open the Disc Door.

SIDE VIEW

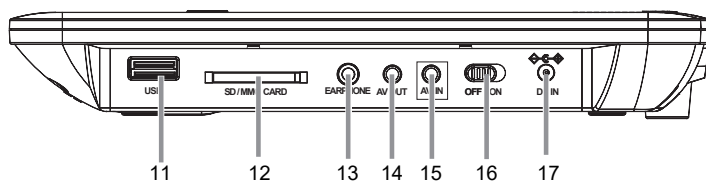

- | | |
|--------------------------------------|------------------------------------|
| 11. USB Port | 15. AV IN (Audio/Video Input) Jack |
| 12. SD/MMC Card Slot | 16. Power ON/OFF Switch |
| 13. EARPHONE Jack | 17. DC IN Jack |
| 14. AV OUT (Audio/Video Output) Jack | |


FRONT VIEW



- | | | |
|----------------------|------------------------|---------------------|
| 18. CHARGE Indicator | 19. IR (Remote Sensor) | 20. POWER Indicator |
|----------------------|------------------------|---------------------|

LOCATION OF CONTROLS (REMOTE CONTROL)

1. POWER Button
2. VOLUME +/- Buttons
3. MUTE Button
4. L/R Button
5. SOURCE Button
6. Direction ◀▶▶▲ Buttons
7. ▶▶ (Skip Forward) Button
8. ▶▶ (Fast Forward) Button
9. ▶|| (Play/Pause) Button
10. TITLE Button
11. MENU Button
12. Stop Button
13. AUDIO Button
14. GOTO Button
15. REPEAT Button
16. SLOW Button
17. Display ON/OFF Button
18. Numeric Buttons
19. SETUP Button
20. ◀◀ (Skip Backward) Button
21. ◀◀ (Fast Backward) Button
22. OSD (On Screen Display) Button
23. SUBTITLE Button
24. ANGLE Button
25. PROG (Program) Button
26. ENTER Button
27. WIDE Button
28. ZOOM Button
29. A-B Repeat Button

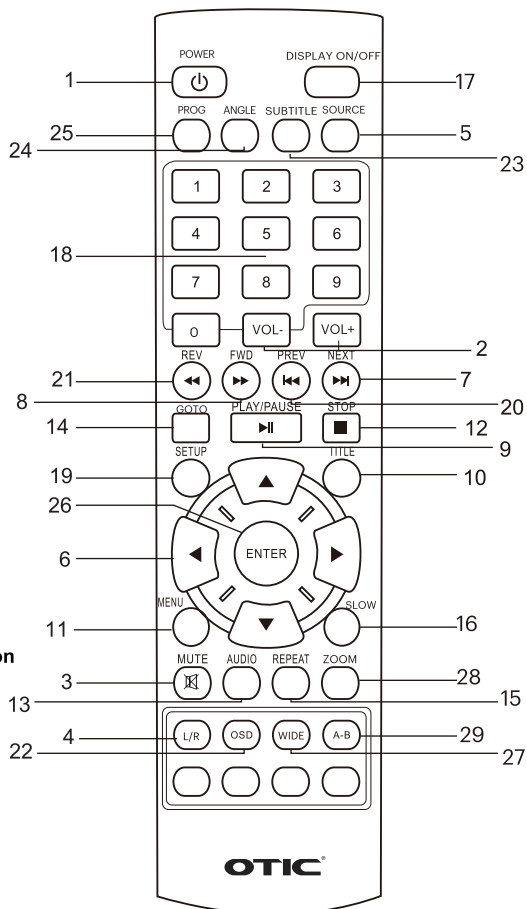 

LOCATION OF CONTROLS (REMOTE CONTROL)

1. POWER

In power on mode, press to turn the unit to standby mode. Press again to turn on from standby mode. (For saving battery power, always turn off the unit by sliding the Power ON/OFF Switch to OFF position.)

2. VOLUME +/-

Press to increase or decrease volume.

3. MUTE

Press to turn off the sound temporarily, press again to turn it back.

4. L/R

Press repeatedly to select an audio channel during playing CDs.

5. SOURCE

Press repeatedly to switch playback mode; press again to resume normal mode.

6. Direction buttons

Press to select (in the form of highlight) the item nearby in the corresponding direction when adjusting or in setup menu.

7. Skip Forward

To play next track/item.

8. Fast Forward

To accelerate the playback speed

9. Play/Pause

Press to pause the playback; press again to continue to play.

10. TITLE

Press to back to Title page when playing DVDs. (Function depends on the recording of the DVD discs)

11. MENU

Press to back to Menu page when playing DVDs. (Function depends on the recording of the DVD discs)

12. STOP

Press to pause the playback; press twice to stop the playback. Return upper menu when in setup mode, and exit setup menu when the main menu is displayed on the screen.

13. AUDIO

Press repeatedly to select desired audio track when playing DVDs. (Function depends on the recording of the DVD discs)

14. GOTO

To skip to specified playback time and start to play from that point. (use numeral buttons to input hour/minute/second)

15. REPEAT

Press repeatedly to select desired playback sequence.

16. SLOW

Press repeatedly to select desired playback speed (1/2, 1/4, 1/8, 1/16 of the normal speed) when playback. Press Play/Pause button to back to normal speed.

17. LCD ON/OFF

Press to turn off the display; press again to turn it on. This function is mainly used to save power energy when listening CDs.

18. Numeric buttons

To input numbers when other functions needs.

LOCATION OF CONTROLS (REMOTE CONTROL)

19. SETUP

Press to enter setup menu; return upper menu during setting up (use STOP button instead when it exits setup mode directly), and exit setup menu when the menu is display in the main menu.

20. Skip Backward

To play previous track/item.

21. Fast backward

To decelerate the playback speed

22. OSD (On Screen Display)

During playback, press the OSD Button repeatedly to read the information of playback status.

23. SUBTITLE

During DVD playback, press repeatedly to select the desired subtitle. (Function depends on the recording of the DVD discs).

24. ANGLE

During DVD playback, press repeatedly to select the viewing angle. (Function depends on the recording of the DVD discs).

25. PROG (program)

Press to activate PROGRAM feature; press again to exit. This feature will be explained in the following chapter.

26. OK

Press to confirm.

27. WIDE

Press repeatedly to select the aspect ratio.

28. ZOOM

When a movie/photo is in playback or paused, press repeatedly to zoom in/out the picture. In zoom in mode, press the Direction buttons to select the parts of the zoomed picture to watch. This function is not available on all discs.

29. A-B Repeat


During an audio/visual Playback, press the A-B Button to define where you want the section to start. Press the A-B Button again to define where you would like the section to end, the unit will play the selected section repeatedly and continuously. Press the A-B Button again to back to normal playback mode.

POWER SOURCE PLAYER)

The unit has a built-in Lithium-ion rechargeable battery. Recharge it as below:


Charging by the supplied AC/DC Adaptor:

1. Connect the small plug from the AC/DC Adaptor to the DC IN Jack on the right of the unit.
2. Connect the AC/DC Adaptor to the wall outlet having AC 100-240V~; 50/60Hz.

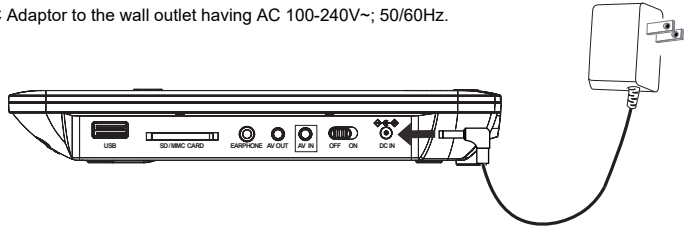

Charging by the supplied Car Adaptor:

1. Connect the small plug from the supplied Car Adaptor to the DC IN Jack on the right of unit.
2. Connect the Car Adaptor to the cigarette lighter socket of a vehicle that has a 12-24V battery as illustration below.

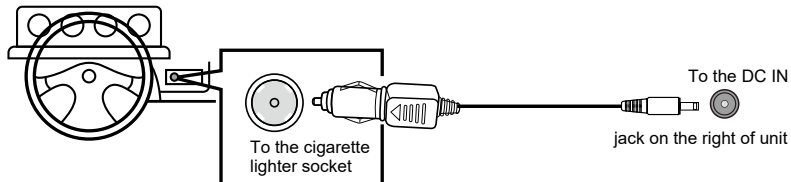

If the player is in standby mode, the POWER indicator will turn to red; if power it on, the POWER indicator will blink blue color.

The CHARGE indicator will turn red color when the unit is connected to power source. When the battery is fully charged, the CHARGE indicator will turn green color.

Remarks:

1. **It is compatible with a vehicle that has a 12-24V battery.**
2. This is a special negative grounded Car Adapter. Using this Car Adapter with a plus grounded car can cause malfunction.
3. Do NOT plug in the Car Adapter until the car ignition is turned on.
4. Disconnect the Car Adapter from the cigarette lighter and the unit after use.

NOTES:


1. The AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount position.
2. For energy saving, please unplug the AC/DC Adaptor from wall outlet when finished charging.
3. Your battery will last longer if you follow these simple guidelines for caring for and storing it.
 - Before first time use, charge it approximately 3 hours until it is fully charged.
 - Recharge and store the device within the temperature range of 5°C~35°C (40°F~95°F).
 - Do not overcharge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life. Battery life naturally shortens slowly over time.
 - The rechargeable battery incorporated in this product is not replaceable.

POWER SOURCE (REMOTE CONTROL)

Battery installation:

Install or replace the batteries as follows:

1. Press the tab on the battery door and lift it off.
2. Install two (2) x AAA size batteries (included) into the battery compartment as the illustrated on the right and the polarity markings inside battery compartment.
3. Replace the battery door.

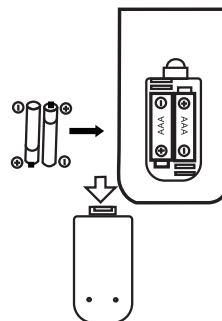


Battery Precautions:

Follow these precautions when using a battery in this device:

1. Use only the size and type of battery specified.
2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of battery in fire. Battery may explode or leak.
7. Clean the battery contacts and also those of the device prior to battery installation.


REMOTE CONTROL SENSOR

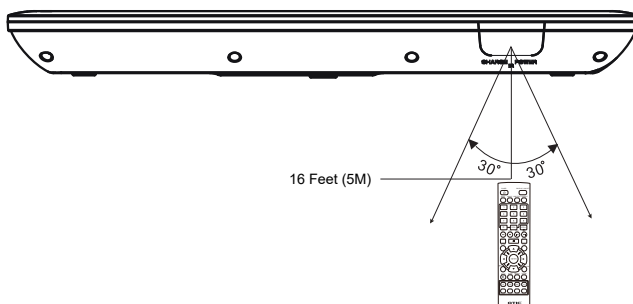


1. When there is an obstacle between the unit and the transmitter, the transmitter may not operate.
2. When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the remote sensor of the unit, the remote operation may be unstable.

CONNECTIONS

1. To watch the disc with external TV, connect it as the illustrated below:

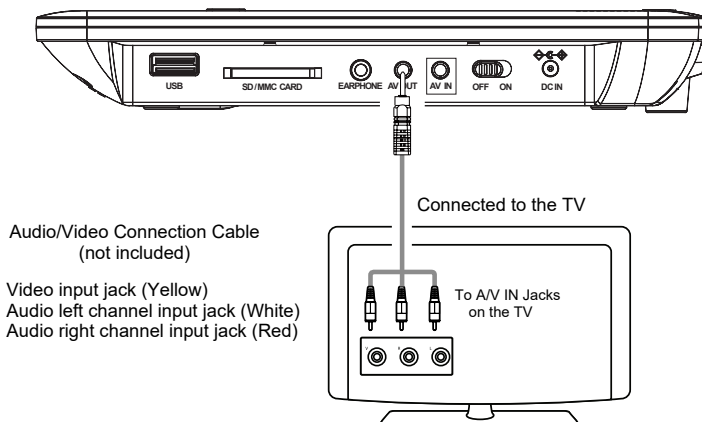

2. To watch video from the external video player, connect it as the illustrated below:

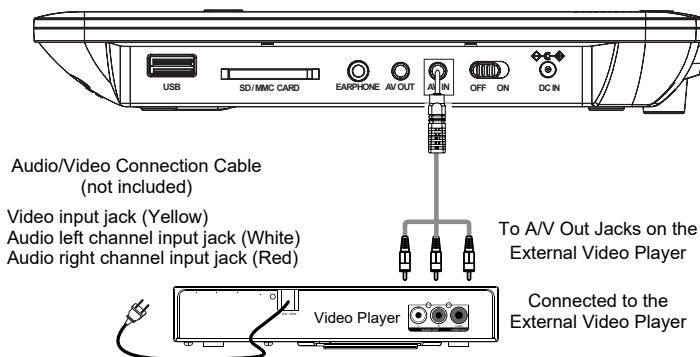

NOTE:

The default setting of the unit is AV OUT, if connect to external Video Player (such like DVD, DVR Players), press and hold the MENU/SOURCE Button on the unit or press the SOURCE Button on Remote Control to set to AV IN mode. Press and hold the MENU/ SOURCE Button on the unit or press the SOURCE Button on Remote Control again to return to normal mode.



EARPHONE:

For private listening, connect the Earbuds into the EARPHONE Jack on the right of unit. The speakers will be automatically cut off when the Earbuds is inserted into the jack.


CONNECTIONS

3. To listen to the audio with external Bluetooth device (speaker or earbuds, not smart phones), you can:

- (1) Turn the Power On/Off Switch of the unit to "ON" position to power on. The POWER indicator will quickly blink blue color, which means the unit enters the state of transmitting Bluetooth signal.

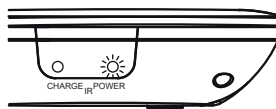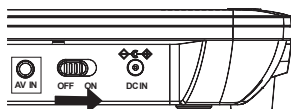

- (2) Turn on the external Bluetooth signal receiver (Bluetooth speaker/ earbuds) to receive the Bluetooth signal.
- (3) Once the Bluetooth signal is received by receiver, the POWER indicator of the unit will stay solid blue. Then you can start playing music or movie on the unit.

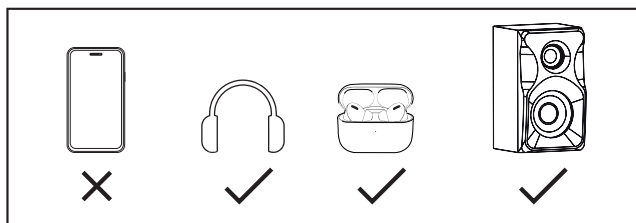


Note:

1. This unit cannot connect with smart phone.
2. When pairing, please ensure that there are no other Bluetooth signal receiver turned on around this unit.
3. When you want the unit to pair with a new external Bluetooth device, you can:
 - press and hold the BT PAIR button on the unit, the POWER indicator will blink slowly, which means the pairing with the current device is disconnected;
 - turn on the desired Bluetooth device and turn off the other devices, then press and hold the BT PAIR button again, the POWER indicator will blink quickly and it means the unit is transmitting Bluetooth signal;
 - once paired successfully, the POWER indicator of the unit will stay solid blue.


SWIVEL PANEL

The viewing angle of the swivel panel can be adjusted as below as desired:


①

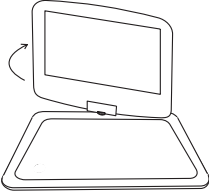


②

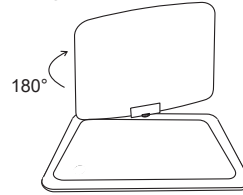

③

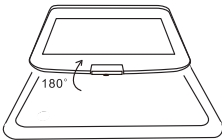

④

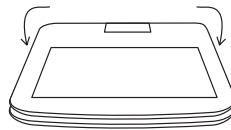

OPERATIONS

Basic Operation

1. Lift up the panel and turn to desired angle. Slide the Power ON/OFF Switch on the right of the unit to "ON" position to power on the unit. The POWER indicator on the front of unit will illuminate.
2. Press repeatedly the SOURCE button on the remote control or press and hold MENU button on the operation panel to select a playback mode. (Disc mode → USB mode → Card mode → AV IN mode. default mode: Disc mode)
2. Press the OPEN Button on the unit to open the disc door. Place the disc on the center spindle with label side facing up. Close the disc door and the unit will start playback automatically.
3. During playback, press playback control buttons (▶||, ▶▶, ◀◀, ▶▶, ◀◀, ■) to control the playback.
4. To power off, press the POWER Button on Remote Control to turn the player to standby mode. The color of the POWER Indicator on front of unit will turn to Red. Press the POWER Button again to turn the player on from standby mode.
(For saving energy, please power off the player by slide the Power ON/OFF Switch on the player to OFF position and unplug the AC/DC Adaptor from wall outlet.)

Playback Options Control

The submenus and options vary with the feature of the disc and the playback mode. Here take the disc mode for example.

Note:

When you press a button to make the menu bar appear, its function is also activated. If you don't want it, or it blocks other desired features, press OK button (repeatedly) to back to default.

When watching movies

The below menu bar will appear on the screen when you press any button among SUBTITLE/ANGLE/ZOOM/AUDIO/SLOW/REPEAT buttons during playback, while changing information is displayed directly when you pressing other buttons.

To get rid of the menu bar, press the ■ button, or just keep no touching of any button for about 5 seconds.

Here take pressing WIDE button for an example, the menu bar will appear at the bottom of the screen as below:



Press repeatedly ◀ or ▶ button to browse other submenu on the menu bar, and the following pictures and the picture above will appear in a loop.



Press repeatedly ◀ or ▶ button to select the submenu, then press OK button to select the desired option.

OPERATIONS

Below is a chart listing the options under each submenu. Note that the options vary with the features of the inserted disc.

Sub Menu	Options
Subtitle	NULL, Subtitle 1, ...
Aspect Ratio	4:3, 16:9, STRECH
Play Mode	Repeat One, Repeat All, Sequence
Zoom	Zoom x 1, Zoom x 2, Zoom x 3, Zoom x 4
Angle	Angle 01, ...
Brightness	12 levels
Panel Switch	OFF
Goto Time	00:00:00
Goto Title	(Total xxx, Current xxx) _____
Goto Chapter	(Total xxx, Current xxx) _____
Track	Track 01, ...

Note that the adjustment of the Brightness is displayed with a bar instead of options on the screen.

Here are the operation steps:

1. When the menu bar appears, press repeatedly the ◀ or ▶ button to select (in the form of highlight) the submenu Brightness. Current brightness level will appear. Press the OK button to make the brightness bar pop out.
2. Press ◀ or ▶ button to select "-" (decrease) or "+" (increase) the screen brightness; then press repeatedly the OK button to select the level.
3. When finished, press STOP button to back to submenu, or just leave it alone, it will disappear after about 5 seconds.

When enjoying music

The below menu bar will appear on the screen when you press the L/R button or REPEAT button during playback, while changing information is displayed directly when you pressing other buttons.

The operation method is the same as that when playing DVDs.

Here take pressing REPEAT button for an example, the menu bar will appear at the bottom of the screen as below:

Sequence			
Play Mode	Sound Effect	Channel	Goto Time

Below is a chart listing the options under each submenu. Note that the options vary with the features of the inserted disc.

Submenu	Options
Play Mode	Sequence, Repeat One, Repeat All, Random
Sound Effect	Room, Outdoor, NULL
Channel	Stereo, Left, Right
Goto Time	00:00:00

OPERATIONS

When browsing photos

The below menu bar will appear on the screen when you press the ZOOM button during browsing, while changing information is displayed directly when you pressing other buttons.

The operation method is the same as that when playing DVDs.



Press repeatedly ◀ or ▶ button to browse other submenu on the menu bar, and the following pictures and the picture above will appear in a loop.



Below is a chart listing the options under each submenu. Note that the options vary with the features of the inserted disc.

Menu	Options
Auto Play	Off, Fast, General, Low
Zoom	Zoom x 1, Zoom x 2, Zoom x 3, Zoom x 4
Rotate	Clockwise 0°, Clockwise 90°, Clockwise 180°, Clockwise 270°
Effects	Null, Wipe Diagonal, Wipe left
Photo Info	On, Off
Thumbnail	--

Notes:

1. When there is only one photo, "NULL" will appear when you select submenu Auto Play in case of only one image there.
2. The image transition can be selected under the submenu Effects.
3. When there are many pictures, you could press the submenu Thumbnail and then directional buttons to select the desired image conveniently.

PROGRAMING FEATURE

1. During playback, press the PROG Button on the Remote Control, the follows menu will appear on the screen.

Movie programming screen

T	C	T	C	T	C
01.	-- --	02.	-- --	03.	-- --
04.	-- --	05.	-- --	06.	-- --
07.	-- --	08.	-- --	09.	-- --


Music programming screen

01.	--	02.	--	03.	--	04.	--	05.	--
06.	--	07.	--	08.	--	09.	--	10.	--
11.	--	12.	--	13.	--	14.	--	15.	--
16.	--	17.	--	18.	--	19.	--	20.	--

2. Using the Direction buttons and Numeric buttons to select and set the desired TT (Title), CH (Chapters) of the movie into the playback list as desired. (TT and CC need to be inputted concurrently. If there is only one chapter under a title, input 01 in the chapter position)
3. When the playback sequence is arranged, press OK to confirm and exit. The unit will start to play following the arrangement you made automatically, and PROPLAY will appear at the upper right corner of the screen.
4. Press STOP button to exit PROGRAM feature, and PROPLAY will disappear. The playback will go back to normal sequence.

USB/SD/MMC PLAYBACK

1. Insert the USB Device or SD/MMC memory card into the USB port /card slot as illustrated below:

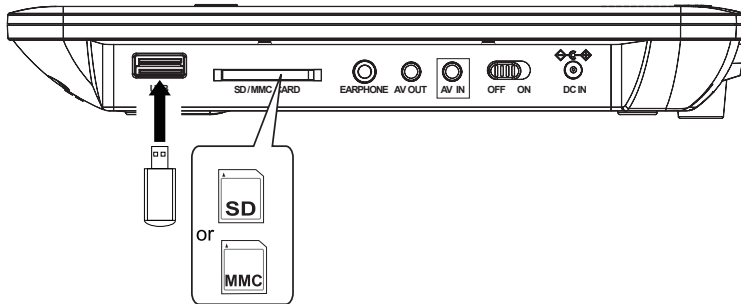

2. Press repeatedly the SOURCE button to select USB mode/Card mode, and then select the desired item to play.
3. Other operation is similar to DVD/CD disc playing.

Notes:

- Up to 32 GB MMC (SD) Card/USB Device the unit supports to play.
- When inserting the MMC (SD) Card/USB Device, make sure the direction you selected is correct. Never insert violently to avoid damaging the MMC (SD) Card/USB Device or the unit. If it doesn't work, please check if the direction is correct.
- Before replacing MMC (SD) Card/USB Device, make sure the unit has been powered off.
- You also need to download the desired files in AVI (Video)/MP3 (Music)/JPEG (Picture) into the MMC(SD) Card/USB Device before insert into the unit.

SYSTEM SETUP

Press the SETUP Button on Remote Control (or press and hold the VOL +/SETUP Button on the unit), and the setting menu will appear on the screen as below.

Setting	
Language	English >
Video Output	NTSC >
Power Resume	On >
Disc	>
Backlight	On >

Press the ▲ or ▼ button on the unit or Remote Control to move the next page as below:

Setting	
Sleep	Off >
Display Effect	Standard >
Custom Display Effect	>
Product Information	>
Restore Factory Settings	>

Use the direction ◀, ▶, ▲, ▼ buttons on the unit or Remote Control to select and highlight the function you need to set or reset.

Press the OK Button on the Remote Control or press the OK/▶|| Button on the unit to enter the selection. Press the STOP Button on Remote Control (or press and hold the VOL +/SETUP Button on the unit) to save the settings and back to upper submenu, or exit.

Below is a chart listing the options under each submenu. Note that the options vary with the features of the inserted disc.

Menu	Options
Language	English, Spanish, French, German
Video Output	NTSC, PAL
Power Resume	On, Off
Disc	Audio Language, Subtitle Language, Menu Language, Password, Rating
Backlight	On, 10 Seconds, 30 Seconds, 60 Seconds, 90 Seconds
Sleep	Off, 10 Minutes, 20 Minutes, 30 Minutes, 1 Hour, 2 Hour
Display Effect	Standard, Movie, Night, Soft, Showy
Custom Display Effect	Brightness, Contrast, Hue, Saturation, Sharpness
Product Information	-- --
Restore Factory Settings	Restore Factory Settings

SYSTEM SETUP

LANGUAGE: Choose one language as the interface language, and the default is English.

VIDEO OUTPUT: This option is used when connecting the player to the TV. The TV system in US, Canada and Mexico is NTSC.

POWER RESUME: If set it to on, the player will start playback from the position where the disc was stopped last time.

DISC: Set the languages of Audio, Subtitle and Menu of the being played movie. This function may be invalid due to features of the disc.

BACKLIGHT: The backlight of screen will be turned off after the time of the selected option when the player is stopped and no touch of the buttons on the unit or the remote. Press DISPLAY ON/OFF button on the remote control to resume.

SLEEP: The player will turn to Standby mode after the time of the selected option. Press the POWER button to resume.

DISPLAY EFFECT: Select your desired option for improving the visual effect.

CUSTOM DISPLAY EFFECT: Customize the display effect exactly as you wish. Operate it as the method adjusting Brightness in the Chapter of OPERATION/Playback Options Control/When watching movies. **PRODUCT INFORMATION:** To view the software version.

PRODUCT INFORMATION: To view the software version.

RESTORE FACTORY SETTINGS: Back to default settings (not including the modified password and the view rating)

How to change the password

1. Press the SETUP button on the remote control, then select DISC, Password, Change with ▲, ▼ and OK buttons.
2. Follow the screen hints to change the password (default password: 0000)

How to change the rating

1. Press the SETUP button on the remote control, then select DISC, Rating with ▲, ▼ and OK buttons.
2. Select the desired rating, then input the password on the window popped out. Press the OK button.


Rate Level:		
1	Kid Safe	Kid safe
2	G	All ages
3	PG	Parental Guidance
4	PG13	Parental Guidance less than 13 years old
5	PG-R	Under 17 years old, Parental Guidance suggested
6	R	Under 17 years old, Parental Guidance strongly
7	NC-17	17 years old or above
8	Adult	Adult only

CARE AND MAINTENANCE


Caring for disc

Treat the disc carefully. Handle the disc only by its edges.

 Never allow your fingers to contact with the shiny, unprinted side of the disc.

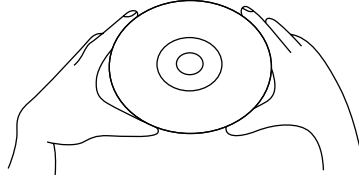

- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

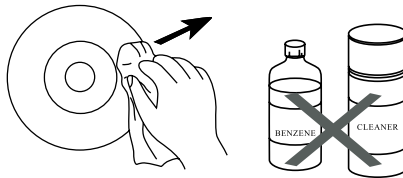

- Discs should be stored in their cases after each use to avoid damage.
- Do not expose discs to direct sunlight, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink, may damage the surface.

Cleaning the Unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

TROUBLESHOOTING GUIDE

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power.	Built-in battery drained	Recharge the battery as page 12. During charging, you can also play DVD/CD disc.
Disc cannot be play.	Condensation has formed.	Wait for about one to two hours until the player is dry.
	Wrong type of discs or the disc is corrupted.	Try other discs.
	The disc is dirty or inserted incorrectly.	Clean disc and insert with label side up.
No picture and/or no sound.	The connection cables are not connected correctly.	Reconnect the cables as page 14.
	The connected TV power is off.	Turn on TV.
Playback picture rolling.	Color system of the player has wrong settings.	Select the proper color television system (NTSC or PAL) under the Setting Menu/ Video Output.
Picture quality no good.	The disc is dirty.	Clean the disc.
Remote control not working.	The batteries are weak or dead.	Replace batteries.
	The batteries are not installed properly.	Install batteries as the polarity markings inside battery compartment.
	The remote is not aimed at the sensor.	Aim the remote to the sensor.
	Distance is too far.	Operate within 16 feet.
	There is an obstacle in the path of the beam.	Remove obstacle.
The unit does not start playback.	DVD not inserted, or inserted up-side-down.	Insert DVD disc correctly.
	A non-playable disc is inserted.	Try other CD, DVD discs.
	The disc is not placed on the tray.	Place the disc on the disc tray with label side face up.
	The disc is dirty.	Clean the disc.
Some functions do not operate.	Some features and functions are not available on the current discs.	Try other discs.
Password has been forgotten.		Call the customer service.

SPECIFICATIONS

Power Source: Built-in 7.4V $\approx$ 2500mAh (18.5WH) Lithium-ion rechargeable battery, recharge by 12.0V $\approx$ 1.0A $\diamond \bullet \diamond$ through the DC IN Jack

Power Source of Remote Control: 3V $\approx$, 2 x AAA Size Batteries (included)

Disc Compatibility: CD/CD-R/CD-RW/
DVD/DVD+R/DVD-R/DVD+RW/DVD-RW/
MP3/JPEG

ACCESSORIES

1×AC Adapter
1×Remote Control
1×AV Cable
1×Car Adapter
1×Mounting Strap
1×Earphone 1×Manual

 
SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE




is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

Mounting Strap Usage Guide


1. Screen swivel 180 degrees.

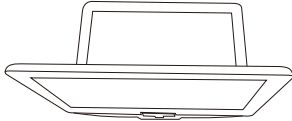

 
2. Put the strap on the operation panel.

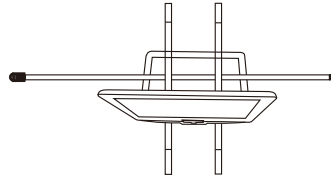

 
3. Fasten the loop and hook at the bottom.

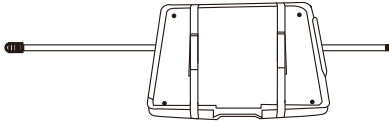

 
4. Put the strap across headrest frame.

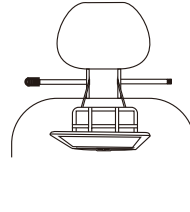

 
5. Put one end of strap across the lock.

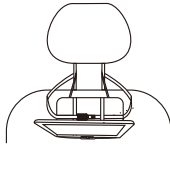

 6. Pull the strap at the direction of the arrow.

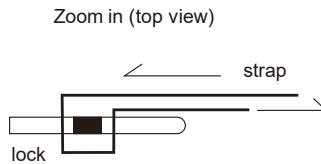

 7. Swivel the screen to the operation panel.

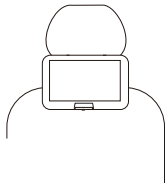

Done!

OTIC[®]

Get 24/7 Assistance at



Use camera or QR scanner to scan

Visit: <https://otic afterservice.vip>

Call: +1 (833) 970 1885 (Toll-free)

Email: otic@afterservice.vip