

说明书

大小: **210*148mm**

材质: **80g**书纸

颜色: 黑白印刷

用量: **1pc**

品号3020302091




MONUMENT
VWRP-5001
8-IN-1 Wood Music Center



Instruction Manual

Please read carefully before use and keep for future reference

WARNING

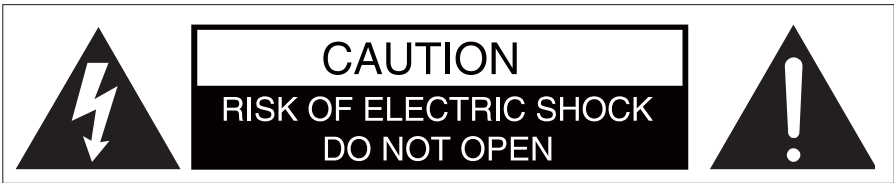

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.

11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



12. Unplug the apparatus during lighting storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
16. The use of the equipment in moderate climate.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. Do not place open flame sources, such as lighted candles, on the apparatus.
19. The symbol with $\sim$ indicates AC voltage.
20. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

TABLE OF CONTENTS

FEATURES.....	6
SPECIFICATIONS	6
PRODUCT OVERVIEW	7
SETUP & BASIC OPERATION.....	8
RADIO OPERATION.....	9
CD OPERATION.....	9
AUX IN OPERATION.....	10
USB OPERATION	10
CASSETTE TAPE OPERATION	11
VINYL RECORD OPERATION	12
BLUETOOTH® OPERATION	13
CARE & MAINTENANCE	14
TROUBLESHOOTING GUIDE	17
FCC NOTICE.....	18
CAUTION ON MODIFICATIONS	18
SUPPORT.....	19

FEATURES

The Monument 8-in-1 Wood Music Center features a great retro design and solid wood construction. With a 3 Speed turntable, CD & Cassette Player the Monument is ready to play all your music! The Dual Bluetooth feature allows streaming of your music to an external speaker. Record and playback all your favorite songs with the built in USB player & recorder. Also features built in Speakers & AM/FM Radio.

- 3-Speed record player with Auto Return will play 33 1/3, 45, 78 rpm records
- Bluetooth In connectivity allows you to stream music from another source up to 33 feet away
- Bluetooth Out Connectivity allows you to stream vinyl playback through any external Bluetooth Speaker
- CD & Cassette Player and AM/FM Radio
- USB Input for Playback & One Touch Recording of your favorite Music
- Built in Stereo Speakers for playback convenience
- Includes a 3.5mm Aux input for additional connectivity options

SPECIFICATIONS

Product Name	MONUMENT (8-in-1 Wood Music Center)
Turntable Speed	33 1/3, 45, 78 RPM
FM Frequency Range	87.5 - 108 MHz
FM Station Memory	Up to 20
AM Frequency Range	520 - 1710KHz
AM Station Memory	Up to 20
Bluetooth® Version	V5.1
Bluetooth® Transmission Distance	Up to 33 feet (10 Meters)*
Rated Frequency	2.4GHz
Input	Aux In, USB
Output	Line Out
Built-in Speakers	3" x 2
Power Output	3W x 2
Power Source	AC/DC 100-240V~ 50/60Hz 12V 1.5A
Accessories Included	45 RPM Adapter, Aux In Cable, Power Adapter, User Manual, Quick Set Up Guide, Warranty Card


* Distance may vary depending on any objects or interference between devices.

**SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE
WITHOUT NOTICE**

PRODUCT OVERVIEW


Turntable

1. Turntable Platter
2. Turntable Spindle
3. Transport Screw
4. Cue Lever
5. Speed Selector
6. Hold Down Clip
7. Tone Arm

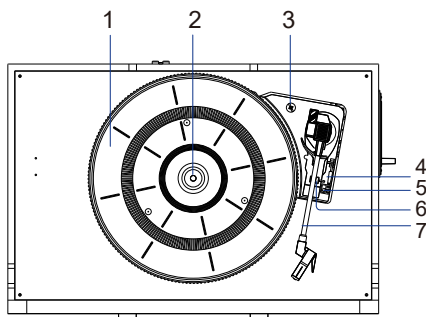


Front Panel

1. USB Port
2. CD Door
3. BT(Bluetooth) Out Indicator
4. AUX IN Jack
5. POWER Button
6. Function Knob
7. RECORD/ERASE Button
8. OPEN/CLOSE Button
9. REPEAT Button
10. Rewind/Previous Button
11. FM/AM Button
12. Display
13. USB/MP3/DISC/FOLDER Button
14. Fast Forward/Next Button
15. STOP/PAIR Button
16. PROG/MEMORY Button
17. PL/PA/BT OUT Button
18. Volume Knob

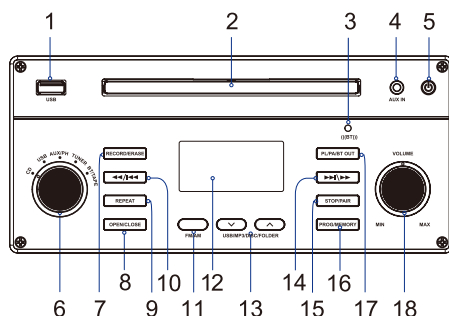

Back Panel

1. FM ANTENNA
2. LINE OUT Jack
3. DC IN Jack
4. Cassette Eject/Fast Forward Button

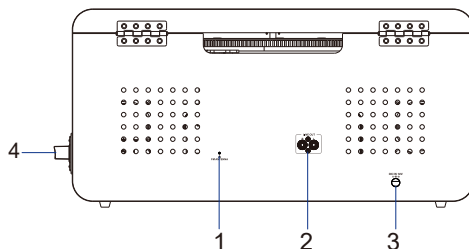


SETUP & BASIC OPERATION

Essential Setup

1. Unpack the unit and remove all packaging materials.
2. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
3. Plug the power adapter into the electrical outlet and connect other end to the back of the unit.
4. Press the **POWER** button on the upper right corner of the front panel. The display will light up in amber background, and the playback mode will appear on the display.
5. When the unit is playing music, the playback message will appear on the display.

To Open Turntable Cover:

1. Lift the turntable cover all the way up until it stops.
2. Lower the cover slowly until the latch engages. If the latch does not engage, pull the lower bar by hand.
3. The cover will now stay open.

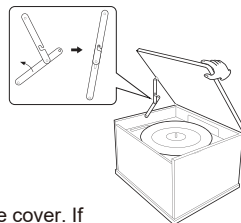

To Close Turntable Cover:

1. Lift the turntable cover all the way up until it stops.
2. The latch should disengage and you may now slowly lower the cover. If the latch does not disengage, push out the lower bar by hand.

Note: Make sure you hold the cover to avoid pinching your fingers as it closes.

Common Playback Control

- Press the **PL/PA/BT OUT** button to play or pause the playback.
- Press the **◀/1/4◀** or **▶/1/4▶** button to skip to previous or next track.
- To search for a part of track: press and hold the **◀/1/4◀** or **▶/1/4▶** button and release it when the part you want is found.
- Search for a folder, press the **USB/MP3/DISC/FOLDER** buttons to choose the folder.
- Press the **STOP/PAIR** button to stop playing.

Note: These controls do NOT always function in specified playback mode.

Repeat Function

Press **REPEAT** button:

- one time, to repeat the current track.
- two times, to repeat the current folder.
- three times, to repeat all tracks of the disc.
- four times, to cancel the repeat function.

Note: This feature functions in CD and USB mode.

Program Function

This function enables you to set the playback of tracks into an ordered playlist.


1. Press the **STOP/PAIR** button; then press the **PROG/MEMORY** button to activate the program feature. The display will show "MEMORY", "P01" and blinking "00".
2. Press the **◀/1/4◀** or **▶/1/4▶** button to select your track.
3. Press the **PROG/MEMORY** button again to confirm.
4. Repeat the step 2 and 3 to program other tracks.
5. After finished, press the **PL/PA/BT OUT** button to start playback.
6. Press the **STOP/PAIR** button once to stop.
7. Press the **STOP/PAIR** button twice to erase the programmed track, and "MEMORY" will disappear from the display.

Note:

- This feature functions in CD and USB mode.
- This unit can program up to 20 tracks.
- Turning the unit off or switching to other modes by turning the **Function Knob** will automatically erase the programmed playlist.

RADIO OPERATION

1. Set the Function knob to **TUNER** position.

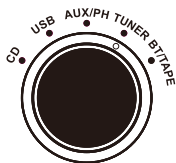

2. Press the **FM/AM** button to receive AM or FM signals. Note to extend the FM antennae when you want to listen to FM stations.
3. Press and hold the ◀◀/▶▶ or ▶▶/◀◀ button to search for available stations.
4. Adjust the volume by switching the **Volume** knob.
5. You can store your favorite station to the unit and listen to it conveniently by following steps:
 - a. When you are listening to a radio channel, press **PROG/MEMORY** button, "MEMORY" will appear and blink on the display.
 - b. Press ▼ or ▲ button to select a number as the serial number of the current channel.
 - c. Press **PROG/MEMORY** button again to confirm.
 - d. Repeat the a-c steps to store other your favorite radio channels.
 - e. To listen to the stored radio channels, just press ▼ or ▲ button to select the serial number of your favorite radio channel.

You can improve the signal receiving strength by:

- Extending the FM Antenna to a higher position.
- Turn the unit to face different directions.
- Move the unit to a different place.
- Connect the FM Antenna to your outdoor antenna.

CD OPERATION

1. Set the Function knob to **CD** position.



2. Press the **OPEN/CLOSE** button to open the disc tray.
3. Place your desired audio CD on the tray with its label side up.
4. Press the **OPEN/CLOSE** button to close the disc tray.
5. The CD will start to play automatically.


Note:

- Do not pull or push the disc tray manually.
- Ensure the disc is placed in the center of the disc tray with its label side up.
- Be sure the inserted disc is an Audio CD / MP3 CD, not DVD or any other type of disc.

AUX IN OPERATION

With the AUX IN function, you can play music from an external device on the speakers of your VWRP-5001.

1. Insert one end of the 3.5mm AUX in cable into the **AUX IN** jack on the upper right of the front control panel, the other end to your playing device.

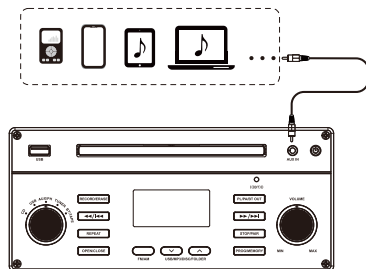

2. Set the Function Knob to **AUX/PH** position.



3. Start to play your favorite music on your playing device.

USB OPERATION

1. Set the Function knob to **USB** position.



2. Insert a USB device (only with .mp3 audio files) to the **USB** port.
3. The unit will start playback automatically.
4. Use the volume and control buttons to control playback.

Note: Control buttons may not work with all USB devices due to manufacturing differences.

Recording with USB

With this function you can record music from your player onto a USB device in .mp3 format.

1. Insert a USB device into the **USB** port.
2. Play music in the CD, AUX, Phono, BT or Tape mode.