

Follow Me

Never lose track of your portable valuables!

Great for traveling! Attach the signal transmitter to your briefcase, notebook computer, or any other valuable items. Carry the receiver with you on your key chain.

FEATURES:

- A precise, mini electronic guarding system.
- Perfect for safeguarding your valuable items, including Cellular Phones, Notebooks, briefcases, hand bags....etc.
- Rechargeable function eliminates replacement headaches and saves money.

PRODUCT INCLUDES:

- 1pc Transmitter (TX) (Attached to your valuable)
- 1pc Receiver (RX) (Attached to your person)
- 1pc Rechargeable Base
- 1pc AC Adaptor

OPERATING INSTRUCTIONS:

1. Turn on the Receiver (RX) unit. The red LED light will illuminate and you will hear a long beep followed by continuous short beeps. Now, the RX is ready to cooperate with Transmitter (TX) unit by learning its code.
2. Turn on the TX unit. You will hear a fast beep signal consisting of one long and one short beep. After this, the beeping sounds will stop. This indicates that the TX has successfully connected with the RX. Both red LED lights will blink simultaneously. On the other hand, if you still hear continuous beeps, you should turn both the TX & the RX off and on again to link their codes together.
3. Once the connection between the two units has been activated, you should attach the RX to your person (ie: on your key chain in your pocket) and the TX to your valuable possession (Cell phone, Notebook computer, wallet, etc.). Separating the two units by more than 6-15 feet (about 2-5 meters) will trigger 3 short beeps to sound continuously in order to remind you that you are away from your valuable. Range may vary from place to place.
4. Recharge both the RX & the TX if RX beep sounds become weak, or if their responding distance becomes shorter.
5. Always turn both units off when recharging their batteries.
6. The Rechargeable Base red LED light will illuminate during the recharging process. When the red LED light turns to green, this indicates that the RX or the TX is fully charged.

Note:

- To follow its IC process, always turn on the RX first and the TX second.
- When you accidentally turn off either the RX or the TX during operation, you must turn off both units and start from the first steps of the operation as instructed above.
- Please keep the RX & the TX separated by at least 2/3 feet (20cm) during learning code status. This is the minimum distance required.
- The batteries' duration after each recharge will be around two weeks depending upon usage.
- Always turn both the TX & the RX to the off position when not in use.
- Always disconnect the AC adapter after recharging.
- Do not use this device when on board an airplane.
- Do not use this device in the rain.

WARNING:

Do not use any other AC Adapter with this FOLLOW ME. Furthermore do not use this Ac Adapter with any other products.

FCC ID : OLA - DX-147

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.