

**POCSAG PAGER**  
**CAROL**  
**USER'S MANUAL**

---

## Table of Contents

---

This device complies with Part 15 of FCC Rules.  
Operation is subject to the condition that this device does not cause harmful interference.

**CAUTION :** Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- 1. Feature**
- 2. Buttons and Displays**
- 3. Self Test**
- 4. Pager Operation**
  - 1) Switching to Function Mode
  - 2) Selecting Message Receive Alert
  - 3) Power Off
  - 4) Time / Clock Setting
  - 5) Alarm Setting
  - 6) Automatic Power ON/OFF Function
  - 7) Message Reception and Duplicate Message Detection
  - 8) Reading Received Message
  - 9) Received Message Lock
  - 10) Erasing All Received or Locked Message
  - 11) Reading Locked Message
  - 12) Erasing Individual of Received and Locked Message
  - 13) Battery Replacement Display
  - 14) Night Light Function
  - 15) Unread Message Alert
  - 16) Reception Area Display
  - 17) Date, Day and Time Display

## Function Description

### 1. Feature

- Low battery indication
- Duplicate message indication
- Unread message reminder
- Reception area indication
- Time stamp indication
- Individual message erase
- All message erase
- Up to 15 message lock
- Up to 18 message storage
- Alarm
- Message reception alert selection (Beep / Melody / Vibrator / Silent)

### 2. Buttons and Displays

#### 1) Buttons

The pager is constructed of 2 buttons; Menu / Mode and Select / Read button.

#### 2) Menu / Mode ( ) button

- A. Switch to Function Mode
- B. Switch to next menu in Function Mode
- C. Change setting
- D. Read locked message / Exit
- E. Switch to Lock and erase mode during Received Message Read
- F. Switch to reception mode during Time Stamp Read of received / locked message
- G. Manual power on in power off mode

#### 3) Select / Read ( ▶ ) button

- A. Selection setting in each menu of the Function Mode
- B. Switch to next selection in each menu of Function Mode
- C. Read received or locked message
- D. Erasing of each individual received / locked message


#### 4) Display window

LCD consists of 12 digit message display and each option and message setting icon display.

- Note : the LCD display for each function may differ from the actual LCD.

### 3. Self Test

- 1) This function is to display pager setting information to the user.
- 2) When ( ) button is pressed for more than 1 seconds when inserting battery, pager enters Self Test mode and “SELF TEST” is displayed on the LCD.
- 3) Self Test is proceeded in the following order upon each ( ) button press.

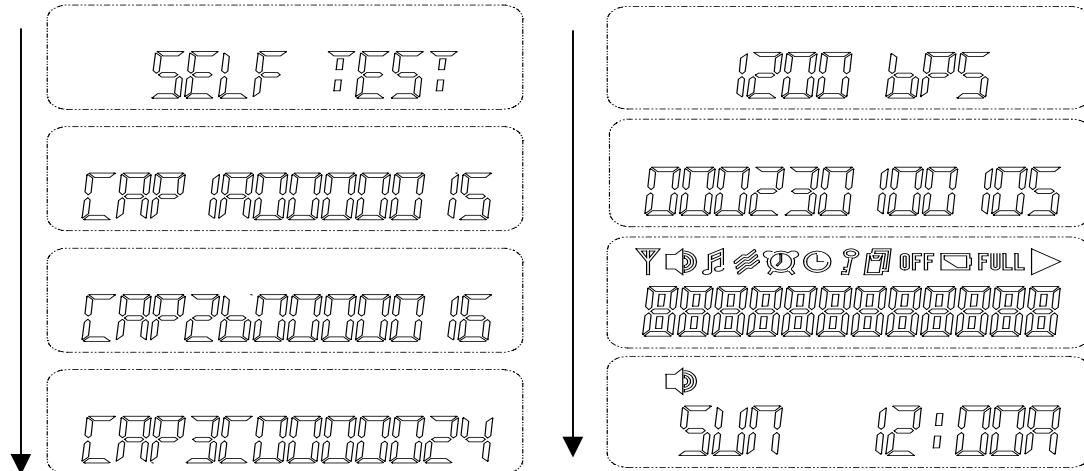

- 4) Each CAP CODE cannot be the same (duplicate) and is displayed as many as the number of actual entry.
- 5) Decoder Option Value, PLL Option Value, Setup Time of BS3 and BS1 are displayed.
- 6) After Self-Test mode sequence is completed, pager automatically enters into normal reception mode.

## 4. Pager Operation


### 1) Switching to Function Mode

- A. When ( ) button is pressed for more than 2 seconds in reception mode, pager switches to Function Mode with a beep.
- B. Functions are selected with each ( ) button press in the following order :  
TONE? MELODY? VIBRATE? SILENT? ERASE ALL? SET  
TIME? SET ALARM? SET AUTO? STOP WATCH? POWER OFF?  
Standby

### 2) Selecting Tone (TONE?)

There are 5 types of tones and the selection is as follows :

- A. Switch to Function Mode from reception mode by pressing ( ) button for 2 seconds.
- B. Switch to selection mode by pressing ( ▶ ) button while “TONE?” is displayed.
- C. Pager waits for selection after simple generation of the displayed tone following each ( ) button press.
- D. Desired tone is selected by pressing ( ▶ ) button while desired tone type is displayed and enters reception mode.
- E. When tone 4 is selected, different tone is generated depending on the Call Type (Function Bit) \*(Please refer to 4. Note).

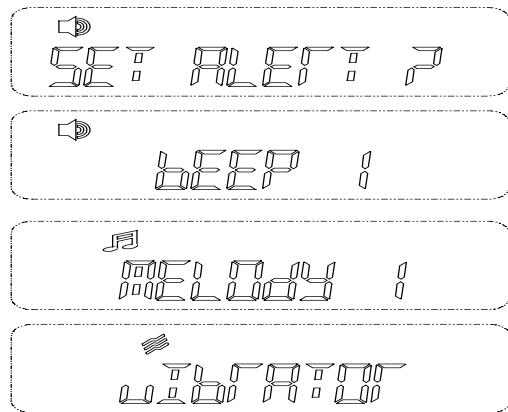

### 3) Selecting Melody (MELODY?)

There are 5 types of melodies and the selection is as follows :

- A. Switch to Function Mode from reception mode by pressing ( ) button for 2 seconds.
- B. Switch to selection mode by pressing ( ▶ ) button while “MELODY?” is displayed.
- C. Pager waits for selection after simple generation of the displayed melody following each ( ) button press.
- D. Desired tone is selected by pressing ( ▶ ) button while desired melody type is displayed and enters reception mode.

### 4) Selecting Vibrate (VIBRATE?)

The selection is as follows :

- A. Switch to Function Mode from reception mode by pressing ( ) button for 2 seconds.
- B. Switch to selection mode by pressing ( ▶ ) button while “VIBRATE?” is displayed.
- C. The pager vibrates for 1 second and enters reception mode.


### 5) Selecting Silent (SILENT?)

The selection is as follows :

- A. Switch to Function Mode from reception mode by pressing ( ) button for 2 seconds.
- B. Pressing ( ▶ ) button make the selection while “SILENT?” is displayed and the pager enters reception mode.


#### 6) Time / Clock Setting (SET TIME?)

- A. Forward to “SET TIME?” menu after entering Function Mode.
- B. When ( ▶ ) button is pressed at “SET TIME?” menu, time is displayed in “01-01 12:00A” format starting with blinking date (day of the week).
- C. Whenever ( ▶ ) button is pressed, the blink moves in date (day of the week), time, minute order.
- D. Desired setting is selected by pressing ( ) button while desired option is being blinked.
- E. The date setting menu (month, day) will be active according to option setting.

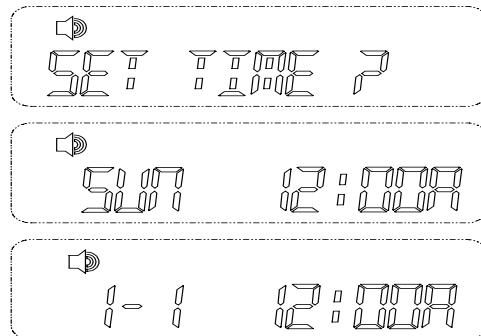


#### 7) Alarm Setting (SET ALARM?)

- A. Forward to “SET ALARM?” menu after entering Function Mode.
- B. “AL ON/OFF 12:00A?” is displayed when ( ▶ ) button is pressed in “SET ALARM?” menu, and the display toggles between ON and OFF with ( ) button press.
- C. When ( ▶ ) button is pressed in “ON ALARM?” state, the time section blinking.
- D. Desired alarm time is set as the method in 6).
- E. When ( ▶ ) button is pressed in “OFF ALARM?” state, alarm is turned off and switches to reception mode.
- F. Alarm alerting will be active in the stand by or power off mode.

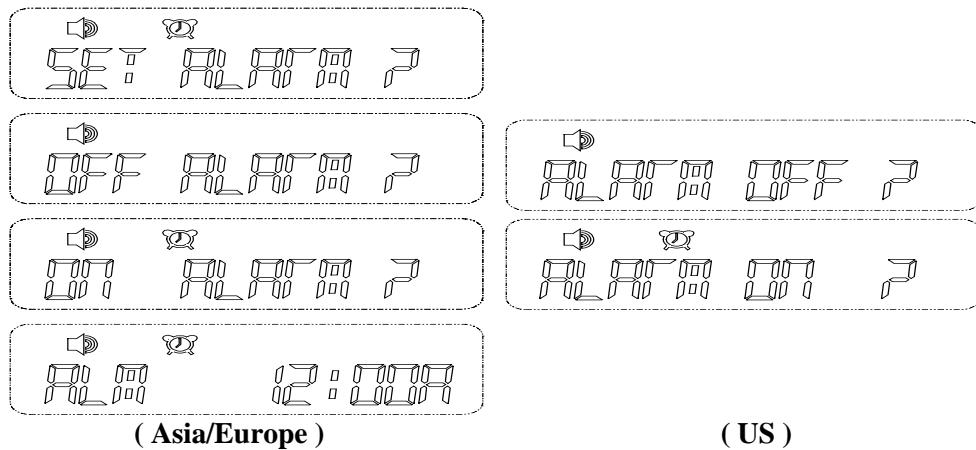

## 8) Automatic Power ON/OFF Function (SET AUTO?)

- A. This is the function to turn pager on and off automatically at a preset time.
- B. Forward to “SET AUTO?” menu by pressing ( ) button in Function Mode.
- C. “ON/OFF AUTO?” will be displayed when ( ▶ ) button is pressed in “SET AUTO?” menu, and display toggles between ON and OFF with ( ) button.
- D. When ( ▶ ) button is pressed in “ON AUTO?” state, this function is enabled and pager returns to reception state after setting on and off time using the method in 6).
- E. When ( ▶ ) button is pressed in “OFF AUTO?” state, this function is disabled and pager returns to reception state.

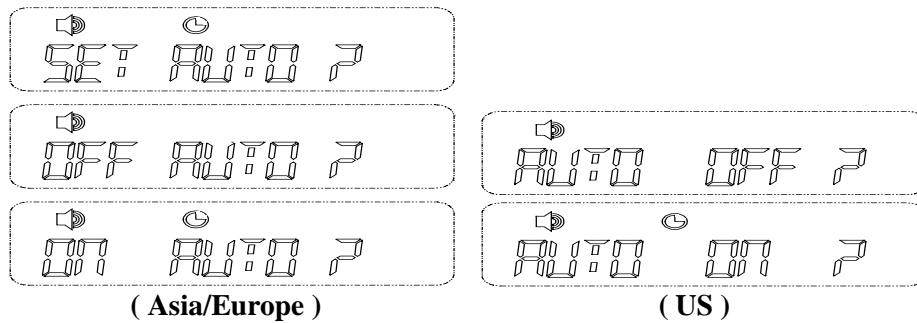


## 9) Message Reception and Duplicate Message Detection

- A. When message is received, the user is notified with the appropriate alert that has been selected.
- B. Alert is stopped when a key is pressed during message receive alert.
- C. If a duplicate message is received 'Duplicate Icon' will be displayed.


## 10) Reading Received Message

- A. Whenever (►) button is pressed to read received messages, message number, time stamp, and message will be displayed starting in newest message to oldest order.
- B. If there are unread messages, it will be read according to numbered order with unread flag, and then return to stand by mode.
- C. For messages longer than 12 digits, ‘► icon’ will be displayed, and the continued message will be displayed when (►) button is pressed.
- D. When there are not any messages received, “NO PAGE” will be displayed.

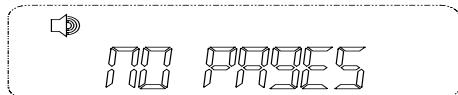


**11) Received Message Lock**

- A. When ( ) button is pressed while reading received messages (message is being displayed, not time stamp), “LOCK?” will be displayed. Pressing ( ▶ ) button will lock the message and “LOCKED” will be displayed. ‘Lock icon’ will be displayed also.
- B. Maximum of 15 messages can be locked.
- C. When all 15 messages have been locked, “LOCKED FULL” will be displayed.
- D. “TONE ONLY” message cannot be locked.
- E. Lock will not function after “LOCKED FULL” until one or more of the locked messages are erased.

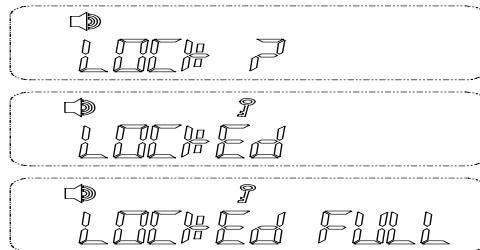**12) Erasing All Received or Locked Message**

- A. Forward to “ERASE ALL?” menu by pressing ( ) button in Function Mode.
- B. “GENERAL?” will be displayed when ( ▶ ) button is pressed while “ERASE ALL?” is being displayed. In this state, pressing ( ) button will display “LOCKED?”.
- C. When ( ▶ ) button is pressed during “GENERAL?” display, “REALLY?” will be displayed. In this state, pressing ( ▶ ) button again will erase all unlocked messages and “ALL ERASED” will be displayed.
- D. When ( ▶ ) button is pressed during “LOCKED?” display, “REALLY?” will be displayed. In this state, pressing ( ▶ ) button again will erase all locked messages and “ALL ERASED” will be displayed.
- E. If there are not any messages to be erased, pager will switch directly to reception

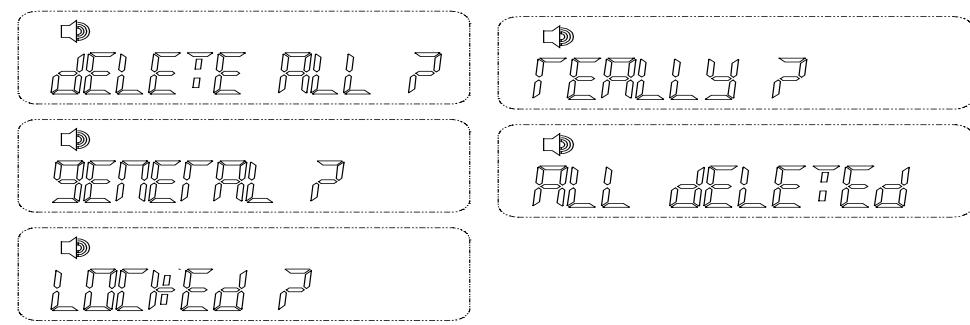


**13) Reading Locked Message**

- A. In order to read locked messages, there should be no unread messages.
- B. Pressing ( ) button in reception mode displays number of locked messages and enters locked message read mode.
- C. Pressing ( ) button again exits locked message read mode.
- D. Pressing ( ▶ ) button in locked message read mode displays message number, time stamp, and message will be displayed starting in newest message to oldest order.
- E. For messages longer than 12 digits, ‘▶’ icon will be displayed, and the continued message will be displayed when ( ▶ ) button is pressed.
- F. When there are not any locked messages, locked message read mode cannot be entered at all.


**14) Erasing Individual Received and Locked Message**

- A. When ( ) button is pressed while reading received/locked messages (message is being displayed, not time stamp), “ERASE?” will be displayed. Pressing ( ▶ ) button will erase the message being read and “ERASED” will be displayed.
- B. There is not any function for unlocking locked messages.

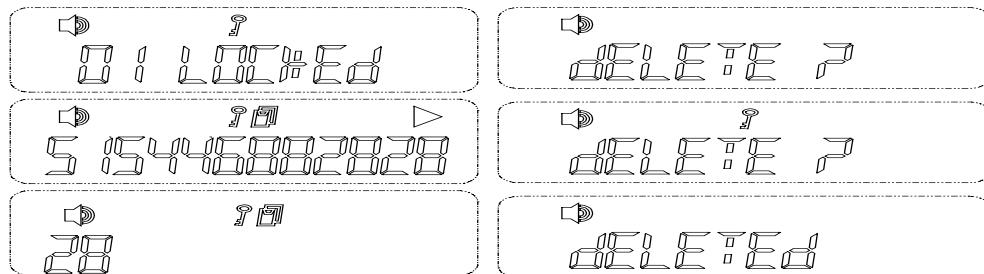**15) Power Off (POWER OFF?)**

Pager switches to Power Off mode when ( ▶ ) button is pressed after forwarding to “POWER OFF?” menu from reception mode.


- A. No message can be received and the antenna icon disappears.
- B. Alarm is the only active function in this mode.

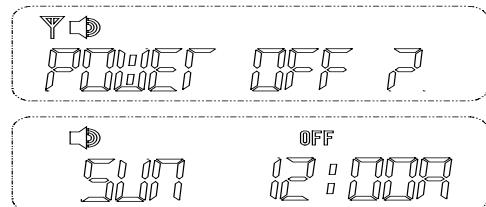**16) Memory Capacity**

- A. The maximum number of messages that can be received is 18 (20 characters each).
- B. If more than the maximum number of message is received, the new message is stored by erasing the oldest message first.

### 17) Battery Replacement Display

A. If Low Battery signal is detected for more than 1 minute 'Low Battery icon' will be displayed and alerted once for first 4 seconds.

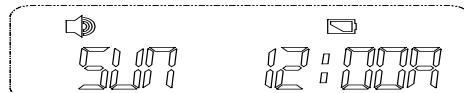


B. This is displayed until the battery is replaced. (This may differ upon the option setting)  
 C. All EEPROM write is prohibited during Low Battery.

### 18) Night Light Function

A. When any button is pressed in reception mode, lamp will switch on and switch off 8 seconds later when no key is pressed.  
 B. Lamp will be switched off automatically when returned to reception mode

### 19) Unread Message Alert

If you do not read a message when it is received, the pager will sound a single long beep or vibrate for 1 second, (depending on the alert setting) once every 3 minutes to remind you of the message.

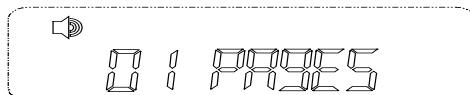

- ✓ This function will be disabled in the power off mode and during other alert generation such as alarm.

### 20) Reception Area Display

A. If located within reception area or pager receives a message, 'Antenna icon' is displayed or removed depending on the antenna option.  
 B. Antenna option is as follows :  
 - Option 1 ----- Sync Code Detect → Display 'Antenna icon'  
 - Option 2 ----- Out of Range → Display 'Antenna icon'

### 21) Date, Day and Time Display

Various types of timer display mode are supported according to option.

