



INSTALLING MONITOR DRIVER

Once the monitor driver is installed, resolution and frequency is set to accommodate the monitor, therefore providing a clear screen.

In order to purchase a separate driver, refer to our homepage.

• Internet: <http://www.imri.co.kr>

<Windows Monitor Installing Program>

This file explains how to install the monitor driver on Windows. Follow the following procedures.

Caution: Check the type of the monitor before you install the driver. (If the driver is improperly installed, the frequency may be increased or decreased, possibly deactivating resolution)

1. WINDOWS 95/98/2000

1) Auto Install

Put in the install diskette.
Run "install.exe" (using Search programs)

Select the model name of your monitor. Select "OK."

When the window "Put in disk" appears on the screen, press on the ok button and select the route of the install diskette in the file location slot. (ex- A: \) (It could be automatically installed without the "put in disk" window) When a window that indicates that SETUP has been completed, press the "OK" button.

When the window "Restart the system?" press 'yes' for accurate setting.

2) Manually Installing

- With the mouse pointer on the Windows desktop, select registration info by right clicking.

- Select the "set" button and select the "Advanced Registration Info" button.
- Select "monitor" and press the "Change" button.
- Press "next" in the update master window.
- After making a driver list, select the desired driver and press 'next.'
- After inserting the diskette, set the directory and press the ok button.
(if you are not sure of the route location of the driver, press 'find')
- When the 'select model' window appears, select your monitor model and press 'next.'
- When the window 'completed installation of selected driver' press 'finish,' 'close', 'ok', and exit the display setting menu.

BASIC SCREEN CONTROL



• TO BRIGHTNESS THE SCREEN

MENU  → BRIGHTNESS  → SET  → control with(+,-) 

• You can control the brightness of the screen.


• TO CLARIFY THE SCREEN

MENU  → CONTRAST  → SET  → control with(+,-) 

• You can control the contrast of the images or letters on the screen.

• ADJUSTMENT SCREEN COLOR

MENU  → COLOR  → select 

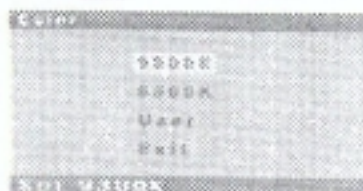

• You can select screen color temperature

(6500K/9300K) and control color in selecting USER mode.

SCREEN CONTROL

• AUTO ADJUST

MENU  → AUTO ADJUST  → SET 

• You can automatically control the monitor to the best compatible state.


• VIEWING MONITOR INFO

MENU  → INFORMATION  → SET 

• You can view vertical/horizontal frequency info and resolution.

• EXPAND

MENU  → EXPAND  → SET  → SUB OSD MENU

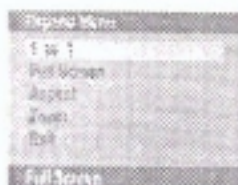

- 1 to 1-You can see the original resolution.
- full screen-You can expand the screen size for 1280x1024 mode.
- Aspect-You can expand the displayed picture around 4 times as big as the original resolution within the range of screen.
- Zoom-You can adjust the screen size at your convenience.
- Exit-You can leave the Expand Menu.

• ADJUSTMENT POSITION

MENU  → POSITION →  OR  → SET  →

CONTROL WITH (+,-) 

• CONTROLLING SCREEN NOISE

MENU  → POSITION  /  OR  → SET 

CONTROL WITH (+,-) 

CONTROLLING OTHER FUNCTIONS

• TO CLARIFY THE TEXT

MENU  → MISCELLANY  → FILTER  →
SET 

• VIEWING THE MENU LANGUAGE IN DIFFERENT LANGUAGES

MENU  → MISCELLANY  → SET  → LANGUAGE →
SET  → CONTROL WITH (+,-)  → SET 

You can use the menu in five different languages.
(English, German, French, Italian, Spanish)

• TO MOVE THE MENU SCREEN

MENU  → MISCELLANY  → SET  → OSD H-POSITION /
OSD V-POSITION → Control with (+,-)  → SET 

• YOU CAN MOVE THE MENU SCREEN LEFT, RIGHT, UP AND DOWN.

• CONTROLLING DURATION OF MENU SCREEN APPEARANCE

MENU  → MISCELLANY  → SET  → OSD TIME →
CONTROL WITH (+,-)  → SET 

• THE MENU SCREEN DISAPPEARS AT THE AUTO SET TIME.

• IN ORDER TO MAKE ALL MENUS DISAPPEAR, PRESS THE MENU BUT
TON.

• CONTROLLING MENU SCREEN SIZE

MENU  → MISCELLANY  → SET  → OSD SIZE →
CONTROL WITH (+,-)   → SET 

• You can control the size of the screen.


• INITIALIZING SCREEN CONTROL

MENU  → MISCELLANY  → SET  → RECALL → SET 

• Use this in retrieving the initial state.
(only the standard modes are retrieved)

AUDIO FUNCTION CONTROL(OPTION)

MENU  → AUDIO SELECT  → SET 

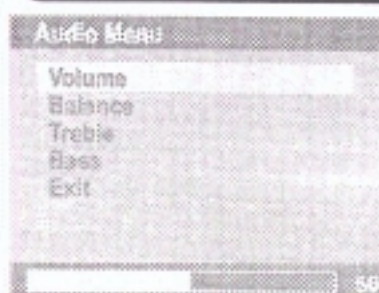

- VOLUME:Control the Volume.
- BALANCE:Control the Volume Balance.
- TREBLE:Treble Adjust
- BASS:Bass Adjust

→ CONTROL WITH(+,-)  

❶ HOT KEY : If you press Down Key on condition that main OSD(On Screen Display) is not being used, you can step into Audio Set-up Menu.

VIDEO/TV FUNCTION SETTING (OPTION)

• SHIFT TO VIDEO MODE

MENU  → PC/VIDEO  → SET  → VIDEO/S-VIDEO → SET 

• User can select and use PC/VIDEO/S-VIDEO/TV Input Function (User's Option)

① HOT KEY : If you press Down Key on condition that main OSD(On Screen Display) is not being used, you can convert mode.

INPUT SELECT FUNCTION

→ PC → VIDEO → S-VIDEO → TV →

* It is possible adjust in the TV mode

• VIDEO/TV COLOR ADJUSTMENT

MENU  → VIDEO → SET  →

BRIGHTNESS/CONTRAST/COLOR/HUE → SET  →

CONTROL WITH (+,-)  → SET 

• VIDEO/S-VIDE/TV COLOR and Adjustment available

• TV SETTING

MENU  → PC/ VIDEO → TV INPUT



US, Korea and other regions with NTSC Broadcasting System must connect PAL-NTSC Connector attached to the monitor.(OPTION)
NTSC Connector Antenna Jack