


WS2811-IT

| | | | |
|----------|---|------------|--|
| SET | Normal mode: Press to toggle between: Wind Speed or Gust and Outdoor Temp or Dew Point. Press and hold for programming menu. Alarm mode: Press to activate or deactivate alarms. Press and hold to change/ set alarm values. | DOWN ARROW | Normal mode: Press to rotate through rain values. Press and hold to start USB sync. Alarm mode: Press to decrease alarm value. |
| UP ARROW | Normal mode: Press to toggle date and seconds. Press and hold to relearn sensors. Min/Max mode: Press to reset value. Alarm mode: Press to increase alarm value. | ALARM | Normal mode: Press to rotate through various alarms. While alarm is sounding: Press to silence alarm (alarm is still active). |

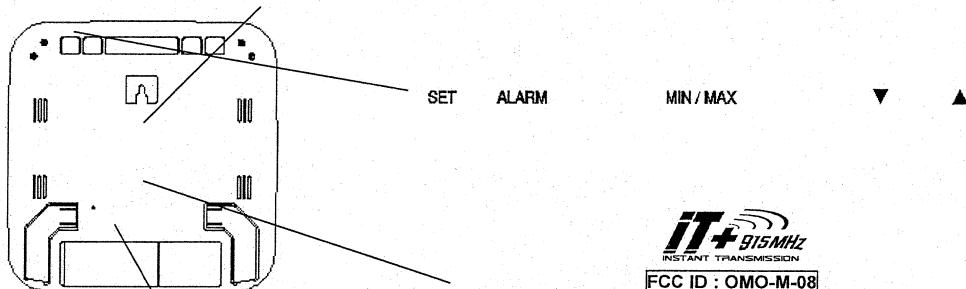

FCC ID : OMO-M-08

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

MODEL: WS2811-IT FREQ. 905MHZ
LA CROSSE TECHNOLOGY MADE IN CHINA

Instructions+PC Software:
www.lacrossetechnology.com/2811

Protected under U.S. Patents
5,978,738; 6,076,044; & 6,597,990

