



FCC ID : OMO-M-14

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

MODEL: WS-2815U-IT

WS-2813U-IT

FREQ. 915 MHz

LA CROSSE TECHNOLOGY

MADE IN CHINA

Instructions+PC Software:

www.lacrossetechnology.com/2815

Protected under U.S. Patents

5,978,738; 6,076,044; & 6,597,990

Transmitter:TX63U/TX58UN/TX59UN



SET

Normal mode:
Press to toggle between: Wind Speed or Gust and Outdoor Temp or Dew Point.
Press and hold for programming menu.
Alarm mode:
Press to activate or deactivate alarms.
Press and hold to change\set alarm values.

UP ARROW

Normal mode:
Press to toggle date and seconds.
Press and hold to relearn sensors.
Min\Max mode:
Press to reset value.
Alarm mode:
Press to increase alarm value.

DOWN ARROW

Normal mode:
Press to rotate through rain values.
Press and hold to start USB sync.
Alarm mode:
Press to decrease alarm value.

ALARM

Normal mode:
Press to rotate through various alarms.
While alarm is sounding:
Press to silence alarm (alarm is still active).

MIN\MAX Press to rotate through various min\max settings.