

Exhibit E..... User's Manual

盈佳機電(長春)有限公司

TRANSPACE TECHNOLOGY (CHANGCHUN), INC.

TC2220 INSTRUCTION MANUAL FOR CODE HOPING CENTRAL DOOR LOCK SYSTEM

1. Unlock :

When pressing small button on transmitter or door switch, and finds

- (1) Central door lock unlocks
- (2) Dome light lights off after 20 seconds. (or KEY ON or press transmitter big button to lock the door)

2. Lock :

When pressing big button on transmitter or door switch, and finds :

- (1) Central door lock locks
- (2) Dome light lights off

3. Re-lock :

After pressing small button to unlock, if doors are not opened within 30 seconds, doors automatically locks.

4. Automatic door unlock when engine is turned off :

When engine is turned off, central door lock system automatically unlock for passenger's convenience to exit the vehicle. (Dome light stays off.)

5. Code-learning, when renewing or adding extra transmitters :

- (1) Turn the car key to KEY ON position.
- (2) Press code-learning switch – S1 of control module **2 times**, when dome light is on, the code-learning status is on.
- (3) Press any button of transmitter needed to be coded **2 times** within 10 seconds, lights off and then on, the code learning is completed. Repeat this step for extra coding.
- (4) If car key turns to KEY ON position and code-learning switch from control module is pressed 2 times, the dome light lights off and system automatically return to normal status if learning action is not taken within 10 seconds,.

Attention :

1. 2 codes memorized in control module for the existing transmitters will be deleted during the process of code-learning.
2. Code learning allows only up to 2 transmitter coding.

NOTE: THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATIONS IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

中國吉林省長春市衛星路 42 號 郵編/130012

No. 42, Wei Xing Road, 130012 Changchun, Jilin Province, CHINA

Tel: (0431)519-1818, 519-1919, 517-4311/12 Fax: (0431)519-1616