


Remote Control

Remote Control Unit

This section describes how to operate the DTR5000N using the buttons on your Remote Control Unit as shown below.

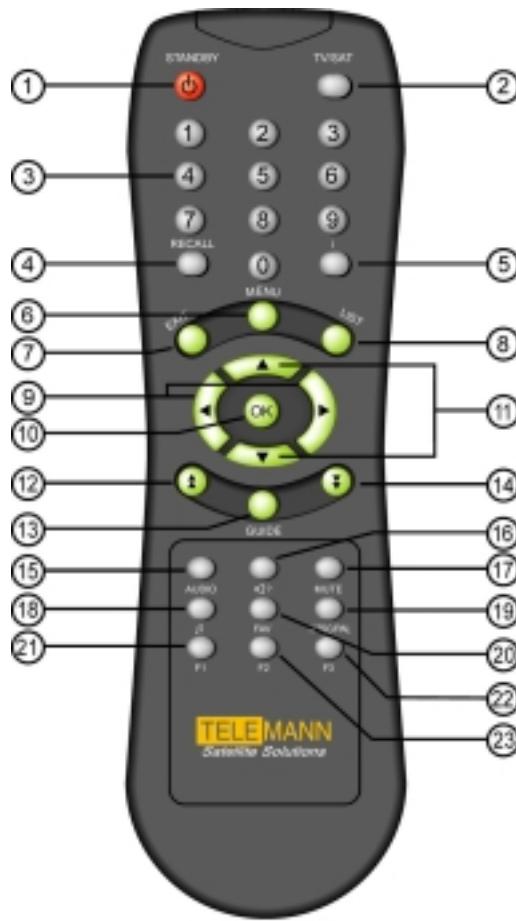

(1) POWER	To turn your DTR5000N on/off.
(2) TV/SAT	To toggle from TV mode to satellite broadcasting mode and vice versa
(3) Number	To select channel number or input parameters on menu.
(4) RECALL	To return back to the previous channel.
(5) i	To display the program information on the screen

(6) MENU	To display the main menu on the screen. Or to move back to previous menu from current menu.
(7) EXIT	To get completely out of menu.
(8) LIST	To list all channels available on the screen
(9) VOL UP/DN	To increase/decrease the volume or select item on menu
(10) OK	To confirm your choices
(11) CH UP/DN	To select a channel
(12) Page UP	To step pages up in the channel list
(13) GUIDE	Program Guide on the screen
(14) Page DOWN	To step pages down in the channel list
(15) AUDIO	To select Audio mode
(16) Language(?)	To select the desired language or Audio PID.
(17) MUTE	To turn the sound on/off
(18) ♪	To select TV, Radio, or Data channel
(19) NTSC/PAL	To convert video mode (NTSC/PAL/AUTO).
(20) FAV	To display Favorite channel list on the screen
(21) F1	Function Key 1 (Add channel)
(22) F2	Function Key 2
(23) F3	Function Key 3 (Delete Channel)

System Set-up

Here, we will go through the menu system, menu by menu. To manipulate the menu, you use mainly the following key strokes : UP/DOWN, Left / Right, OK Menu, Exit

Basic Menu Operation

Key stroke with your remote control

When you want to maneuver the Menu System with remote control, you can use the following key stroke.

UP/DOWN key (▲ ▼)	Moves menu selection up and down
Left / Right key (◀ ▶)	Can change option values
Page Up/Down (▲▼)	Move up/down by page (6 channels)
OK Key (OK)	Selects menus or You can move directly to a certain channel by pressing the channel number.
Menu key	Displays main Menu, Goes to previous menu
Numeric Key	Enters numbers. Or Selects a certain channel by pressing the channel number.
Exit key	Quits the whole Menu
F1, F2, F3	Function Keys. F1 : Add Channels, F3 : Delete Channels

Key stroke with your PC keyboard

When you are connected to the DTR5000N, you should use keyboard to maneuver the Menu System.

The following table explains each key stroke.

UP/DOWN Arrow	Moves menu selection up and down
Left / Right Arrow	Can change option values
Small 'u'/'d'	Move channels up or down by page unit
Enter Key	Selects menus or You can move directly to a certain channel by pressing the channel number.
Numeric Key	Inserts numbers. Or Selects a certain channel by pressing the channel number.
ESC key	Returns to previous menu
Small 'e'	Removes channels from the list
Small 's'	Changes from TV Channel to Radio Channel, and to Data Channel sequentially.
Small 'e'	Removes or adds channels from/to the list

