

Parental Control

PIN Code / TV, Radio, and Data Lock

This function prevents children or unauthorized persons from watching programs or accessing data.

- Select the Parental Control on the Main Menu. Then you will be asked to enter PID number. The PIN code is four digit numbers. Factory default value is 0000.
- Press UP/DOWN key to highlight the program you want, then press OK to have the channel locked so that others who do not know the PID can not watch the program.



- Once the program is locked, every time you try to watch the program, you will be asked to enter PIN code.
- When you push “♪” on the Remote Control, you can select TV, Radio, and Data Guide.

