


## Edit TV Channel

You can delete the unnecessary TV Channels from the registry of DTR5000N.

- In Edit Channel menu, select Edit TV Channel menu. Then the following screen pops up

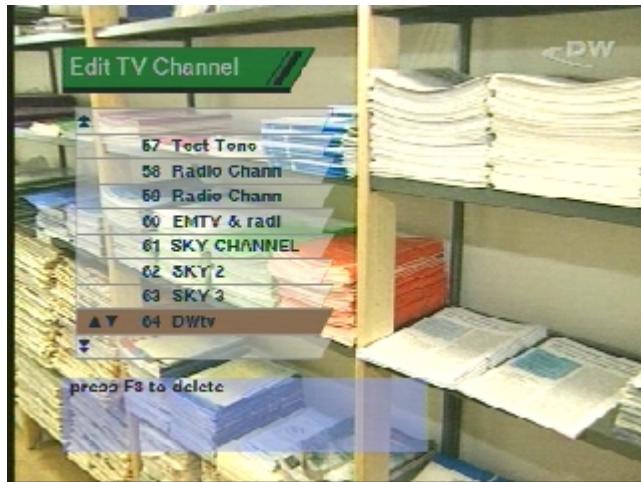

- From the channel list on the screen, you select the channel that you do not want to watch. Then click “F3” button twice. The channel disappears from the DTR5000N program list.

## Edit Radio Channel

You can delete the unnecessary Radio Channels from the registry of DTR5000N.

- In Edit Channel menu, select Edit Radio Channel menu. Then the following screen pops up

