


- From the channel list on the screen, you select the channel that you do not want to watch. Then click “F3” button twice. The channel disappears from the DTR5000N program list.

Edit Data Channel

You can delete the unnecessary Data Channels from the registry of DTR5000N or enable/disable Data channel. In this case, you should be cautious in choosing “Enable”. If you enable the non Data channel, then it can cause performance degradation or other problems.

- In Edit Channel menu, select Edit Data Channel menu. Then the following screen pops up

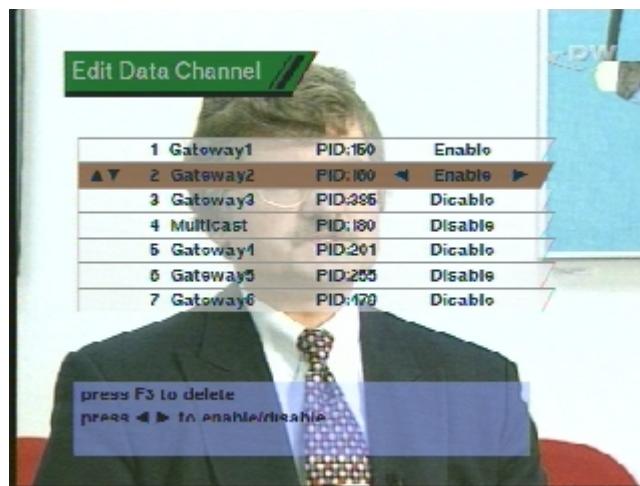

- From the channel list on the screen, you select the channel that you do not want to watch. Then click “F3” button twice. The channel disappears from the DTR5000N program list.
- Use Left/Right Key to enable or disable the channels.

Add to Favorite

Your favorite channels can be saved to your favorite channel list. So, later you can easily find your favorite channels from the list.

- In Edit Channel Menu, select Add to Favorites. Then the following screen pops up

