

- For the left side of the screen, you can choose TV channels, Radio channels, or Data Channels in a consecutive way by pushing “

Edit Favorite Channel

You can delete channels from your favorite channel list, and you can change the order of channel selection priority.

- In Edit Channel Menu, select Edit Favorite Channel. Then the following screen pops up




- From the favorite channel list on the screen, you select the channel that you do not want to watch. Then click “F3” button twice. The channel disappears from the DTR5000N program list.
- In order to change channel selection priority, highlight the channel that you want to upgrade the priority by Up/Down key and push “OK” button of the Remote Control. Then by using Up/Down key, bring the channel the right place and click “OK” button again. Then the moved channel resides in that place from that time.

System Settings

This menu helps you set up several thing such as TV Select, PAL mode, and Factory Default, and etc.

- Select the DTR5000N setup submenu on the Main Menu. The following submenu will show up on your TV.

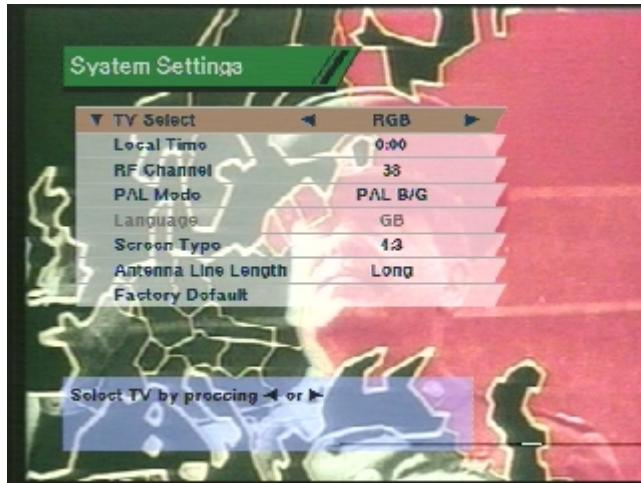

TV select	Selects the type of TV Receiver – RGB, CVBS, S-VHS
Local Time	Selects local time by 30 minute unit
RF Channel	Select or input RF channel number when DTR5000N is connected to TV by RF connector.
PAL Mode	In the above case, you can choose PAL standard mode.
Antenna Line Length	If the line from antenna to DTR5000N is too long, choose “long”, otherwise “choose “short”
Factory Default	Select this option when you want to change all setting to Factory default. * In this case, all setting information of Channel, LAN, and System settings will be erased.
Screen Type	You can choose either 4:3 or 16:9 according to the TV type.

LAN Settings

This menu enables you to enter LAN connection information.

- Select the LAN setting menu from the MAIN menu.