




Network Interface

Enter the IP information of the local network.

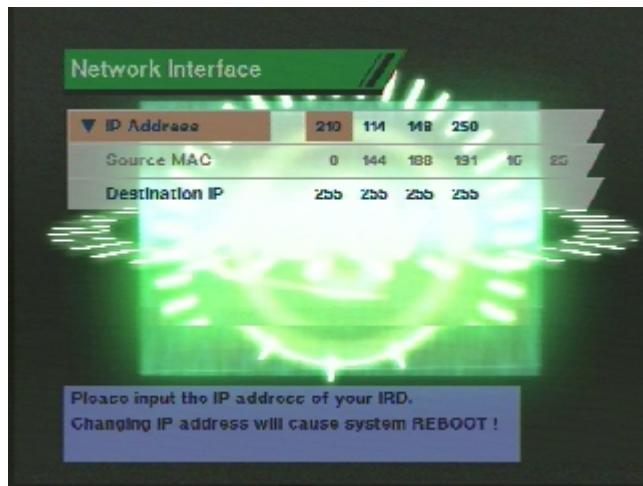

The IP address	Should be set to the local network IP address of DTR5000N.
Source MAC	This is DTR5000N's MAC address and can not be altered.
The Destination IP	Should be set to the local network IP address of the PC or Proxy Server that receives data from DTR5000N.

Filter Setup

Should enter the network information to filter the incoming data from the satellite.