

Receiver Update

- At the moment, the DTR5000N can be upgraded via RS-232C cable from the PC. The upgrade software can be downloaded from the manufacturer's web site. "Http://www.telemann.com".
- Upgrade through Satellite will be added later.

Auto Installation

Based on the Satellite and Transponder information attached at the end of this manual, DTR5000N automatically sets all channels from a Satellite. This information may change from time to time. When you cannot receive any signal from any satellite or transponder, check the information of those satellite or transponder.

- Select the Auto Installation from the MAIN menu.



LNB Selection	From LNBs that you set up in LNB Setup menu, select one LNB.
Region Selection	Selects from Europe, Asia, or America based on where the DTR5000N is used.
Satellite Selection	Select the satellite that you wants.

After you set up the above three menus, press "OK". Then, DTR5000N