

FLEX NUMERIC PAGER

CTF-903N MICRO FLX

USER'S GUIDE

AIRBANK,INC.

POWER ON/OFF

Press the  button and the  button at the same time
Till the pager starts up.



To turn the page off, Press the  button
and  button at the same time for two seconds.



To turn the page on, press the  button
and  button at the same time for two seconds.

READING MESSAGE

In case being an unread message, "UNREAD" is displayed on the LCD Screen. And the pager will beep once every two minutes for 30 minutes.

 REMINDER BEEP

Press the  button to read a message.



Press the  button to read a message receipt

In case being no message receipt,
"NO PAGE" is displayed.



If there is no message and no message is stored
"NO PAGE" is displayed When you press the  button.,.

If there is a message, the message number-day-time of the message receipt is displayed during pressing the  button. And the message is displayed after releasing the  button.

Number Day Time stamp



Press the  button to read remained message.

If the message contains more than 15 character, the  mark is displayed. And then press the  button to read remained message



Press the  button to read the next message(s).

Also, if a message receipt contains less than 15 characters, the next message is displayed when you press the  button



TONE ONLY

"TONE ONLY" is displayed when it received a call without any message or is called by machinery telephone.



DUPLCATE MESSAGE

When it received the same message repeatedly, the mark is displayed on the LCD screen and the first message will be deleted automatically.



FUNCTION MENU OPERATION.

If you press the button after reading a message, "PROTECT ?" is displayed.



Press the button to protect a message.

Press the button to change to "delete function" Mode

Press the button on the protect function mode to protect a message.

after pressing the button. "PROTECTED" is displayed on the LCD Screen with .

A message receipt is protected.



If you press the button one more time, "DELETE ONE ?" is displayed on the LCD Screen.



Press the button to delete a message.

Press the button to change to "protect function" mode

"DELETED ONE" is displayed and the function is on activation.



A message receipt is deleted.

If the reading message is already protected, "UNPROTECT ?" is displayed on the LCD Screen



Press the button to cancel the protecting Function.

If you press the button, "UNPROTECTED" is displayed and the protect function is canceled.

And then press the button to go back to the delete function. if you do not cancel the protect function, it is impossible to delete a protected message.

It displays that "protect function" is canceled.

If you want to select the delete function again,

 
Press the button.



THE OTHER FUNCTIONS

If you press the  button, "ALERT SEL ?" is displayed on the LCD screen and then, whenever you press the  button, ALERT SEL ?, TIME SET ?, ALARM SET ?, AUTO-P SET ?, DELETE ALL ? Will be displayed on LCD Screen sequentially. Press the  button to activate the function mode wanted.

Press the  button to select the other functions.



RECEIVING MODE SET

If you press the  button on "ALERT SEL ?" function, the present alert mode is displayed.



Press the  button to select alert type (Motor, Silent). Press the  button to change it.



ALERT SEL

If you press the  button on "BEEP ?" function, the present tone type is displayed. and then, whenever you press the  button, the tone type is changed and beeping out.

☞ The mode procedure is as follows.
Tone-1 to tone-7, Melody-1 to Melody-7

☞  icon is displayed on the LCD screen after setting the melody alert.

Whenever you press the  button once, the alert mode is changed from Tone-1 to Melody-7.
Press the  button to select a favorable one.

 


TONE LENGTH SEL

When the alert tone is activated, the tone length is displayed if you press the  button and you can choose the tone length by pressing the  button.

Whenever you press the  button the tone length changes from Long-1 to Long-3.

☞ Three different tone length is as follows.
Long-1(8seconds), Long-2(12seconds),
Long-3(16seconds),



Press the  button to select a favorable one.

TIME SET

If you press the  button on "TIME SET ?" mode, And when you press the  button, "month/date/hour/minutes/AM/PM" is blinking by turns. During displaying the "date/hour/minutes/AM/PM", press the  button for adjusting time, alarm and date.

After finishing all settings, press the  button to complete settings.



Press the  button to set time.



Press the button to change the blinking "month"
Press the button to move the cursor to "date"



Press the button to change the blinking "date"
Press the button to move the cursor to "hour"



Press the button to set the blinking "hour"
Press the button to move the cursor to "minutes"



Press the button set the blinking "minutes"
Press the button to move the cursor to "AM/PM".



Press the button changing the blinking "AM/PM"
Press the button to finish setting.

☞ Automatic back lighting function is on activation from 6:00 PM to 6:00 AM everyday, therefore you have to set time correctly.

GPS TIME ON/OFF

If you press the button after setting AM/PM, "GPS ON ?" mode is displayed.

Whenever you press the button, the mode changes. To activate it, press button again.



Press the button to toggle "GPS ON", "GPS OFF".

Press the button to activate it.

☞ GPS(Automatic Time Correction)

This function is to correct present time exactly and automatically by GPS(Global Positioning System)

ALARM SET

If you press the button on "ALARM SET ?" mode, the present alarm mode is blinking.

and then whenever you press the button, mode toggles will be displayed as follows.
"ALARM ON ?", "ALARM OFF ?"

Press the button to set "ALARM ON/OFF" mode, Setting alarm function is on activation with icon.



Press the button to set alarm function.

 
Then set time by pressing **▶** button.

Then press the **▶** button to confirm.



Press the **↓** button to toggle “ALARM ON ?”, “ALARM OFF ?”

Press the **▶** button to activate it. After setting “ALARM OFF”, **⌚** icon is disappeared



Setting alarm time is same as the above “TIME SET”.

SET AUTO POWER ON/OFF

If you press the **▶** button on “AUTO-P SET ?” mode

the present auto power mode is displayed.

and then whenever press the **↓** button,

the mode toggles are as follows.

“AUTO ON ?”, “AUTO OFF ?”

If you press the **▶** button on “AUTO ON” mode,

Setting auto-power function is on activation with **AUTO** icon.



Press the **▶** button to set auto-power function.

The setting time of auto-power on/off is same as the above “TIME SET”.

If you press the **▶** button on “AUTO OFF” mode,

“AUTO ON” is canceled and “setting auto-power” is finished.



Press the **↓** button to toggle “AUTO ON ?”, “AUTO OFF ?”

Press the **▶** button to activate it. After setting “AUTO OFF”, **AUTO** icon is disappeared



Set auto-power Off time



Set auto-power On time

☞ Pager is turned off automatically at the time of Auto-off, and turned on at the time of Auto-on.

DELETE ALL

If you press the **▶** button on “DELETE ALL ?” mode, all messages stored are deleted except unread and protected message



Press the **▶** button to delete all messages

Press the **↓** button to finish setting function.

MEMORY FULL INDICATION

When the messages stored is 20, the **FULL** icon is displayed on the LCD screen.
In case of "Memory full", a new message is stored in place of oldest(no protected) one.



BATTERY INFORMATION

Battery replacing

How to replace the battery

- Turn the pager off
- Slide the locking switch to the unlock position
- Slide the battery cover off the pager
- Remove the old battery and insert a new AAA battery
- Slide the battery cover back on the pager and slide the battery lock switch to the locked position.

☞ Not to loose stored message and data, battery should be replaced within 10 seconds.



FCC requirements

This device complies with part 15 of FCC rules. Operation is subject to the condition that this device Does not cause harmful interference

CAUTION : any changes of modification in construction of this device which are not expressly approved By the party responsible for compliance could void the user's authority the equipment