

Operation of Unit

The primary function of the W4-2 scale interface is to measure the load applied to a platform, store that reading in memory along with ancillary data and when requested via a wireless link transmit the data back over that link. There is also a RFID card reader and the serial number of the mostly recently read smart card will be stored with the weigh data. A keypad and LCD display is used for set-up purposes and manual entry of data. A strobe input triggers the W4-2 to take the reading.