

EMERGENCY

Please note: Although the watch does not normally display the month, the latter must of course be correctly set to enable the perpetual calendar to function normally.

3.5 Correcting the day



Select the Day & Date function display;

Day/date

pull the crown out: the date is replaced by a letter corresponding to the language in which the name of the day can be displayed: E for English, S for Spanish, F for French, while the day indication flashes; rotate the crown forward or backward to set the exact day in the language desired



Day/language



rotate the crown forward or backward to set the exact day in the language desired



push the crown back in: the date replaces the letter.

3.6 Synchronizing the analog and digital time displays

After a battery replacement or, exceptionally, a manipulation error, it may be necessary to synchronize the time shown by the hands with that displayed by the digital readout.



Select the neutral position;



pull the crown out: the digitally displayed time is not the same as the time shown by the hands;



rotate the crown backward or forward until the hands show exactly the same time as the display (rapid rotation of the crown will cause the hands to move in either direction by a complete hour);



push the crown back in;



 
return the watch to the display of local time and reset the hands precisely (see point 3.2).

3.7 Changing timezones / to or from summer time

When travelling to another timezone or adjusting the watch to or from summer (daylight saving) time, the hands can be moved forward or backward by one or more complete hours without affecting the indications of the minute and seconds.



Select and display local time;



pull the crown out: the hour and minute digits will flash;



rotate the crown backward or forward quickly, causing the hands to move in either direction by a full hour with each rotation;



push the crown back in.

Please remember not to rotate the crown slowly after rotating it rapidly to change timezones.

 
EMERGENCY

4. HOW TO USE THE VARIOUS FUNCTIONS


4.1 Using the countdown timer



Select the Timer (TM) function;



 
pull the crown out: the hours and minutes will flash;



set the desired time span by rotating the crown forward or backward (rapid rotation changes the hour readout, slow rotation changes the minute readout);



 push the crown back in: counting down begins and the watch will buzz at the end of the pre-set time span;



press on the crown to end the buzzing.

To cancel an ongoing countdown operation:



select the Timer (TM) function;



press on the crown during more than two seconds: the timer will return to zero.

4.2 Displaying a second timezone

 
This watch is designed to display, if desired, another timezone in addition to local time.



Select the Second Timezone (T2) function;



pull the crown out: the digits corresponding to the 2nd timezone begin flashing;



rotate the crown forward or backward;



push the crown back in.

Note: The minute and the seconds readouts cannot be changed and always remain on local time.

Remember to take into account the watch's time mode (2x12H or 24H) when selecting and displaying a second timezone (see point 3.1).

4.3 Using the chronograph



Select the Chronograph (CHR) function;



press on the crown to start the chronograph;

EMERGENCY



press the crown again to stop the chronograph;



a further press on the crown will restart the chronograph, allowing a series of short times to be measured and added together;



return the chronograph to zero by pressing on the crown for more than two seconds.

While the chronograph is in use, any other function of the watch can be selected and used. However, the watch must be returned to the chronograph (CHR) mode for stopping and reading chronograph times and returning this function to zero.

The chronograph has a maximum time limit of 23 hours, 59 minutes, 59 seconds and 99/100ths. If the time being measured is longer than one hour, the display will alternate between readouts of the hour and of the minutes - seconds - hundredths, once the timing operation is stopped.



2 hours

 


35 min.
18.10 secs.


4.4 Using the alarm function



Select the alarm (AL) function;



 pull the crown out: the digits will flash;



display the desired alarm time by rotating the crown forward or backward (rapid rotation changes the hour readout, slow rotation changes the minute readout);



push the crown back in: «AL» appears, confirming that the alarm function is running;



when the alarm sounds, press on the crown to end the buzzing.

To set or reset the alarm, press on the crown after selecting the alarm (AL) function.



AL displayed: alarm on



OF displayed: alarm off



To test the alarm function, press on the crown during more than two seconds after selecting the alarm (AL) function: the buzzer will sound.

Note: Remember to take into account the watch's time mode (2x12H or 24H) when setting the alarm to the desired time (see point 3.1).