



INSTRUCTIONS

FULL FUNCTION RADIO CONTROLLED STUNT VEHICLE CYBER PUGGY

MODEL NO:3009



49.86MHz

- * Ages: For 8 and up
- * Read the instructions carefully to the end before using
- * Adult guidance is strongly recommended

FEATURES


TRANSMITTER

- * Full function: Forward, Backward, Turn Left, Turn Right, Stop
- * Frequency: 49.86MHz
- * Battery: 1*006P (9 volt)

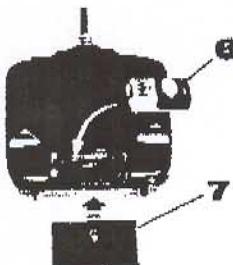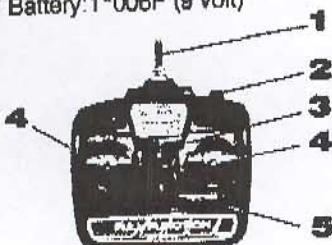

VEHICLE

- * Moves forward, reverse, turn right/left and various stunt actions.
- * Using a 7.2V Ni-Cd battery pack.

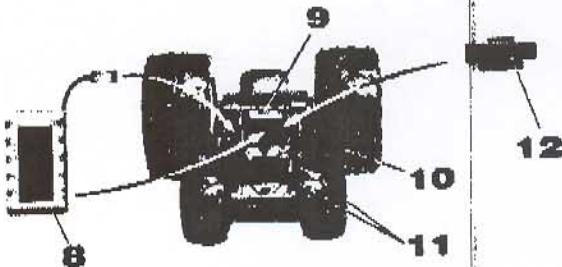

VEHICLE

TRANSMITTER

1. Telescopic Antenna
2. One Wheel Spiral Button
3. Indicator Lamp

4. Control Levers
5. On/Off switch
6. 9V(006P) Battery

7. Battery Case Cover
8. 7.2V Ni-Cd Battery Pack
9. On/Off switch


10. Battery Case
11. Fastener
12. Battery Case Cover

BATTERY RECHARGING

1. Plug the charger into a household outlet.
2. Then plug the output plug of the charger into the battery socket.
3. Appropriate recharging time is 5 hours.


CAUTION

Do not charge in excess of one day. Charging 5 hours will bring your battery to full capacity. Additional charging will not improve the output of the battery.

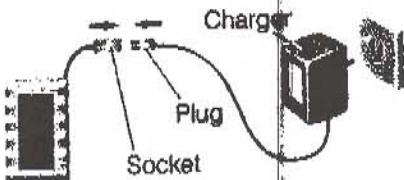

SAFETY RULES

- * Not suitable for children under 8 years.
- * Keep fingers, hair and loose clothing away from the tires and the wheels while the vehicle is switched "ON".
- * Don't pick up vehicle while in motion.
- * Don't put your vehicle and transmitter near any sources of heat.
- * Don't operate your vehicle in dangerous places.
- * Don't let the vehicle get wet. Don't run through water.
- * Avoid driving on sands.
- * Avoid all possible collisions, check the road ahead and watch for obstacles.
- * Children should not disassemble this vehicle.
- * If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used by children until *Checked by adults that no sharp edges are exposed.
- * Make sure the vehicle switch is off when not in use.

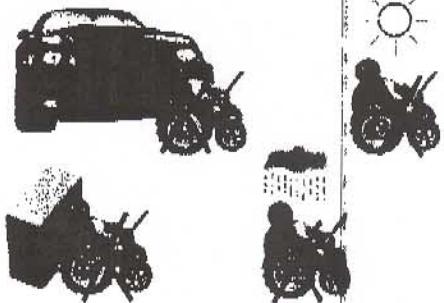

NOTE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:





- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- * Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

OPERATION


1. Extend the transmitter antenna to its full length.
2. Turn "on" the vehicle and transmitter.
3. Drive the car by operating the sticks of the transmitter.

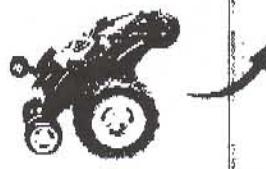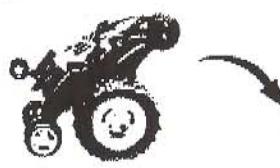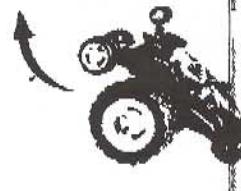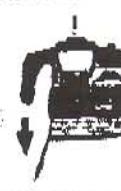1 FORWARD**2 REVERSE****3 FORWARD MOVING IN SMALL CIRCULAR PATH****4 REVERSE MOVING IN SMALL CIRCULAR PATH****5 360° FAST SPIN, ONE WHEEL SPIRAL, HOPPER ROLLS**

for a few seconds,
then




press
then(suddenly)

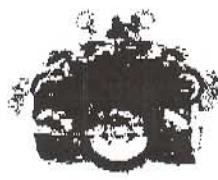


then



then

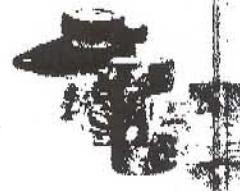**6 RAPID RECOVERY**

after a few seconds

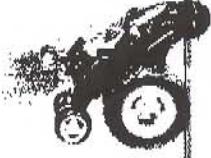**TROUBLESHOOTING**

TROUBLES	PROBABLE CAUSE	CORRECTION
Low speed		
Spin slowly	Weak car batteries	Recharge them
Can not recovery		
	Weak 9V controller battery	place 9V battery with a new one
The car out of control	There is the same wave radio control car is being used	Change location