




INSTRUCTION MANUAL

SET CONTAINS

- STUNT VEHICLE.
- REMOTE CONTROL.
- INSTRUCTION MANUAL.

MAIN FEATURES

- FULL FUNCTION RADIO CONTROL VEHICLE.
- MUSIC SELECTION W/SILENT MODE.
- LIGHTS & SOUND. • STUNT MOVES.

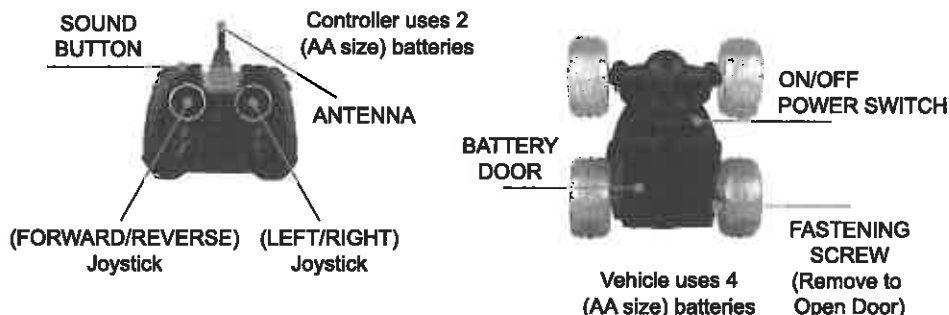

HOW TO OPERATE:

1. Turn the power switch ON and start the engine pressing the sound button on the remote control.
2. Use the forward/reverse and left/right joysticks for operation.
3. Use the sound button on the remote to change the music selection or to mute the sound.

CHANGING THE BATTERY:

1. Make sure power switch is OFF.
2. Unscrew and remove the battery door.
3. Replace batteries as shown and replace the door on remote control and vehicle.
4. When the car slows or the lights become dim, replace the batteries again.

WARNINGS:

- This toy is intended for use by children ages 5 and up. Please review this manual with your child. Adult supervision suggested.
- Do not operate on streets or roads.
- Keep away from water.
- Avoid use on carpet, sand and dust.
- Avoid bumping the vehicle into people, animals or objects.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

DARON
worldwide trading inc.®
Fairfield, New Jersey
www.darontoys.com



MADE IN CHINA



WARNING:
CHOKING HAZARD - SMALL PARTS.
NOT FOR CHILDREN UNDER 3 YEARS

Item No. RD930C