

10.1 INCH TOUCH SCREEN TABLET

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: X-0970211

IMPORTANT SAFETY INSTRUCTIONS



WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC NOTICE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:
To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS (CONTINUED)

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna.

- 1) **Read these instructions.**
All the safety and operating instructions should be read before the product is operated.
- 2) **Keep these instructions.**
The safety and operating instructions should be retained for future reference.
- 3) **Heed all warnings.**
All warnings on the product and in the operating instructions should be adhered to.
- 4) **Follow all Instructions.**
All operating and use instructions should be followed.
- 5) **Do not use this apparatus near water.**
Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.
- 6) **Clean only with dry cloth.**
Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- 7) **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 8) **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**
- 9) **Do not defeat the safety purpose of the polarized or grounding-type plug.** A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) **Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
- 11) **Only use attachments/accessories specified by the manufacturer.**
- 12) **Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
An appliance and cart combination should be moved with care. Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.
- 13) **Unplug this apparatus during lightning storms or when unused for long periods of time.**
To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 14) **Refer all servicing to qualified service personnel.** Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.
- 15) **Power source**
This product should be operated only from the type of power source indicated on the marking label.
If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
For products intended to operate from battery power, or other source, refer to the operation instructions.
- 16) **Power lines**
An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



IMPORTANT SAFETY INSTRUCTIONS (CONTINUED)

- 17) **Overloading**
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
 - 18) **Object and liquid entry**
Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.
 - 19) **Outdoor antenna grounding**
If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charge. Section 810 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes and requirements for the grounding electrodes.
- EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE
- The diagram illustrates the grounding of an antenna system. It shows a television set with an antenna lead-in wire connected to a ground clamp on the back panel. The ground clamp is connected to a vertical ground conductor. This conductor is further connected to a horizontal grounding conductor, which then connects to a ground clamp on the side of the television. The side panel also features a power service grounding connection. Labels include: 'ANTENNA LEAD IN WIRE', 'GROUND CLAMP', 'ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)', 'GROUNDING CONDUCTORS (NEC SECTION 810-21)', 'GROUND CLAMPS', 'POWER SERVICE GROUNDING CONNECTION (NEC ART 250, PART II)', and 'NEC-NATIONAL ELECTRICAL CODE'.
- 20) **Service**
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
 - 21) **Replacement parts**
When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts.
Unauthorized substitutions may result in fire or electric shock or other hazards.
 - 22) **Safety check**
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.
 - 23) **Wall or ceiling mounting**
The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
 - 24) **Damage requiring service**
Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.
 - a) When the power-supply cord or plug is damaged.
 - b) If liquid has been spilled or objects have fallen into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or the cabinet has been damaged.
 - f) When the product exhibits a distinct change in performance—this indicates a need for service.
 - 25) **Note to CATV System Installer**
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and in particular, specifies that the grounding system of the building, as close to the point of cable entry as practical.
- Note:**
Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

IMPORTANT SAFETY INSTRUCTIONS

This manual contains important safety precautions and information for correct usage. Please be sure to read this manual carefully before use to avoid any damage to the device.

- Do not place the product in hot, wet or dusty environments.
- Do not place the product in hot environments. Especially in summer, do not place it in a car with all the windows closed or in the sun.
- Avoid dropping or smashing the product and do not shake the TFT screen excessively as it may cause damage or abnormal display screen.
- Select a suitable volume and avoid loud sound while using headphone/earphones. Turn down the volume or stop using the product if your ears start hurting or ringing.
- In the following situations, please charge the product:
 - A. The device shows on the top of the screen.
 - B. System automatically shuts down, and it turns off soon after restart.
 - C. Operation buttons do not work properly.
 - D. The unit will not turn on.

Note: Chargers of other models cannot be used for this device because they may cause damage to the device that will void the warranty. Please contact our customer service department if you need a replacement charger.

- Do not disconnect the device while formatting, downloading and/or uploading; otherwise, application errors may occur.
- We are not responsible for any memory erasure or loss caused by damage or product maintenance, or other personal reasons.
- Do not disassemble the product, and avoid cleaning the product with ethyl alcohol, thinner, or benzene.
- Do not use this product in areas which prohibit the use of electronic devices, for example, in an airplane.
- Do not use this product while driving or walking in the street, as it may cause a car accident.

Notes:

- This device is not waterproof.
- All images in this manual are for reference only. Specifications and appearance of the product and the screens are subject to change without prior notice.

IMPORTANT SAFETY INSTRUCTIONS

This manual contains important safety precautions and information for correct usage. Please be sure to read this manual carefully before use to avoid any damages to the device.

1. Please do not place the product in hot, wet or dusty environment.
Please do not place the product in hot environment. Especially in summer, do not place it in a car with all windows closed.
Avoid dropping or clashing the product and do not shake the TFT screen violently, or it may cause a damage or abnormal display to the screen.
Please select a suitable volume and avoid loud sound while using earphones. Please turn down the volume or stop using if you get a roaring in your ears.
For following situations, please charge the product.
 - A. The device shows on the top right corner.
 - B. System automatically shut down, and it turns off soon after restart.
 - C. Operation key shows no reaction.

Notes: Chargers of other models cannot be used for this device because it may cause damage to the device which we are not responsible for. Please contact with our customer service department if you need a replacement charger.

- Please do not disconnect the device while formatting, downloading and uploading; otherwise it may cause application errors.
- We are not responsible for any memory erase loss caused by damage or product maintenance, or other personal reasons.
- Please do not disassemble the product personally, and avoid cleaning the product with ethyl alcohol, thinner, or HHTUTbenzeneTUTHH.
- Do not use this product in the areas which prohibit use of electronic devices, for example, in an airplane.
- Please do not use this product while driving or walking in the street, or it might cause a car accident.

NOTES: ~ This device does not support waterproof function.

~ All images on this manual are only for reference! Specification and appearance of the products are subject to change without prior notice!


PUT A HUGE NOTE:

System tutorial: See page xx for details on accessing the system tutorial, which when used in conjunction with this manual will show you how to take advantage of all the features of your new unit.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	1
TABLE OF CONTENTS.....	7
1 OUTLOOK DESCRIPTION.....	8
2 POWER BUTTON USAGE.....	8
3 TOUCH-SCREEN NAVIGATION.....	8
4 USING MICRO SD CARD.....	9
5 GETTING STARTED.....	9
6DESKTOP.....	10
7 APPLICATION MANAGEMENT.....	12
8 CLOCK.....	13
9 VIDEO CONFERENCING.....	14
10 BROWSER.....	14
11 CALENDAR.....	14
12 CAMERA.....	14
13 RECORDER.....	15
14 EMAIL.....	15
15 FILE BROWSER.....	16
16 MUSIC.....	17
17 SUPER HD PLAYER.....	18
FREQUENTLY ASKED QUESTIONS.....	20
ANDROID.....	19
BASIC DEVICE FUNCTIONARY.....	19
EMAIL.....	19
MEDIA CARDS.....	19
MUSIC.....	19
PHOTOS.....	19
VIDEO.....	19
WI-FI.....	19
STORAGE.....	19
PRODUCT SPECIFICATIONS.....	21

Outlook Description

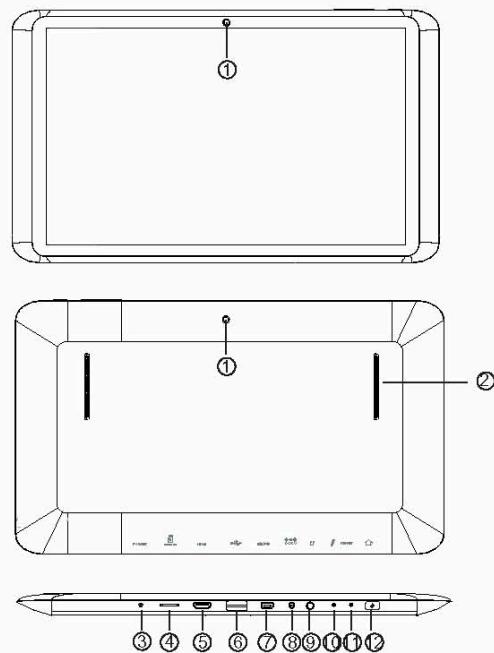

- 1.Camera
- 2.Speaker
- 3.Power
- 4.TF Card Interface
- 5.HDMI Output
- 6.USB port
- 7.USB TO PC
- 8.DC IN
- 9.Headphone
- 10.MIC
- 11.Reset
- 12.Return

USB Host

This device supports USB device for extending the memory size, inserts it to the USB Host on the side of unit.

Notes:

- A. Before replacing the USB driver, make sure the unit has been powered off.
- B. When inserting the USB driver, the MID display "repairing storage"
- C. Reading the USB information, please choose " " → Explorer → USB

Getting Started

Battery Recharge

The device built-in DC  3.7V, 5000 mAh rechargeable Lithium-ion Polymer battery.

Recharge as follows:

- Insert the small plug from the supplied AC/DC Adaptor to the DC IN jack on the device. Plug the AC/DC Adaptor to wall outlet having AC 100-240V~, 50/60 Hz.



This power unit is intended to be in a vertical or floor mount position.

Notes: Your battery will last longer if you follow these simple guidelines for caring for and storing it.

- Using the supplied AC/DC Adaptor for charging only. Other models charger may damage the device.
- For charging first time, charge it approximate 10 hours. For normal charging, it needs approximately 4 hours.
- Recharge and store the device within the temperature range of 5°C~35°C (40°F~95°F).
- Do not overcharge (longer than 24 hours). Excessive charging or running the unit until battery goes empty will damage battery. Battery life will be extended if you keep the battery fully charge.
- Battery life naturally shortens slowly over time.
- The rechargeable battery incorporated in this product is not user replaceable.

Using the touch screen

Tap/press the corresponding button on the touch screen with your fingertip or the supplied

Touch Screen Pen (on the rear of cabinet).

Touch the screen and slide from Right to Left; Left to Right to scroll the pages.

Notes:

- Do not use force when touching the touch screen, as it may cause damage to the screen.
- To avoid damage to the touch screen, do not use any object other than your fingers or the supplied Touch Screen Pen to operate it.
- Do not tap/press on the touch screen if your fingers are not clean.
- Do not tap/press on the touch screen with gloves on.


Turn the device onPress the power button and hold for 3 seconds.

Wi-Fi Network SetupSince many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

Tap  → Settings, → Wireless & network.

★ Select Wi-Fi to turn on.

Wi-Fi set up: Set up and manage WiFi access points.

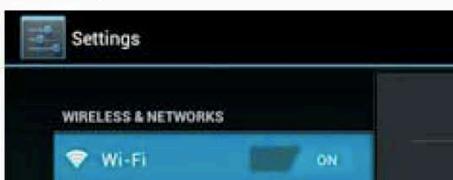


★The device automatically scans and lists all local Wi-Fi Network found.

★  indicates secure networks that require login name/password to connect.


★Tap the desired network which you want to connect, → enter the Network Password if applicable, → tap Connect.

★Tap  to return to the Desktop screen.

★ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap Add Wi-Fi network and follow the prompts to add your network.

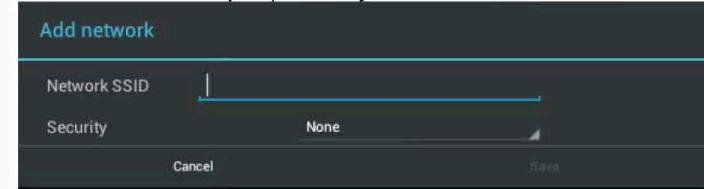

DESKTOP

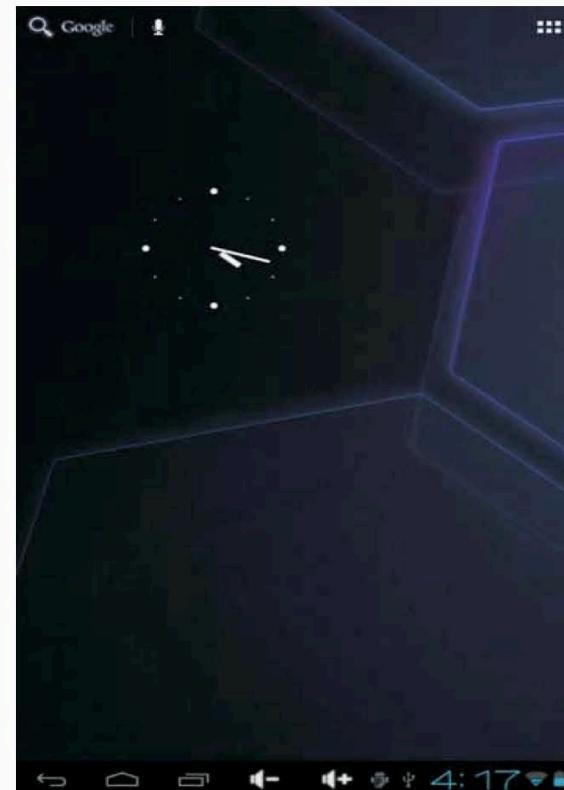

Status Bar



- The Status Bar lies at the bottom of the screen.

– At the left side there are which stand for **Escape, Homepage, Current Plays, Volume-, Volume+**.

– At the right side there are which stand for **WiFi Signal, WiFi Status, Battery Status, Clock, etc.**

Touch Screen Operation



Size of this tablet touch screen is 10.1". Below are some advise of how to operate the touch zone:

- By tapping the icon, you can get back to the homepage wherever interface you are in.
- By tapping the icon, you can get back to the EX-interface during operation.
- By tapping the icon, a window popups which shows the latest apps you are playing.
- In the main menu interface, you can open and operate any app by tapping the icons.
- In different applications (Files, Music, Video, Gallery, etc.), you can drag the menu list up and down to enable the list scrolling up and down.
- During Web browsing or PDF viewing, you can move the page by dragging it up and down, left and right. (Be aware of not touching the web links!)

APPS and Widgets: Tap top right corner to see APPS page and slide on the

screen and move to other pages to see Widgets.

" button, there will be a lot of application widget icon , you can select the icon which will appear in the home page as the shortcut. You will quickly get to the program.

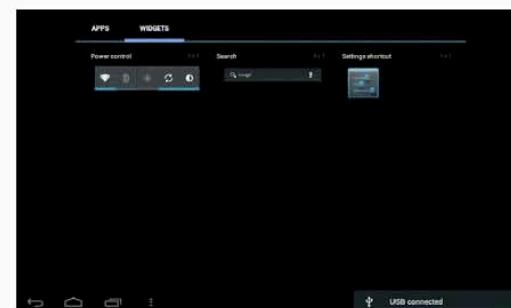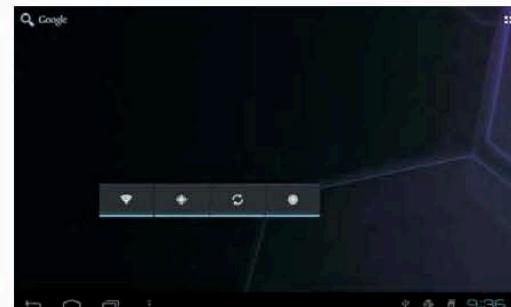

Application Management

Downloading Android Applications

- ★ Pre-loaded App stores such as Amazon APP store, Getjar and SlideMe are providing many interesting and free applications for downloads. Individual app store may ask for credit card information and personal details. Please be caution that some application may require to pay.

- 2 Tap the  **Explorer** application icon.
- 3 Tap  or  and locate the folder in which the .apk application files were saved.
- 4 Tap on a .apk file → **Install**.
The application is installed and the application icon is added to the **Applications** screen.
- 5 Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Downloading Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

- 1 Tap the  **Web** application icon to launch the internet browser.
- 2 Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
- 3 After the download is complete, touch & hold on the download file (in the **Download history** screen), → tap **Open** → **Install**.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

- 1 Tap  → **Settings** → **Applications** → **Manage applications**.
- 2 Tap the application you want to uninstall, → **Uninstall**.
- 3 Tap **OK** to confirm the Uninstall.

Clock

Tap the  **Clock** application icon. You can see the time and date.

Alarm:

★ You can use your device as an alarm clock by setting multiple alarms.

This clock icon  displayed at the bottom of screens indicates that one or more alarms have been set and are active.

Add Alarm

- 1 Tap the  **Clock** application icon.
- 2 Tap  → **Add alarm**.
- 3 Set up your alarm as desired.
- 4 Tap "Turn alarm on" with "√".
- 5 Tap **Done**.

Deletes Alarm

- 1 Tap the  **Clock** application icon, 
- 2 Tap on the alarm you want to delete.
- 3 Tap **Delete alarm**.

Video Conferencing

 


A 3rd party application such as Skype can be downloaded from app stores such as Getjar and Amazon APP store.

BROWSER

Users can connect to the Internet through a browser.

Click the browser icon on the Desktop , and then you can open the Web browser.



CALENDAR



Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Click **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**. (Note: we generally recommend that Gmail account, test server for: m.google.com)

Add Event

- 1 On the **Calendar** screen, tap on the date to which you want to add an event.
- 2 Tap on the event time, → tap in each entry field to enter the desired event information.
- 3 Tap **Done**.

12 CAMERA

Tap the  **Camera** application icon..

Take Pictures

- 1 In **Camera** → tap  to take the picture.
- 2 The picture will be saved.
- 3 Tap the picture thumbnail enter **My Photo** to scan the picture.

- 4 Press Back to the Camera.
- 5 Tap  to exit the Camera and back to the Desktop.

Take Videos

- 1 Tap  switch to video, and you can take videos.
- 2 Tap  to begin and tap again to stop.
- 3 The video will be saved.
- 4 Tap the video thumbnail to play the video.
- 5 Press Back to the Camera.
- 6 Tap  switch back to camera.
- 7 Tap  to exit the Camera and back to the Desktop.

Note: You can tap  to choose to save the files in the Local disk or the Micro SD card.

Email

Inside the apps menu, tap the icon  to enter the 'Email' client. It's required to config the account information for the first time. Pre-register and set up your email account is necessary. Please be advised that Gmail ACCOUNT registration is necessary in order to access services provided by Google and Android System.

APK Software Installation and Management

APK Installer (Application Installer)

This device supports third party applications on the basis of android platform. Most of the applications can be downloaded from the websites via the internet, and copied into the internal flash or Micro SD card of this device.

- Tap the icon of Apkinstaller  on the sub-menu page. The following will appear on the screen:




- Installation:
 - Tap the "Install" button, the memory location list will appear on the screen.
 - Select and tap where your APK file is located, either Internal memory or external SD Card. The files list will appear on the screen.
 - Select and tap into the file to install the file onto your device.
- Select and Tap the "Manage" button for installed application management. Select and tap the application being shown on the screen for Launch, Export, uninstall and cancel.
- Select and tap "Exit" to exit.

Play MUSIC

★ Audio file formats supported: MP1, MP2, [MP3](#), WMA, OGG, APE, FLAC, WAV, AC3, AAC, AMR, DTS, RA, M4A.

When no music files in the audio player playlist, the system will automatically load the music files from the card to the audio player playlist after turning on the audio player .The playlist as shown in the above figure:

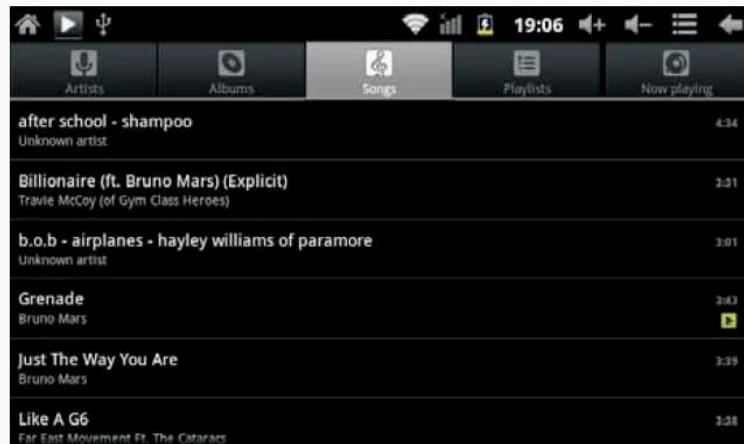

You can pass the audio files by the way of synchronous USB, or access to audio files by inserting the SD card which it is already full of audio files. You can also download the audio file through the network.

Select the appropriate tab key, you can see for example "Artist", "album", "songs" and other interfaces. Select a song to play.

SETTINGS

SETTINGS

Wireless & networks	Wi-Fi	Turn on Wi-Fi.
	Data usage	A list of the data at that time use and mobile data flow conditions.
	more	Set up Flight patterns, network, APN, Ethernet option
	Voulumes	To adjust the Media volume, Alarm volume and Notification volume. Tap & slide the slider and then tap OK.
	Ringtone & notifications	Select desired ringtone & notification sound
	System	
	Touch sounds screen lock sound	Enable and disable Enable and disable
Display	Brightness	Tap & slide the slider to adjust the screen brightness as desired, and then tap OK.
	Wallpaper	To select and choose wallpapers
	Auto-rotate screen	To enable or disable auto screen rotation
	Sleep	To choose and set screen saving time
	Font Size	To choose and set display font size.
	Accelerometer coordinate system	To choose and set accelerometer status
Storage	Screen adaption	To choose and set screen display resolution
Battery APPs	To display information such as Internal memory status, Micro SD card memory status	
	Display Battery status	Discharging percentage and
Personal	To display all apps being downloaded, APPS on Micro SD and all running APPs	
Location	Personal	
	To Sync all pre-set accounts and sync with the device	ON top corner to enable and ADD account
Security	Google Location service and location & Google search	To enable and disable the services
	Screen lock	To choose and set screen lock type and to input owner info
	Encryption Passwords Device Administration Credential Storage	Encrypt all tablet info and require pin or password to decrypt Make passwords visible View Administrator info and enable or disable UNKNOWN SOURCES where all apps to be downloaded from sources other then Google market or playstore must be enable Display trusted CA certificates and to install certificates from SD card
Language	Language spelling correction	Choose display language enable or disable spelling correction




Super HD Player

★ Video file formats supported: RM, RMVB, MKV (H.264 coding), MPEG (AVI), MOV, FLV, MPG, VOB, MPE, DAT.

★ Picture file formats supported: JPG, JPEG, BMP and PNG.

Play Music

In the main menu or desktop, tap the icon to enter "Super-HD player" Interface, on where it will list all the video files and Image files. As shown below:

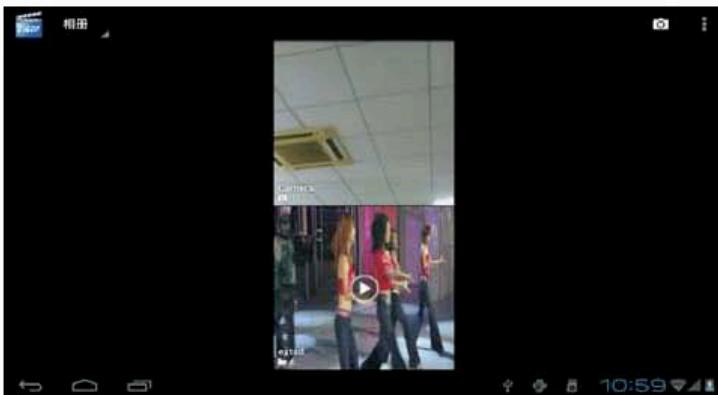

Select the video files into video player interface. You can choose "Play", "Stop," "fast forward", "rewind", "progress bar" and other control keys to control the playback progress.

PRODUCT SPECIFICATIONS

&input	personal dictionary Keyboard & input Methods Speech mouse / trackpad	To create your own dictionary by adding desired words Choose desired input method enable to disable Voice search and text to speech input to set pointer speed
	Backup and Restore Factory data reset	To enable or disable back up app data, wifi passwords and other settings to google servers once enabled, to choose enable or disable back up account once enabled to choose and enable or disable restore data while reinstalling apps Erase all data on tablet
	Automatic date & time Automatic time zone if automatic time and time zone has been disabled Use 24- hour format Select date format	To enable or disable network provided time to enable or disable network provided time zone set date, time and time zone manually enable or disable to choose date format
Access- ibility	Large text	Enable or disable
	Auto – rotate screen	Enable or disable
	Speak passwords	Enable to disable
	Touch & hold delay	To choose and set
	Install web scripts	To allow or disallow apps or web contents more accessible
About table		View Status (Battery, Wi-Fi, etc), Battery use, Legal information, Model number, Android version, Kernel version and Build number.

Frequently Asked Questions

Frequently Asked Questions

Android

Q: What Android OS version is on my Device? A: 4.0

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 4 hours, but you can use the device while it's charging. Use the include power adapter to charge; this device charge via USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: Can I play YouTube videos on my device?

A: Yes. You can tap the YouTube application icon to quick access videos.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Storage:

Q: How do I turn the device into a USB storage device?

A: Connect the device using USB cable with the PC, immediately a screen will display on screen and ask you to turn on the device to USB storage device, tap "YES", and you may save all video, music and photos files from the PC to the device.

PRODUCT SPECIFICATIONS

Hardware Configuration:

CPU Processor Speed	1.0 GHz
Memory/ROM	4GB (Internal 2.2GB flash memory has been assigned for Android operating system and pre-loaded Apps, existing 1.8G flash space is available for further operation needs)
Memory/RAM	1 GB
Memory Card Slot	Micro SD card (up to 32GB), not included
Color Display	10.1 inch TFT Color LCD with Capacitance Touch Screen
Resolution of Display	1024 x 600 Pixels
Battery Type	Built-in 3.7V, 5000 mAh rechargeable Lithium-ion Polymer Battery; recharging via USB OTG port
USB	mini USB USB Host
Built in Speaker	2x1 W, 8 ohm
G Sensor	Yes
I/O ports	Mini USB, Micro SD Card Slot, 3.5mm Phones Jack, Mini HDMI USB Host
Wireless Interface	WIFI 802.11b/g/n
Battery life	After fully charged, up to 4 hours for Video playback or 5 hours for eBook reading or 5 hours for Music playback (Assuming Wi-Fi and others program/application are turned OFF, brightness and volume set to middle)
Input of the supplied AC/DC Adaptor	AC 100-240V~, 50/60Hz, 0.3A
Output of the supplied AC/DC Adaptor	DC 5V, 2A

Software Configuration:

Operating System	Android 4.0.3
Browser	Web Browser
Video files supported	MKV(H.264 HP), AVI, RM/RMVB, FLV, MPEG-1, MPEG-2
Music files supported	MP3, WMA, APE, FLAC, AAC, AC3, WAV
Photo files supported	JPEG, BMP, GIF, PNG, TIFF
Email	Support Web mail & Pop mail

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Accessories:

- 1 x Instruction booklet
- 1 x USB Connection Cable
- 1 x AC/DC Adaptor