



PARAM ☐ SERVICE  
DSAGR ☐ ALARM  
BATT ☐  
IDENT ☐ WARNING  
MAINT ☐  
STBY ☐ NORMAL

TX1 ☒ COURSE  
TX2 ☐  
CLR ☐  
TX TO AIR ☐  
WARN ☐

NORMARC A/S  
- IM 7811 -  
1 freq. Localizer

ON/OFF CHANGE OVER TX1 TX2

LAMP TEST

LOCAL MAINT

INTERLOCK OVERRIDE

MAN

WRITE

AUTO

WRITE PROTECT

ESC PREV NEXT ENTER  
- +  
QUICK READ

SBO PHASE  
TX 1  
LOCK

SBO PHASE  
TX 2  
LOCK

SBO ATTENUATION  
1 2 3 4 5 6 7 8 9 0

SBO ATTENUATION  
1 2 3 4 5 6 7 8 9 0

CSB/CV





ATTENTION  
DANGER: RADIATION HAZARD  
IN TECHNICAL SERVICE ONLY  
RADIATION EMISSIONS MAY BE  
EMITTED

CE











