



QUICK SET-UP

1>

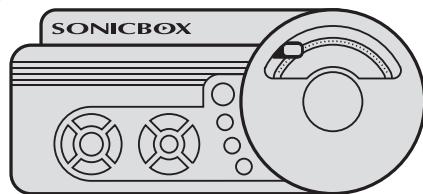

Remote

Insert 4 AA batteries in back of remote unit as shown.
Inserting batteries backwards will ruin your remote.

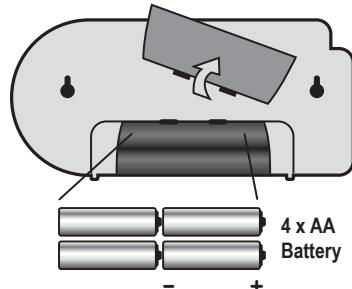


4

QUICK SET-UP


2>

Plug the USB cable (included) into the base unit and into the back of your PC (PC should be turned on). The green light should blink on and off once.

Your PC will announce "New Hardware Found" (Windows2000 users, skip this part). Click "Next" when it asks to search for driver. Click "Next" again to perform the recommended search. On the following screen "Windows will search for new device..." uncheck all options and click "Next". Click "Next" on the following screens, then "Finish" to complete installation.

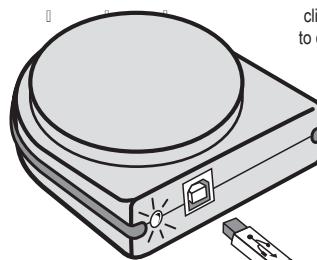


Base Unit

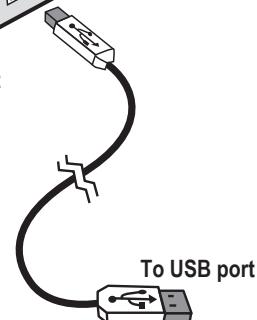

5

QUICK SET-UP**5>**

Put included CDROM into the drive or download the Sonicbox iM Software Tuner from:
www.sonicbox.com/download

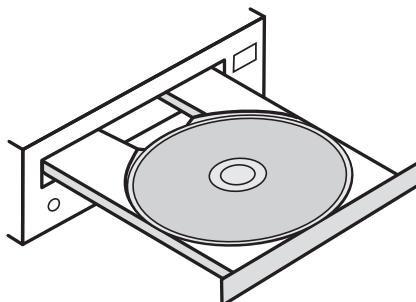


Double-click on the installer and follow instructions for software setup.

8**QUICK SET-UP****6>**

Press the power button on the remote unit. The screen will turn on and the Software will start. (If the Software does not start, double click the Sonicbox icon to start the Software). Then, start selecting stations.

- The Band Select buttons scroll through bands A,B,C...Z.
- The tuning knob changes stations within each band.
-  saves current station to the "Z" band.

Please refer to the online documentation in your PC Start menu or the diagram on the inside of the cover for more information on how to use your iM™ Remote Tuner.

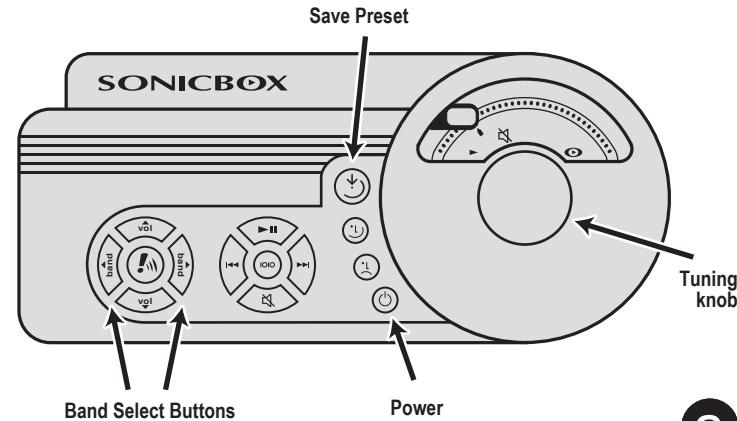**9**

TROUBLE SHOOTING

Definitions of terms

Sonicbox iM™ Software Tuner Installer

The Sonicbox iM™ Software Tuner Installer is an application that installs the Sonicbox iM™ Software Tuner on your PC. The CDROM included with your Sonicbox iM™ Remote Tuner has the software installer on it. You can also download the Installer from the Sonicbox web site, <http://www.sonicbox.com>.

Sonicbox Desktop Icon

The Sonicbox iM™ Software Tuner Installer gives you the option of placing a Sonicbox icon onto your Windows desktop. We recommend that you allow the Software Installer do this because the desktop icon provides a convenient way to start the iM™ Tuner Software. Just double-click on this icon to start the iM™ Tuner Software.

Sonicbox Start Center

The Sonicbox Start Center lets you perform tasks like start the iM™ Tuner Software, close the iM™ Software Tuner, and check for software upgrades. The Start Center icon will be placed in the row of small icons in the bottom right hand corner of your Windows desktop when you install the software. When the base unit is not connected to the PC, the icon is a purple ring with a brown triangle. With base unit connected, it is a blue dial.

Sonicbox iM™ Software Tuner

The Sonicbox iM™ Software Tuner is a software application that lets you tune to radio stations on the Internet. You can choose from a wide variety of high-quality stations already programmed into the tuner or you can customize your own stations and playlists.

Sonicbox iM™ Remote Tuner

The Sonicbox iM™ Remote Tuner kit includes a Base Unit, a Hardware Remote, a 900 MHz transmitter, a 900 MHz receiver, a USB cable, a stereo audio cable, a recharge cable and a CDROM. Consult the Quick Start for assembly and setup instructions.

If you are missing any of these pieces, contact Sonicbox technical support at our website, www.sonicbox.com.

16

TROUBLE SHOOTING

Trouble shooting

Base Unit and USB

The iM Remote Tuner will only work with a Windows operating system that supports USB devices. This includes Windows98 (Second Edition) and Windows2000. WindowsNT does not support USB devices.

The iM Remote Tuner plugs into any open USB port on your computer. If there are no USB ports on your computer, then you cannot use the Sonicbox iM™ Remote Tuner.

For detailed information on connecting to the USB with your specific version of Windows, please visit our website www.sonicbox.com.

My hardware doesn't work.

Troubleshoot this problem in the order given below. If any one of these suggestions fail, then contact Sonicbox technical support at our website, www.sonicbox.com

- Is the Remote on? If the LCD screen is blank, press the power button. If the screen is still blank, replace the batteries in the Remote. Press the power button. Is the Remote on now?
- Is the Sonicbox Start Center running (does the icon appear in the row of icons at the bottom right of your screen)? If not, then you need to restart Windows. Is the Sonicbox Start Center running now?
- Is the Base Unit detected? If the Base Unit is detected, the start center will be a blue dial. If the Base Unit is not detected, the Start Center will be a purple ring with a brown triangle.
- Is the green indicator light on the Base Unit "on"?
- Does the Start Center "blink" when you press any button on the Hardware Remote?
- Does the green indicator light on the Base Unit "blink" when you press any button on the Hardware Remote?
- Does the Hardware Remote only work in close proximity to the Base Unit (2 or 3 feet)? If so, then go to "The Hardware Remote only works in close range to the Base Unit" in page 18.

17

TROUBLE SHOOTING

My Hardware Remote only works in close range to the Base Unit.

The range of the wireless Hardware Remote is about 65-100 feet from the Base Unit. If you find that the range is much less, then try the following:

- Position and orient the Base Unit higher and further from the PC.
- Unwrap the black wire antenna from around the Base Unit and stand it straight up.
- Turn off any radio frequency or high frequency devices that may be causing interference (cellular phones, other audio sending systems, etc.).
- If none of these troubleshooting suggestions improve the range, then contact Sonicbox technical support at our website, www.sonicbox.com.

I can't get the audio to come out of my stereo.

- Is the audio 'muted' or is the volume set too low in Windows audio control panel?
- Is your PC audio working? Connect your PC speakers directly to the PC. Start an application that generates sound. If you don't hear anything, then you will need to consult your PC's troubleshooting guide to determine the cause of the problem.
- Is your 900 MHz transmitter connected to your PC properly (Quick Start, page 7)?
- Is your 900 MHz receiver connected to your stereo properly (Quick Start page 8)?
- Have you tried adjusting the frequency of the 900 MHz transmitter and receiver?
- Is there interference from other devices? Turn off any radio frequency or high frequency devices that may be causing interference (cellular phones, other audio sending systems, etc.)
- If the transmitter still does not work, then contact Sonicbox technical support at our website, www.sonicbox.com.

I can't start the Sonicbox iM™ Tuner Software.

Did you press the 'power on' button on the hardware remote? If that doesn't start the tuner, then restart Windows and try again. If the tuner software still doesn't start, then contact Sonicbox technical support at www.sonicbox.com.

18

19

TROUBLE SHOOTING

The Software Tuner shows up, but it doesn't work.

- Make sure you are connected to the Internet. Open your browser and check that you have access to the internet. If not, then consult your PC's user manual on how to connect your machine to the internet.
- If you are getting error messages you may not have the required 3rd party software (ex. Windows Media support), go to the troubleshooting section of our website labeled "I get error messages while using the software tuner."
- If the Software Tuner interface appears to be working, but you aren't hearing any audio, see "I can't get the audio to come out of my stereo" section on the previous page.
- Go to our website for more detailed help, www.sonicbox.com.

My machine is frozen. I can't use my mouse or my keyboard.

Press CTRL-ALT-DEL to get to the Task Manager. Click on the "Shut Down" button. If this is not possible, then you will need to perform a "hard reset" of your machine. Consult your PC user manual for directions on how to do this properly.

LIMITED WARRANTY

LIMITED WARRANTY

Sonicbox iM™ Remote Tuner 90 day Free Exchange.

WHO IS COVERED?

You must have proof of purchase to exchange the product. A sales receipt or other document showing that you

LIMITED WARRANTY

WHAT IS EXCLUDED? (cont.)

Your warranty does not cover:

- Incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not

INSTRUCTIONS TO THE USER

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the base unit.

Modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE EQUIPMENT TO RAIN OR MOISTURE.

