 


SP-BT21005

Package Contents



SP-BT21005



 
USB cable



Manual

Feature

1. Status indicator (Power On/Off, Battery and Pairing)
2. Microphone
3. Previous track
4. Play/Pause
5. Next track
6. Volume down
7. Pair or phone button
8. Volume up
9. Power On/Off
10. Mini-USB Charging port
11. Auxiliary-in jack

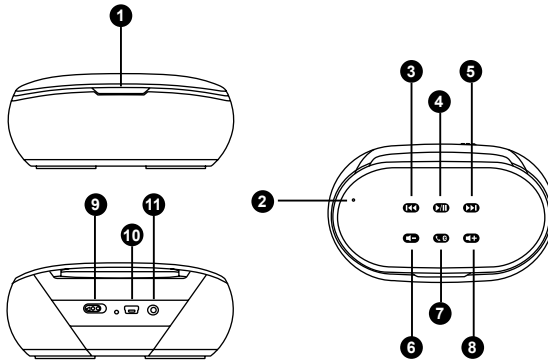

Trouble shooting

The speaker doesn't work or it won't pair

 
- Try moving your device closer.
- Is the speaker turned on and charged?
- Turn the speaker off and then on to wake it.
- Is Bluetooth enabled on your device or computer?
- Try repeating the setup procedure in this guide or pair with a different Bluetooth device.
- The speaker plays music from one device at a time. Unpair the device not being used. (Refer to your device documentation for help.) Pair a new device using the setup procedure.
- If pairing with a computer, specify the Mini Touch Boombox as the audio out device on the computer.

Setup


Step 1



Step 2

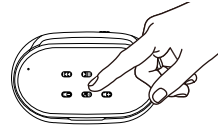

 Step 3

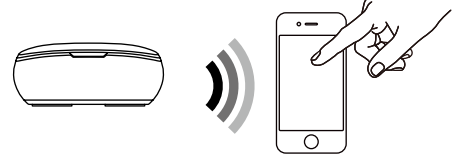

To play audio from a Bluetooth device, you need to pair the device with the speaker. You can pair up to eight devices.

Step 1 On your Bluetooth device, turn on Bluetooth and scan for devices in its Bluetooth menu.

Step 2 Turn on the speaker. When powering up for the first time, the speaker is discoverable for 2 minutes and is ready for pairing. The Status indicator blinks red and blue.

Step 3 When "SP-BT21005" appears on the device list of your Bluetooth device, select the "SP-BT21005". (If a pass code is requested, enter 0000.) The Bluetooth status light turns solid blue after pairing is established. The speaker is ready to play music.

Note: If pairing times out (the Bluetooth status light stops blinking red and blue), press and hold the Pair or Phone button to turn off SP-BT21005. Then, repeat step 2. Pairing additional Bluetooth devices Press and hold the Pair or Phone button until the Bluetooth status light blinks red and blue. Repeat steps 1 and 3 above.

Charging

About once a month, fully charge the speaker (about 4 hours).

Plug the charging cable into the speaker's charging port and the other end into computer USB port(with the power on) for charging.

Status indicator:

Blinking blue = Charging

 
Solid blue = Fully charged

Solid red = Low battery

Blinking red = Very low battery

Battery saving

The speaker enters power saving mode if no audio is played for 30 minutes. Slide the power switch off and then on to wake the speaker.

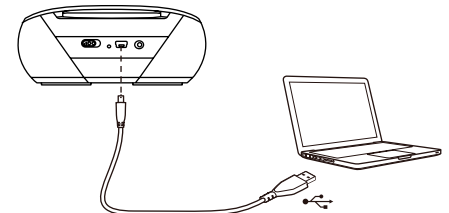

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.