

COVER DEPLOYMENT

- 1) Grasp the CLOAK door in your right hand with thumb finding the left indentation in the system door. Rotate your wrist to the right and the door will pop open. (Fig. 1)
- 2) Grasp the system handle in your right hand and adjust so the handle control buttons are directly under your thumb. (Fig. 2)

Insert Photo
No. 1 Here

Insert Photo
No. 2 Here

Fig. 1

Fig. 2

- 3) To begin cover deployment, press the OUT button and hold. The cover will continue to move as long as the button is depressed. (Fig. 3)
- 4) Hold the button for approximately five seconds, then begin to walk to the front of the vehicle while holding the handle high over the center and top of the vehicle. The objective is to deploy the cover with gentle tension so that it stays on the top and center of the vehicle. This is achieved by walking slightly faster than the system presents the cover. Avoid excessive tension. (Fig. 4)

Insert Photo
No. 3 Here

Insert Photo
No. 4 Here

Fig. 3

Fig. 4

- 5) When you reach the front of the vehicle, and you judge the cover is sufficiently deployed, release the OUT button. Grasp the barrel of the handle with your left hand, grab a handful of the cover just above the narrow trace with your right hand, and gently stretch the cover's elastic so you can snap the handle barrel into the front bumper clip with your left hand. (Fig. 5)
- 6) Now, stretch the left hem of the cover over the passenger side mirror and then down over the bumper. Repeat this process on the driver's side. (Fig. 6)

Insert Photo
No. 5 Here

Insert Photo
No. 6 Here

Fig. 5

Fig. 6

- 7) Walk to the back of the vehicle and gently pull the cover enough to tuck the elastic under each side of the bumper. (Fig. 7)
- 8) Close the system door by locating the left indentation on the door and rotate your wrist to the left. You will hear the latch click. (Fig. 8)

Insert Photo
No. 7 Here

Insert Photo
No. 8 Here

Fig. 7

Fig. 8

COVER REMOVAL

- 1) Pull the cover up and over the passenger side mirror and front left bumper, making sure the cover has cleared the mirror. (Fig. 1)
- 2) Facing the front of the vehicle, grasp the system handle in your right hand and twist to the right to remove it from the front clip. (Fig. 2)

Insert Photo
No. 9 Here

Insert Photo
No. 10 Here

Fig. 1

Fig. 2

- 3) Keep the handle low as you back slightly away towards the bumper on the driver's side, ensuring the elastic hem clears from under the bumper. (Fig. 3)
- 4) Make sure the cover clears the driver's side mirror, then, walk the cover towards the rear of the vehicle. About midway to the rear, press the IN button. (Fig. 4)

Insert Photo
No. 11 Here

Insert Photo
No. 12 Here

Fig. 3

Fig. 4

- 5) Accelerate your pace so you are directly behind the vehicle when there is still about six feet of cover outside the cover's container. (Fig. 5)
- 6) Now, grab the trace and gently, but firmly, pull, stretching the elastic hem as the rest of the cover is retracted. This helps eliminate any air that may be trapped. (Fig. 6)

Insert Photo
No. 13 Here

Insert Photo
No. 14 Here

Fig. 5

Fig. 6

- 7) Stop pressing the button when there is about a foot of trace left. Place the tip of the barrel into the right side of the retaining clip. Press forward until there is enough clearance to dock the rear of the handle. (Fig. 7)
- 8) Close the system door by locating the left indentation on the door and the left. You will hear the latch click.

Insert Photo
No. 15 Here

Insert Photo
No. 16 Here

Fig. 7

Fig. 8