

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment. (Example-use only shielded interface cables when connecting to computer or peripheral devices).

### **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### **Caution!**

 
The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment

# Table of Contents

|                                              |           |
|----------------------------------------------|-----------|
| <b>KNOW YOUR ME TABLET.....</b>              | <b>5</b>  |
| About the Touchscreen.....                   | 7         |
| Protective Film.....                         | 7         |
| Touchscreen Actions.....                     | 7         |
| About the Orientation Sensor.....            | 8         |
| Charging the Tablet.....                     | 9         |
| Inserting a Memory Card.....                 | 9         |
| <b>GETTING STARTED.....</b>                  | <b>11</b> |
| Turning the Tablet On and Off.....           | 11        |
| Turning the Screen On and Off (Standby)..... | 12        |
| Unlocking the Screen.....                    | 12        |
| Home Screen at a Glance.....                 | 13        |
| About Menus.....                             | 14        |
| About Notifications.....                     | 14        |
| <b>CONNECTING TO THE INTERNET.....</b>       | <b>15</b> |
| Requirements.....                            | 15        |
| Connect to a Wi-Fi Network.....              | 15        |

|                                                      |           |
|------------------------------------------------------|-----------|
| <b>CONNECTING TO PROXY SERVER THROUGH WI-FI.....</b> | <b>17</b> |
| <b>BROWSING THE WEB.....</b>                         | <b>22</b> |
| <b>MAIL CONFIGURATION.....</b>                       | <b>24</b> |
| <b>OPTIONAL CONNECTIONS.....</b>                     | <b>25</b> |
| Connecting to a Computer.....                        | 25        |
| Connecting Earphones.....                            | 25        |
| Accessing USB Drive and Micro SD Card.....           | 27        |
| <b>SETTING THE SYSTEM OPTIONS.....</b>               | <b>28</b> |
| <b>BASIC TROUBLE SHOOTING.....</b>                   | <b>31</b> |
| <b>IMPORTANT HANDLING INSTRUCTIONS.....</b>          | <b>32</b> |

## ➔ Know your Tablet

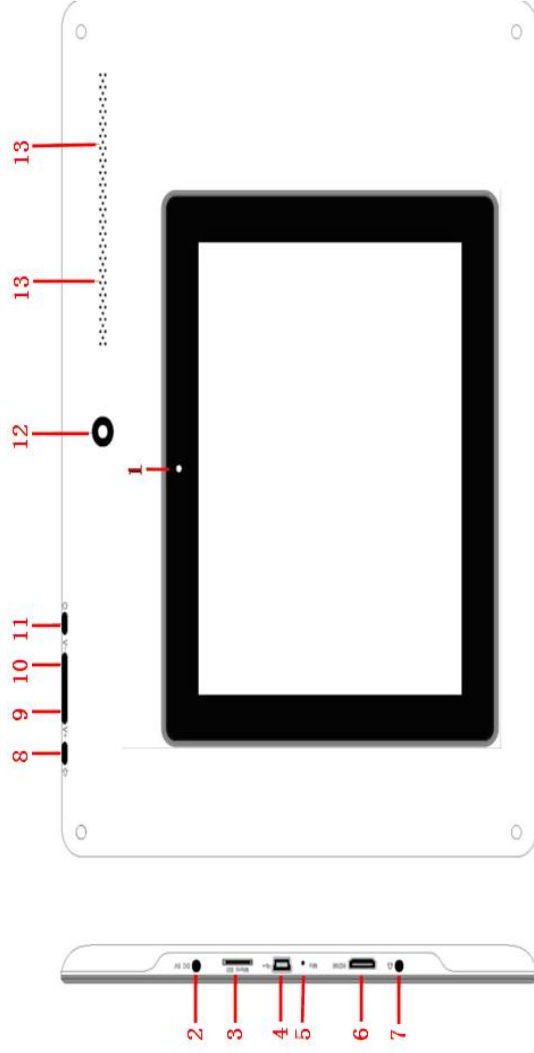

|   |               |   |            |   |         |    |              |    |           |    |           |
|---|---------------|---|------------|---|---------|----|--------------|----|-----------|----|-----------|
| 1 | Front Cam.    | 2 | DC input   | 3 | SD slot | 4  | Mini USB 2.0 | 5  | Reset Key | 6  | HDMI      |
| 7 | Earphone Jack | 8 | Return Key | 9 | Vol +   | 10 | Vol -        | 11 | Power Key | 12 | Rear Cam. |
|   |               |   |            |   |         |    |              |    |           | 13 | Speaker   |

About the Touchscreen

Your tablet comes equipped with an easy-to-use touchscreen which allows access to the tablet's functions. Use your finger tip to touch the area of the screen where a control icon is displayed. If you touch and hold the screen, it will register as a continuous button press.



To avoid damaging the screen, do not touch it with excessive force or with any object other than your finger. For best response, make sure your hands are clean before using the touchscreen controls.

Protective Film

A thin film has been applied to the touchscreen to protect it during shipping. The protective film should be removed before use. To remove it, simply take a corner of the film and peel it away from the screen.


Touchscreen Actions

You can control the functions of the tablet by using the touchscreen. To control the tablet with the touchscreen, use your finger to manipulate icons, buttons, menu items, the onscreen key-board, and other items displayed on the screen.

You can perform the following actions on the touchscreen using your fingertip.

|                        |                                                                                                                                                                                                                                                                |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>TOUCH:</b>          | To activate an on-screen item (e.g., application icons, buttons, menu items, and the letter/symbols of the on-screen keyboard), simply touch them with your finger.                                                                                            |
| <b>TOUCH AND HOLD:</b> | Some on-screen items have an alternate action if you touch and hold it (e.g., opening an alternate menu, or to activate the drag function). To touch and hold an item, touch the item and do not lift your finger until the action occurs.                     |
| <b>DRAW:</b>           | Drag an on-screen item to change its position (e.g., an application icon on the home screen). To drag an item, touch and hold it for a moment, then without lifting your finger, move your finger on the screen until the item reaches its target destination. |

|                    |                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SWIPE:</b>      | Swipe up/down on the screen to scroll through a list. On some screens, you may be able to swipe left/right to change the view. To swipe, touch the screen and then quickly move your finger across the screen without lifting your finger. Do not pause on the screen with your finger at the initial point of contact or you may accidentally drag an item instead. |
| <b>Double-tap:</b> | Quickly tap the screen twice on a webpage or other application screen to zoom (the application must support the double-tap/zoom function). Within the browser, double-tapping a webpage section will cause the browser to zoom and fit that section to the width of the screen.                                                                                      |

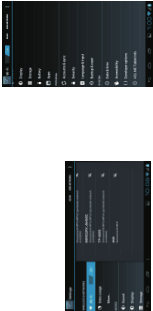 

The orientation sensor can be turned on and off in the Display settings menu.



Note: All screens may not support screen orientation feature and also

## Charging the Tablet

The tablet comes with a built-in rechargeable lithium-polymer battery.

Before using the tablet, the battery should be charged fully. The Status Indicator will light green once the battery is charged fully.

To charge the battery:

- 1.Plug one end of the included power adapter into an AC 100-240V outlet.
- 2.Plug the other end of the included power adapter into the Power jack on the tablet.
- 3.Disconnect the power adapter when the tablet is fully charged.

 Tablet won't support USB charging mode.

## Inserting a Memory Card

The tablet supports microSD memory cards.

Insert a memory card into the microSD card slot to:

- ◆ Increase the memory capacity of your tablet.

- ◆ Play media files stored on the memory card (e.g., music, video, or photo files).

 
### To insert a memory card:

- 1.Align the memory card with the card slot. The metal contacts of the memory card should face down towards the back panel.
- 2.Slide the card into the spring-loaded slot. Push the card in until it clicks into place.

 Do not attempt to insert objects other than a microSD memory card into the card slot. A compatible memory card should fit easily into the card slot; if you encounter resistance, check the alignment of the card

## To release and remove a memory card: 1. UNMOUNT the memory card.

- a. Go to Settings menu (In Home screen press menu virtual key and select system settings)
- b. Select Storage
- c. Select Unmount SD card to unmount the micro SD card. The card can be removed once you see the "SD card Will be unmounted" .

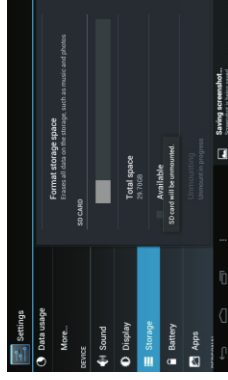

 To avoid damage and data corruption, do not remove a memory card while data is being written to or read from the card. For example, do not remove a card while playing a music file stored on the card.

# Getting Started

## Turning the Tablet On and Off

To turn the tablet on:

 
Press and hold the Power key until the LCD screen turns on. Wait until the Home screen appears; the tablet is now ready for use.

To turn the tablet off:

1. Press and hold the Power key until the Device Options menu appears.



2. Touch Power off on the screen. A confirmation message will appear.

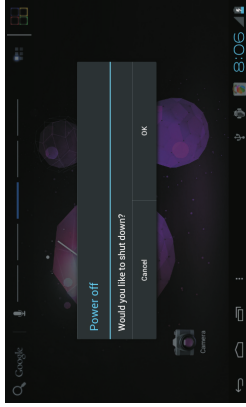


3. Press OK to turn off the tablet.



## Turning the Screen On and Off(Standby) Unlocking the Screen

 When the tablet is on, you can turn off the screen to conserve battery power. Simply press the Power key once to turn the screen off. Press the Power key again to turn the screen back on.


To conserve battery power, the screen can be set to turn off automatically when the tablet is not in use (between 15 seconds and 30 minutes). This Screen timeout option can be found in the display settings menu:

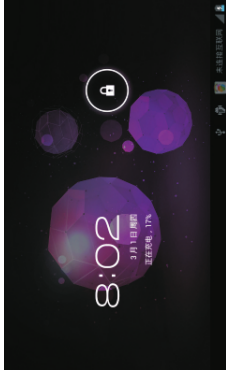

if a password been set, enter the password to finish unlocking the screen. The Screen Unlock password can be set in the security settings menu.

### Home Screen at a Glance

 The home screen is the starting point for all of the features of your tablet.

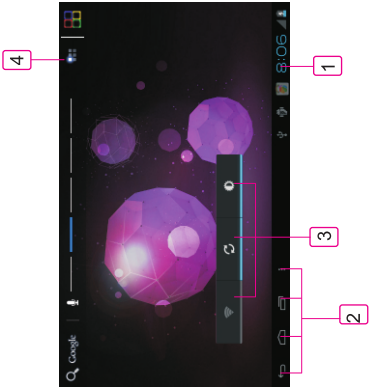

| No | Name                              | Description                                                                                                                                                                                                                                                              |
|----|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | Notification window               | Shows notification icons; touch over the notifications window to open it. Under status of time, battery level, wifi signal strength, mail etc...                                                                                                                         |
| 2  | Virtual buttons in the system Bar | Virtual buttons in the System Bar let you navigate instantly to Back, Home, RecentApps and menu. The system Bar and virtual buttons are present across all apps, but can be dimmed by applications for full screen viewing.                                              |
| 3  | Widgets                           | Widgets let you check email, flip through a calendar, play music, check social streams, and more. Drag them from the home screen, without having to launch apps. To add widget press & hold any apps from all apps launcher and you put it at home screen at empty space |
| 4  | All Apps Launcher                 | Open the Launcher to view a list of all applications installed on the tablet. Touch the All Apps Launcher to open the Launcher. (Note: You can swipe left and right to view additional screens.)                                                                         |

### About Menus

There are two types of menus used by the tablet.

#### 1. Option menus.

 
Option menus contain items related to the current screen or application. To view an option menu, press the Menu key. For eg: If user press virtual menu key at home screen, user notice pop-up of wallpaper, manage apps and system settings.



Not all screens or applications have an option menu; if a menu does not exist, nothing will happen if you press the Menu key.

### Context menus.

Context menus contain items related to a specific item on the screen. To view a context menu, touch and hold an item on the screen. For eg: If user touch & hold home screen, option to change wallpaper appears

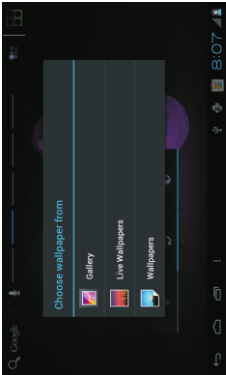

Not all items have a context menu; if a menu does not exist, nothing will happen if you touch and hold the item.

# Connecting to the Internet

This tablet can utilize Wi-Fi data networks to connect to the Internet.

## Requirements

In order to connect to the Internet, you will need the following:

1. A wireless router or access point with a broadband Internet connection

2.The wireless router network settings

You will need to know the name of your network(SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router. Please refer to your wireless router's documentation for help, or ask your network administrator for details.



You may encounter open Wi-Fi networks, or "hotspots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically

## Connect to a Wi-Fi Network

 
The Notification window displays icons that indicate your tablet's Wi-Fi status.

|                                                                                     |                                                                       |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
|  | Connected to a Wi-Fi network<br>(waves indicate connection strength). |
| [no icon]                                                                           | There are no Wi-Fi networks in range, or the Wi-Fi radio is off.      |

1.Turn on the Wi-Fi radio if it is not already on. To turn on Wi-Fi:

a. Press virtual home key from home screen  
b. Touch system settings  
c. Touch wi-fi to turn-on  
d. Once wi-fi turned on, it will list available access points in the range. User can do force scan by touching scan option

When Wi-Fi is on, the tablet will look for and display a list of available Wi-Fi networks.

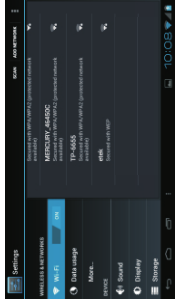

2.Select an available Wi-Fi network to connect to:

In the same Wi-Fi settings menu above, touch a network in the list.

➤ If the network is open, tablet connects to the router once you touch the desired Wi-Fi network.

➤ If the network is secured (as indicated by a Lock icon), the tablet will prompt you to enter a password to connect. Touch the Wireless password box to show the on-screen keyboard and then use it to enter the password. Touch Connect to confirm. When you have successfully connected to a Wi-Fi network, the Notifications window at the bottom of the screen will show a Wi-Fi signal indicator.



To learn about how to add a Wi-Fi network when it is not in range or when the router is set to obscure the network name (SSID); or to configure advanced Wi-Fi options, please refer to the manual.

## Connecting to proxy server through wi-fi

 
Step 1: Press the Menu Button




Step 2: Select the System settings option.




Step 3: In the following screen, make sure Wi-Fi is switched on

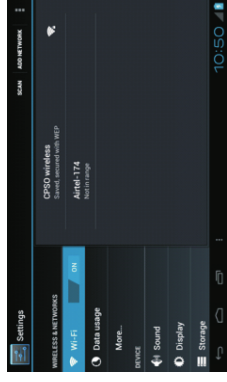

 
Step 4: Now long press on the network with which the proxy settings is to be used

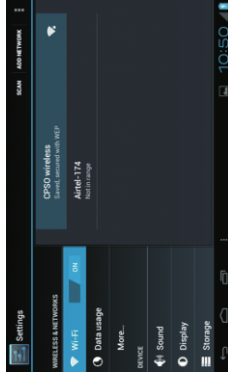

 
**Step 5:** In the following screen select **Modify Network** option

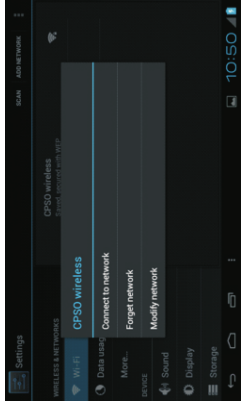

 **Step 6:** Now click on **Show Advanced** option

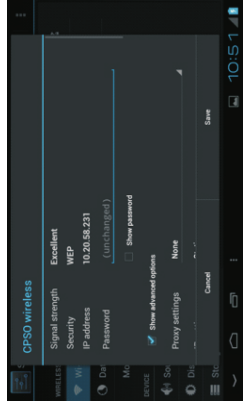

 **Step 7:** In the following screen, in the **Proxy Settings** option please select **Manual** Option

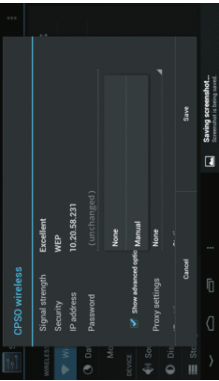

**Step 8:** Now, enter the proxy details **(Proxy Hostname & Proxy Port)** as given by the network administrator

