 


Step 9: Also please ensure that the correct IP settings are done, as provided by the network administrator

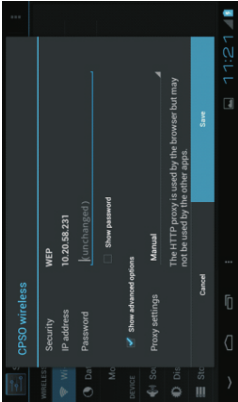

Step 10: Now click on **Save** option.



Browsing the Web


The Android Browser offers an experience that's as rich and convenient as a desktop browser.



To use Browser, the tablet must be connected to the Internet. Read the section "Connecting to the Internet" to learn how to connect to the Internet.

Browser

NO.	Description
1	Address bar
2	To open new tab (max 16 tabs)
3	To bookmark the visited web page
4	Search tool
5	To view book marked pages, To history & saved pages

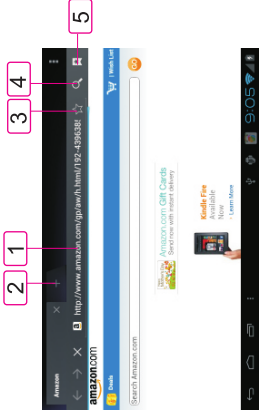 

To bookmark a webpage.

Bookmark your favorite webpages in order to visit them quickly without entering a URL.

1. Go to the webpage that you want to bookmark
2. Touch the Bookmark icon to the right of the Address bar.
3. Touch the Add title.
4. If desired, you can modify the name of the bookmark or its location (URL address).

Otherwise, touch OK to finish adding the bookmark.

➤ Mail Configuration

1. Select the Mail from All apps Launcher. 
2. Enter the email address and password.
3. Select Next for auto configuration of mail settings
4. If auto configuration fails manually imap settings has to be fed by selecting Manual setup

Note: For setting details contact your network administrator.

Optional Connections

 
Connecting to a Computer

Connect the tablet to a computer to transfer files.

1. Connect your tablet to the computer. With the included USB cable:
 - ✦ Plug the small end of the cable into the USB 2.0 HI-speed connector of the tablet.
 - ✦ Plug the large end of the cable into an available USB 2.0 HI-speed port on the computer.
2. When your tablet is connected, a USB icon will appear in the Notification window.
 - Touch Notification window to expand.
3. Mount the storage drive.
 - ✦ Touch USB connected to mount the tablet's built-in storage, then touch Turn on USB storage when prompted to confirm. When mounted, you can copy files to/from your computer to it.



Your tablet will be recognized by the computer as a Removable Storage drive. Drag and drop files between your tablet and the computer. To learn more about copying files, please refer to the documentation included with your computer or operating system.

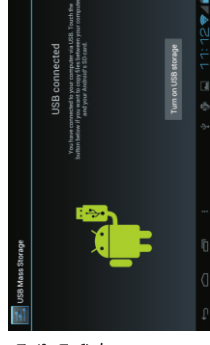

Connecting Earphones

Connect a pair of Earphones to the tablet to enjoy media in private.

Lower the volume level of the tablet before connecting Earphones, and then slowly raise the volume to a comfortable listening level.

- ✦ The Earphones must have a 3.5 mm (1/8 in) plug.
- ✦ When Earphones are connected, speaker output will be disabled automatically.

! Constant exposure to high volumes can lead to hearing loss. If you should experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

Accessing USB Drive and Micro SD Card
Follow the steps given below to access USB Pen drive:
Step 1:

For accessing USB Pen drive, open file manager from all apps launcher and touch Udisk.



Access SD Card: To open SD Card open /sdcard/tflash/.



Setting the System Options

Open the system settings menu to adjust how the tablet looks and functions.
To open the Settings menu:

- 1.From the Home screen, press the virtual Menu key.
 - 2.Select system Settings to open the Settings menu.
- The settings are grouped by category. Select a category to open and customize the settings.
- System settings

Wireless & Networks

Wi-Fi	Used to turn on and off the wi-fi and options available to set the wi-fi settings
Data usage	Data usage controls let you monitor total usage by network type and application and then set limits if needed.
More	Option available to configure the 3G dongle (for detail refer "Connecting 3G dongle section")

Device

Sound	Used to customize the sound settings of your Tablet.
Display	Used to control brightness, sleep time & auto rotate screen.
Storage	Used to view storage details of device and external micro SD card if used and also option available to mount & un-mount the micro SD card.
Battery	Used to view battery level & split up details of power consumption of the device.
Apps	Used to manage the applications in terms of viewing current running apps, installed apps, un-installing etc...)


Personal

Account & sync	Used to add an account & to control the sync status of your device with configured Accounts.
Security	Options available to secure your device.

Language & input	Used to select the language, keyboard layout and to add the new words to the dictionary.
Back up & reset	Used to back up your data & to do factory data reset.

System

Date & Time	Used to set the date, time, time zone etc...
Accessibility	Option to enhance the accessibility of Android 4.0 for blind or visually impaired users, supportable apps are required for its full functionality.
Developer Option	Options available for de-bugging purpose. Note: Suggesting not to change any settings.

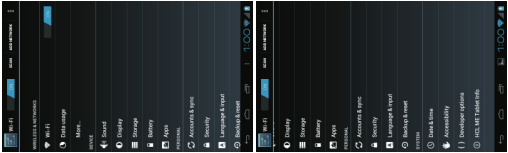 

➤ Basic Troubleshooting

If the product suddenly has no response or powers off, an electrostatic discharge may be the cause. In this circumstance, please follow the procedures below for recovery:

- ◆ Reset the Tablet (use a paper clip to gently press the Reset button on the bottom of the Tablet).
- ◆ Turn on the unit again.

Below is the process to do factory reset, by doing this it will restore the default optimal setting and clear the applications which are residing at data memory space (Follow this instruction if system seems to work unstable, after doing this also problem didn't solve then please contact support Centre).

- ◆ Touch virtual menu key from home screen
- ◆ Touch system settings
- ◆ Scroll down to Backup & Reset and select it
- ◆ Touch Factory data reset & follow on-screen instruction



Warning: By doing Factory data reset, application which are installed will be erased.

➤ Important Handling Instructions

1. Read Instructions:
All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions:
The safety and operating instructions should be retained for future reference.
3. Heed Warnings:
All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions:
All operating and usage instructions should be followed.
5. Cleaning:
Unplug product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning which is bundled along with Tablet.
6. Water and Moisture:
Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
7. Power Sources:
This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer. For products intended to operate from battery power or other sources, refer to the operating instructions.

8. **Overloading:**
Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
9. **Object and Liquid Entry:**
Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
10. **Servicing:**
Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
11. **Damage Requiring Service:**
Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
a) when the power-supply or plug is damaged;
b) if liquid has been spilled or if objects have fallen into the product;
c) if the product has been exposed to rain or water;
d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation;
e) if the product has been dropped or damaged in any way;
f) when the product exhibits a distinct change in performance. This indicates a need for service.

12. **Replacement Parts:**
When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
13. **Safety Check:**
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
14. **Heat:**
The product should be situated away from heat sources such as radiators, stoves, or other products (including amplifiers) that produce heat.
15. **Dropping:**
Don't drop the product over hard surface or strike the product with hard substance which leads to damage of the product because some parts are made up of glass.
16. **Usage during charging:**
While changing, your tablet may get warm on connector end side. For prolong usage hold the tablet to opposite end of connector side for better comfort.