


# FR558WB OPERATION MANUAL

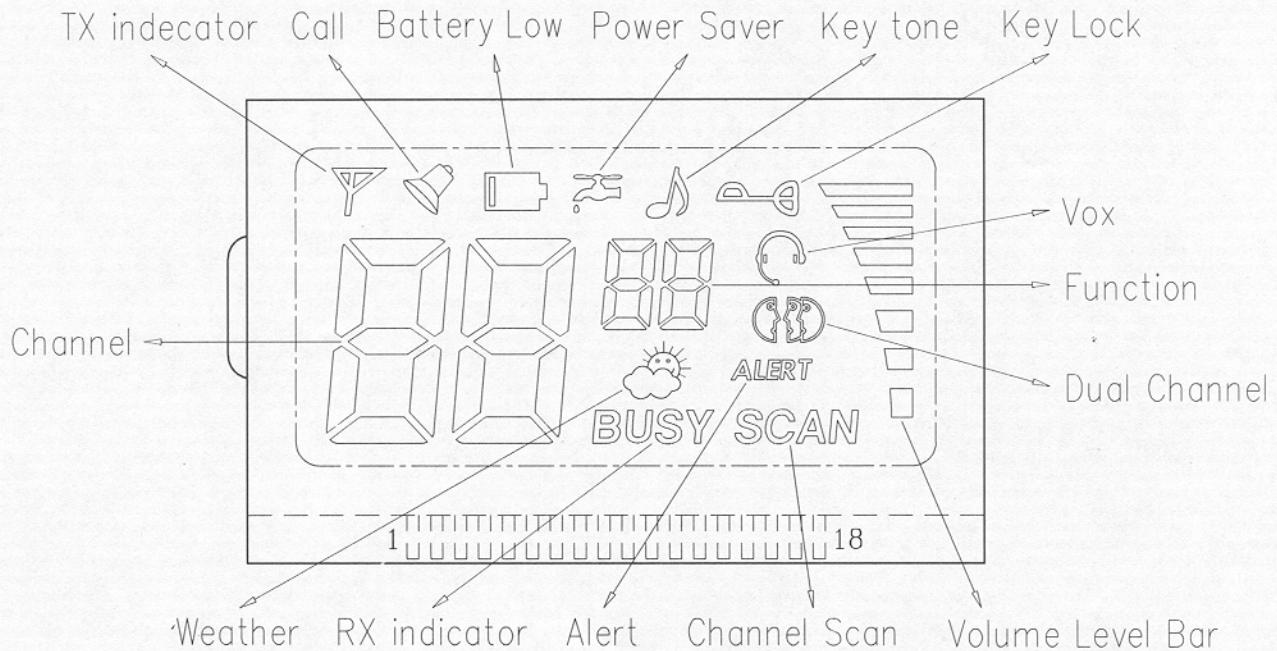

## Power button

Turn the radio on by the "POWER" button. The beep sound will be generated after about 3second and the LCD segments include whole icons will come on , indicating the radio has passed a self-check.  
If you want to turn-off the radio, press & hold the "POWER" button for about 2 second.

## Volume level control

If you want to control the receiving audio level, press "^( Up )" or "v ( Down )" button.  
Levels will indicate as bar numbers on the right side of LCD.  
Press & Hold "^( Up )" or "v ( Down )", levels will be varied automatically. (16 steps)  
Level control operation is always priority whenever press "^( " or "v" button..

## Function Button

It is to select function. Function selection is started after this button is pressed and finished after trip for one round or wait a 5 second without key action or press "PTT", "Monitor" or "Call" buttons.

## Key Lock

This function provides the wrong - operation. Under locking, only "function" & PTT operations are permitted.  
Press & hold the "Function" button until "lock" icon is fixed.  
If you want to release Key lock, press & hold "Function" button until "Lock" icon is disappeared.

## Low battery alert

If the battery voltage is low, "Battery low" icon will be appeared with beep sound for 1 minute and the radio will eventually turn off with three low pitch beat sound.

## SECTION 1 ( FRS MODE )

### FRS Channel selection

Press "Function" button repeatedly until a segment blink.

Press "^^" or "v" button to select the desired channel.

If you want to fix the selected channel, press "PTT" or "Monitor" or "Call" button. And channel selection will be terminated.

### Channel Scanning

Press "Function" button repeatedly until "Scan" icon blinks.

Press "^^" or "v" button until icon is fixed. Channel scanning will be done immedately. If there is any carrier signal, scanning will be waited for a 4 seconds and scanning will be started again.

### CTCSS Selection

Press "Function" button repeatedly until "function" icon blinks. Press "^^" or "v" button to selected CTCSS Channel. If you want to fix the selected channel, press "Function" button again.

If you want to cancel this function, press "Function" button repeated untill CTCSS channel icon blinks.

Press "^^" or "v" button to select a "OF: and press "Function" button again.

Channel scanning will be done immedately. If there is any carrier signal, scanning will be waited for a 4 seconds and scanning will be started again.

### Key tone & Roger tone On/Off

Press "Function" button repeatedly until "Key Tone" icon blinks.

Press "^^" button until Function icon is display "ON". This function will be activated immedately.

If then, key tone will be beep whenever any buttons are pressed except Monitor & PTT and roger tone will be transmitted whenever "PTT" key is pressed.

### VOX Selection

Press "Function" button repeatedly until "VOX" icon blinks.

Press "^^" or "v" button until Function icon is display "ON". This function will be started to operate after function operation is finished.

### Alert Selection

Press "Function" button repeatedly until "Alert" icon blinks.

Press "^^" or "v" button until Function icon is display "ON". This function will be started to operate after function operation is finished.

### VOX Level Selection

Press "Function" button repeatedly until Function icon is display "UL" (VOX Level).

Press "^^" or "v" button the desired level is set.

SB TECHNOLOGY CO., LTD.

FCC ID: OTVSBTFR558WB

JOB #: 665BK0

EXHIBIT #: UD

### Dual Watch

Press "Function" button repeatedly until "Dual Watch" icon blinks. Press "^^" or "v" button the desired channel is set. If you want to cancel this function, repeat again the above sequence until channel number is "0".

## **Monitor operation**

You can monitor a channel by the button "M".

By pressing the button "M" over 2 second, the monitoring will be continued.

While you monitors channels, this function will be terminated by pushing the "M" button one more.

## **SECTION 2 ( INDICATOR OF FRS MODE )**

### **Power Save**

It is always fixed whenever power saving is done.

### **TX indicator**

If PTT button is pressed, "TX" icon will be appeared while transmitting.

### **Call indicator**

If Call button is pressed, "Call" icon will be appeared while transmitting.

### **RX indicator**

If there is any carrier signal during stand-by, "Busy" icon will be appeared.

### **Weather Alert indicator**

If there is weather alert tone signal detected during stand-by mode.

(alert icon is displayed)

Go to Weather receiver mode. Automatically.

## **SECTION 3 (Weather receiver MODE)**

### **Weather receiver mode Selection**

Press "Function" button repeatedly until "weather" icon blinks.

Press "v" or "v" button .

### **Weather receiver Channel setting**

On weather mode, press "v" or "v" button untill the desired channel is set.

If you want to return to FRS mode immedeately, press "Monitor" button.

SB TECHNOLOGY CO., LTD.  
FCC ID: OTVSBTFR558WB  
JOB #: 665BK0  
EXHIBIT #: 6E