

3. User's manual (Function)

The functions of Keyless Start System are as below.

1. Keyless Start function

1) Door Entry function

By pressing request switch on driver/assist seat door or Trunk while bringing a FOB, controller and FOB performs authentication by two-way communication and all doors are unlocked or locked.

2) Engine Start function

By pressing Engine Start Switch while bringing a FOB, Keyless Start System and FOB performs authentication by two-way communication and engine start is permitted.

2. Keyless Entry function

All doors are locked by pressing Lock button on a FOB. Also, opposite behavior is performed by pressing Unlock button.

Trunk is opened by pressing Trunk button.

3. Immobilizer function

By closing FOB to Engine Start Switch when Keyless Start function is failed, FOB and controller performs authentication by two-way communication and engine start is permitted.



User Manual (FCC ID: OUCK84S0)

Notation content only for countries subject to FCC regulations

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Common notation content for FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.