

the tray of the CD player. Press it again to close the tray.

VCD **PLAY VCD** Press this button to execute VCD playing program. Press again to Pause it.

DVD **PLAY DVD** Press this button to execute DVD playing program. You must have already set up the execution path for the DVD playing program. You have to follow this DVD playing program operation instruction to operate it by using mouse.

III. Descriptions of One Touch multimedia function buttons

In this program, you are allowed to set up the execution paths for the function buttons of GAME, WWW, VCD and DVD by following these steps:

In the Start menu under Windows 95 or Windows 98, select Program\One Touch\One Touch Setup to bring up the setup window. You may either enter the execution path from the keyboard or click on Browse to select the desired execution path. If your computer is equipped with DVD player, you must specify the execution path for your DVD playing program in order to make this button functional. To change the default execution path setting for VCD playing, check the box preceding the VCD item in the setup window before starting the setup procedure.

IV. Remark

Because all "One Touch" default setting are setting as your PC system original setting.
Please do setup all related application software completely before install the "One Touch" driver,

MULTIMEDIA

One Touch



MULTIMEDIA KEYBOARD MANUAL

JETYO ELECTRONICS (SHENZHEN) CO., LTD.

I. Installation of One Touch program

Insert the provided diskette into the floppy disk drive (A:, for example) and follow these steps to install the program under Windows 95, Windows 98 or Windows 2000 environment:

1.1.1 Click My computer

1.1.2 Click Drive A:

1.1.3 Click the executable file One Touch, and follow instructions provided on screen to complete the installation. (At the end of installation, the system will automatically restart to finish the setup procedure.)

II. Definition of One Touch multimedia function buttons

DOS DOS Switch to DOS mode by pressing this button, allowing execution of DOS programs and access data in the DOS environment. Switch back to Windows environment by pressing this button again.

✉ CLOSE Press this button to stop and close the program currently running in the foreground.

MY DOC MY DOCUMENT Press this button to execute "Open Office document" command.

GAME Press this button to open the game module in the Accessories program group under Windows.

E-MAIL Press this button to execute all the Microsoft outlook program.

€ NEW EURO SYMBOL Press this button to show "€" * In windows98/windows2000 editor etc.

WWW Press this button to execute the Internet browser program.

CALCULATOR Press this button to execute the Calculator program in the Accessories program group under windows.

VOLUME INCREASE Press this button to increase the volume played by the sound card.

VOLUME DECREASE Press this button to decrease the volume played by the sound card.

MUTE Press this button to make the sound card mute. Press it again to resume the sound at the original volume level.

PREVIOUS

A) With music CD
A-1: In its STOP mode, press this button to select the previous title. Press it again to move up one title.

A-2: In its PLAY mode, press this button to rewind the current title and start playing in one second. Press it again within one second to move up one title.

B) With video CD

B-1: In its STOP mode, press this button to select the previous track. Press it again to move up one track.

B-2: In its PLAY mode, press this button to rewind the current track of video and start playing in one second. Press it again within one second to move up one track. This is not applicable to mono-track video CD.

NEXT When using music CD, pressing this button will move to the next title. When using video CD, Pressing this button will select the next track of video. This is not applicable to mono-track video CD.

CD PLAY CD Press this button to start playing the music CD in the player. Press it again to pause CD player.

STOP Press this button to stop music CD or video software currently playing.

EJECT

When in the STOP mode, pressing this button will open the tray of the CD player. Press it again to close the tray.

When in the PLAY mode, pressing this button will first close the software currently playing, followed by opening