 


BELL[®] Equipment
SONECOR

MODEL JB-950

40 CHANNEL

900 MHZ CORDLESS TELEPHONE

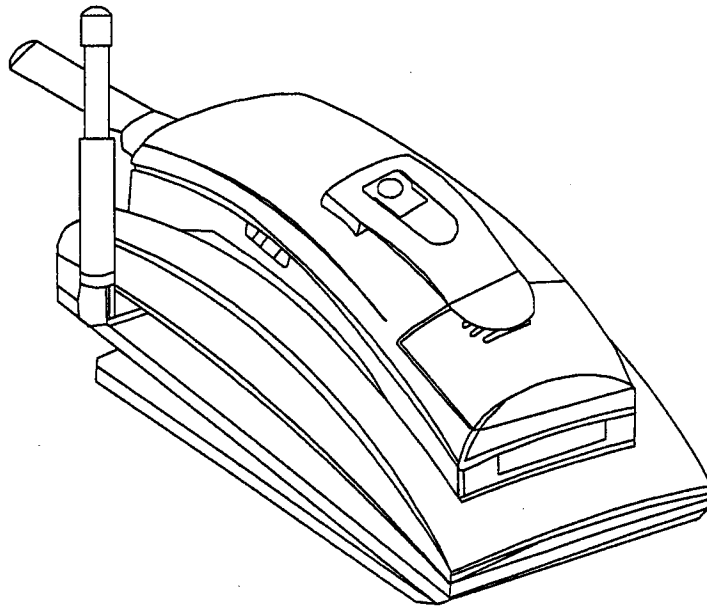

OWNER'S MANUAL

Please read this instruction manual carefully

TABLE OF CONTENTS

Important Safety Instructions	4
Battery Cautionary Instructions	5
Features	6
Control Locations	7
Installation	8
Selecting a location	8
Connecting and charging the Battery Pack	8
Battery Information	9
Using the Optional Belt Clip	9
Connecting the Phone	10
Wall mounting to a Telephone Jack	12
Wall mounting	13
Setting the Tone/Pulse Switch	14
Setting the Ringer On/Off Switch	14
Operation	15
Security Code Information	15
Making and Receiving Calls	15
Maintaining Communication with the Base Unit	15
Setting the Handset Receive Volume	16
Using the Flash Button	16
Using the Page button	16
Using Tone Services on a pulse line	16
Using the Redial button	17
Storing a Number in Memory	17
Entering a Pause in a Stored number	18
Dialing a Stored number	18
Using the Telephone Number Index	18
Using a Headset with the Cordless Headset	19
Maintenance	21
Replacing the Battery Pack	21
Troubleshooting	23
FCC Requirements	24
Interference information	24
Warranty Information	25
Wall Mounting Template	26

TABLE OF CONTENTS

Important Safety Instructions	4
Battery Cautionary Instructions	5
Features	6
Control Locations	7
Installation	8
Selecting a location	8
Connecting and charging the Battery Pack	8
Battery Information	9
Using the Optional Belt Clip	9
Connecting the Phone	10
Wall mounting to a Telephone Jack	12
Wall mounting	13
Setting the Tone/Pulse Switch	14
Setting the Ringer On/Off Switch	14
Operation	15
Security Code Information	15
Making and Receiving Calls	15
Maintaining Communication with the Base Unit	15
Setting the Handset Receive Volume	16
Using the Flash Button	16
Using the Page button	16
Using Tone Services on a pulse line	16
Using the Redial button	17
Storing a Number in Memory	17
Entering a Pause in a Stored number	18
Dialing a Stored number	18
Using the Telephone Number Index	18
Using a Headset with the Cordless Headset	19
Maintenance	21
Replacing the Battery Pack	21
Troubleshooting	23
FCC Requirements	24
Interference information	24
Warranty Information	25
Wall Mounting Template	26

IMPORTANT SAFETY INSTRUCTIONS

1. When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:
2. Read and understand all instructions.
3. Follow all warnings and instructions marked on the product.
4. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners, or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
6. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
7. Slots and openings in the cabinet and the back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
8. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
9. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
10. Never push objects of any kind into this product through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassemble can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power supply cord or plug is damaged or frayed.
 - b. If liquid has been spilled into the product.
 - c. If the product has been exposed to rain or water.
 - d. If the product does not operate normally by following the operating instructions. Adjust only controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - e. If the product has been dropped or the cabinet has been damaged.
 - f. If the product exhibits a distinct change in performance.

IMPORTANT SAFTY INSTRUCTIONS -continued

13. Do not overload wall outlets and extension cords as this can result in the risk of fire or electrical shock.
14. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
15. Do not use the telephone to report a gas leak in the vicinity of the leak.
16. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
17. **CAUTION**
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type recommended by the manufacturer.
Dispose of used batteries according to the manufacturer's instructions.

SAVE THESE INSTRUCTIONS

BATTERY CAUTIONARY INSTRUCTIONS

CAUTION: To Reduce the Risk of Fire or Injury to Persons, Read and Follow these Instructions.

1. Use only the following type and size Ni-Cd battery pack: JB 40AA2/3N3BMX 3.6V 400mAH JB Energy
2. Do not dispose of the batteries in a fire. The cell may explode. Check with local codes or possible special disposal instructions.
3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conductors such as rings, bracelets, keys. The battery or conductor may overheat and cause burns.
5. Do not attempt to recharge the batteries provided with or identified for use with this product by heating them. The battery may leak corrosive electrolyte or may explode.
6. Do not attempt to rejuvenate the batteries provided with or identified for use with this product by heating them. Sudden release of the batteries electrolyte may occur causing burns or irritation to eyes or skin.
7. All batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries.
8. When inserting batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, and that may result in leakage or explosion.
9. Remove the battery from this product if the product will not be used for a long period of time (several months or more) since during this time the battery could leak in the product.
10. Discard dead batteries as soon as possible since dead batteries are more likely to leak in a product.
11. Do not store this product, or the battery provided with or identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.

FEATURES


The JB-950 telephone is designed to provide you the convenience of high quality, portable telephone communication. The cordless handset allows you to make or receive calls away from the base. Your JB-950 telephone offers the following features:

- Advanced circuit design reduces interference.
- 65,000 security codes prevent unauthorized use of your phone line by other cordless phone users.
- Speed-Dial feature lets you store up to 10 numbers in memory for easy dialing.
- Last Number Redial button redials the last phone number dialed.
- Automatically selects a clear channel when you pick up the phone.
- Flash button for use with special phone services.
- Selectable Tone-Pulse Dialing allows using your phone with either type of service.
- 200 foot range depending upon surroundings.
- Ringer On/Off switch.
- Norm/High selectable handset receiver volume control.
- Headset jack allows use of optional headset (not included).
- Desk or Wall mountable.
- Hearing-Aid Compatible.
- FCC approved.
- UL approved AC power adapter included.

CONTROL LOCATIONS

FIGURE 1

 Headset jack
2.5mm

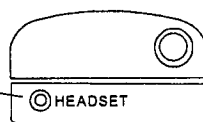

Redial Button
Press to redial the
Last number you
called.

 
 
Receiver
Volume Control:
press to store
phone number in
memory or to
call a number
you have stored.

Memo Button:
Press to store
phone number
in memory or to
call a number
you have to stored.

Channel Button:
Press to change the
operating channel when
you hear interference.

Tone (*) Button:
Press to temporarily
change the dialing
mode from pulse
to tone.

Talk Button: Lights
to indicate line is in
use.

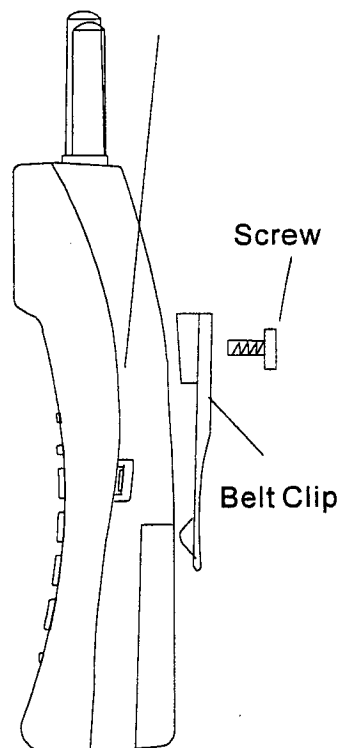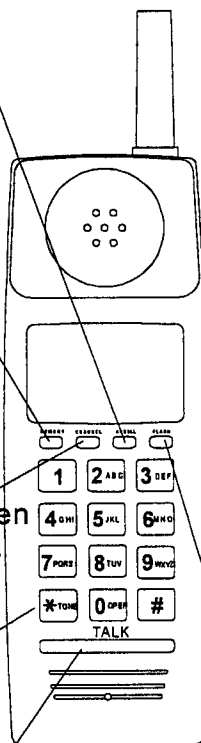

Flash Button:
Press to answer an incoming
call if you have Call Waiting.
Press to get a new dial
tone without hanging up.

INSTALLATION


SELECTING A LOCATION

Install the JB-950 base unit in a location that is near an AC outlet and a modular telephone line jack. Try to keep the base unit away from electrical machinery, electrical appliances, metal walls filing cabinets, wireless intercoms, security alarms, and room monitors. The base's location effects the phone's range. Try several locations to see which provides the best performance. The JB-950 is supplied with a Class 2 **120V AC/7.5V DC** power adapter rated at 200 mA, center positive plug.

CONNECTING AND CHARGING THE BATTERY PACK

The JB-950 comes with a nickel-cadmium battery pack located in the handset. Important, you must connect the battery pack and charge it for at least 15 hours prior to using the phone for the first time.

 FIGURE 2

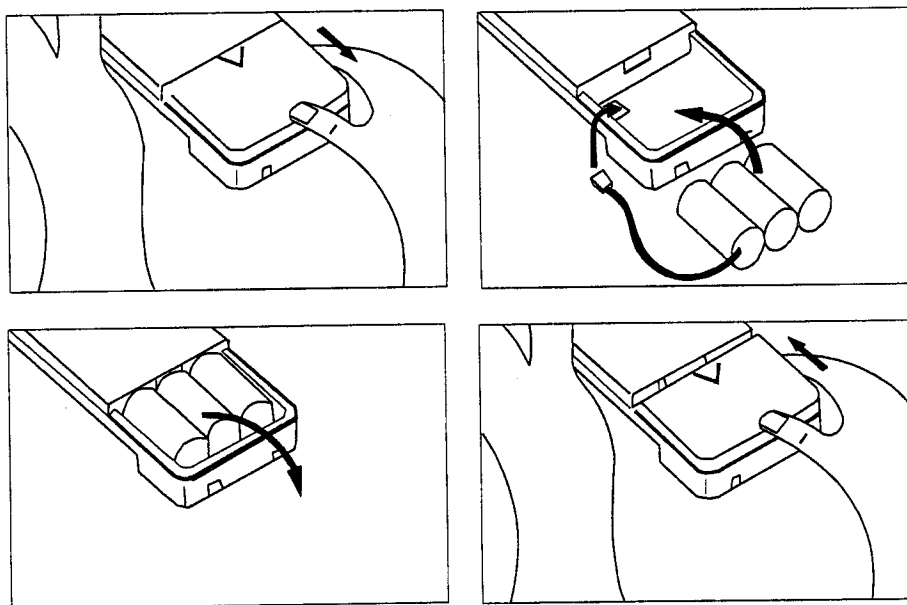

1. Remove the handset battery compartment cover. (See Figure 2)
2. Insert the battery pack connector into the battery connector pins located inside the battery compartment.

INSTALLATION – continued

3. Replace the handset battery cover.

BATTERY INFORMATION

About once a month, fully discharge the battery pack by keeping the handset off the base unit until the **TALK** indicator begins to flash. This will maintain the battery pack's ability to fully recharge.

1. If the cordless handset battery becomes low while you are on a call, two beeps will be heard every 15 seconds and the **TALK** indicator will flash. After about 5 minutes, you will be disconnected.
2. Terminate the call as soon as possible and return the handset to the base unit cradle for charging.

USING THE OPTIONAL BELT CLIP

A removable belt clip has been provided to allow you to carry the cordless handset on your belt.

1. If desired, install the optional belt clip on the rear of the handset. (See Figure 1)
2. Hand tighten the screw provided with the belt clip.

INSTALLATION

CONNECTING THE PHONE

Follow these steps to connect the base unit to AC power and to the telephone line.

1. Attach the desk bracket to the base unit. (See Figure 4)

FIGURE 4


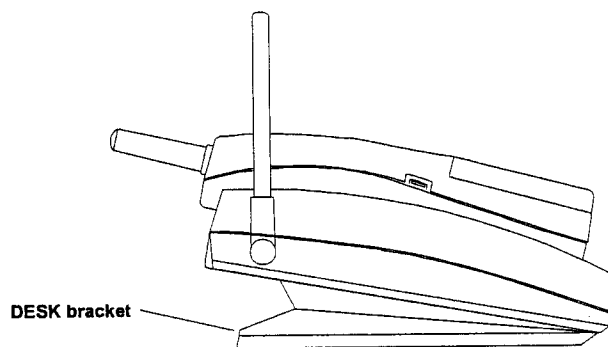 



FIGURE 5

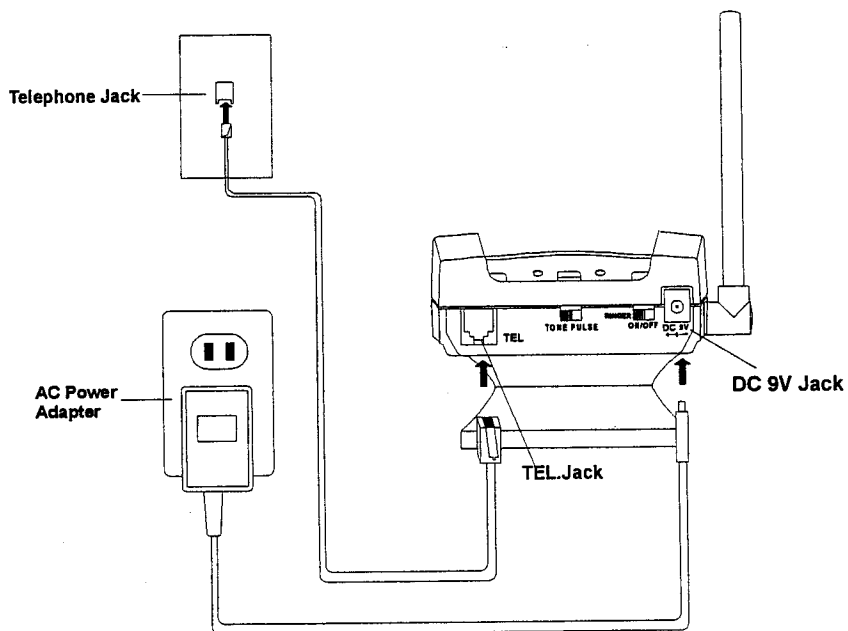 

INSTALLATION - continued

2. Plug the long telephone line cord (supplied) into the **TEL.** Jack on the base unit. (See Figure 5 and 9)
3. Plug the remaining end of the telephone line cord into an existing telephone line jack.
4. Insert the **AC** power adapter cord plug into the DC 7.5V jack on the base unit.
5. Plug the **AC** power adapter into an existing **AC** power outlet, the **POWER** indicator on the base unit will light.
6. Adjust the base antenna to a vertical position, make sure that it is fully extended.
7. Place the handset in the base to charge the battery pack.
8. The **IN USE/CHARGE** indicator on the base will light.
9. If the **IN USE/CHARGE** indicator does not light when the handset is placed in the base, make sure that the handset charging contacts are touching the base charging contacts. (See Figure 6)

 FIGURE 6

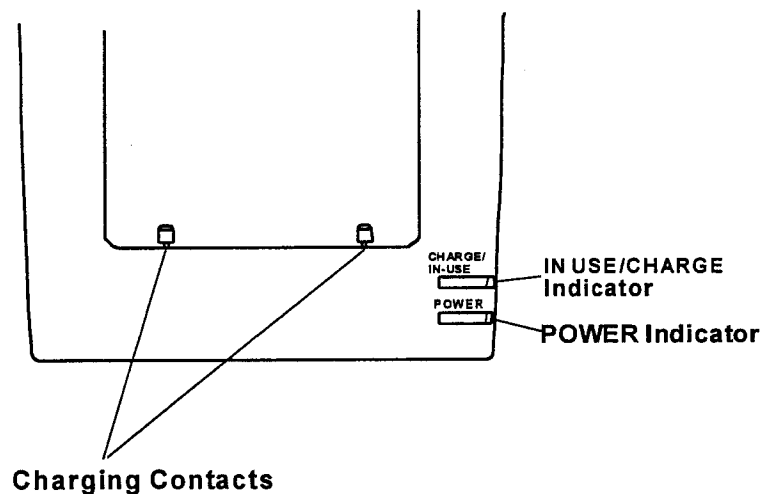

10. After the battery is fully charged, press the handset **TALK** button, the **TALK** indicator will light and dial tone will be heard.
11. When you first use the phone after initially charging or recharging the battery pack, the phone might not work and you might hear error tones.
12. If you hear the error tones, return the handset to the cradle for at least 2 seconds to reset the security access-protection code.
13. The handset is now ready to use.


INSTALLATION - continued

WALL MOUNTING TO A TELEPHONE JACK

Your cordless telephone can be mounted directly to a modular telephone wall jack that contains two mounting studs. Refer to the desk installation instructions but with the following changes. (See Figure 7)

1. Remove the desk bracket by pressing the release tab located on the bottom of the base unit.
2. Plug one end of the short telephone cord (supplied) into the **TEL.** Jack located on the base unit.
3. Plug the remaining end of the telephone line cord into the wall jack.
4. Place the handset into the base unit cradle.
5. Slide the two keyholes located on the bottom of the base unit over the wall plate mounting studs. Gently press downward until the base unit locks in place.

 FIGURE 7

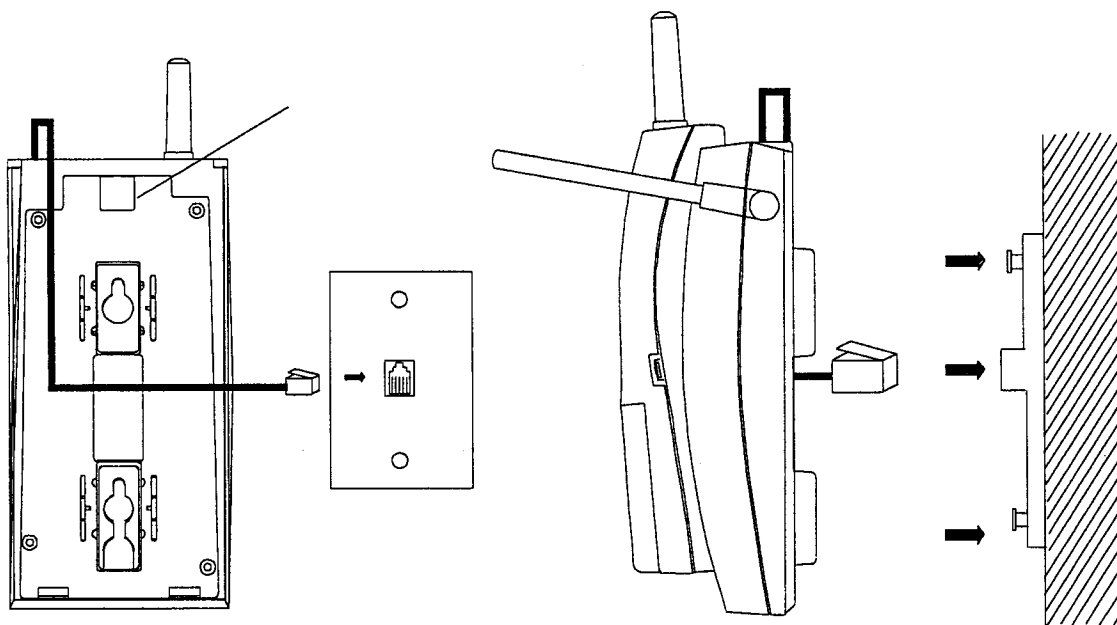

INSTALLATION - continued


WALL MOUNTING

If the telephone wall jack does not have a face containing two mounting studs, the JB-950 can be mounted to any wall surface using two self-tapping screws (not supplied).

Follow the desk installation instructions but with the following changes.

1. If you are mounting the JB-950 to a plaster wall surface, it is necessary to first drill two 3/16 inch holes to install the two expanding plastic anchors (not supplied) into the wall. (See Figure 8)

 FIGURE 8

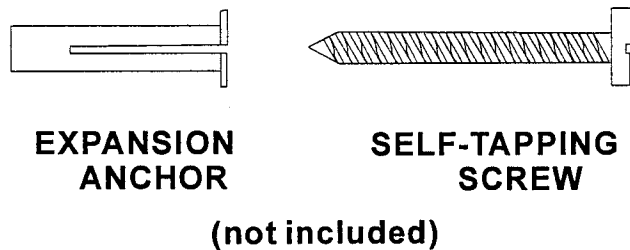

2. Install the two self tapping screws at a distance of 3 29/32 inches (100mm) from each other and located on a vertical center line. (See Figure 12)
3. Press a plastic anchor into each of the two holes. Tap the anchor into the wall with a hammer until it is completely seated.
4. Inset a screw into each mounting hole and tighten each screw with a screwdriver.
5. Tighten each screw just enough to allow the two keyholes enough clearance to slip snugly over the screw heads.
6. Connect one end of the long telephone line cord (supplied) into the JB-950 **TEL.** Jack.
7. Connect the remaining end of the telephone line cord into a nearby telephone.
8. Insert the AC power adapter cord plug into the **DC 7.5V** jack in the back of the base.
9. Plug the AC power adapter into an existing AC power outlet, the **POWER** indicator on the base will light.
10. Adjust the base antenna to a vertical position, making sure that it is fully extended.


INSTALLATION - continued

SETTING THE TONE/PULSE SWITCH

Set the **TONE-PULSE** switch located in the base unit for the type of service you have. If you are not sure of which type service you have, do the following test after charging the battery. (See Figure 9)

1. Set the **TONE-PULSE** switch to **TONE** position.
2. Remove the handset from the base unit, then press the button and listen for dial tone.
3. Press any dialing button except 0. If dial tone stops, you have touch-tone service.
Leave the **TONE-PULSE** set to **TONE** position.
4. If dial tone continues, you have pulse service. Set the **TONE-PULSE** switch to **PULSE** position.

 FIGURE 9

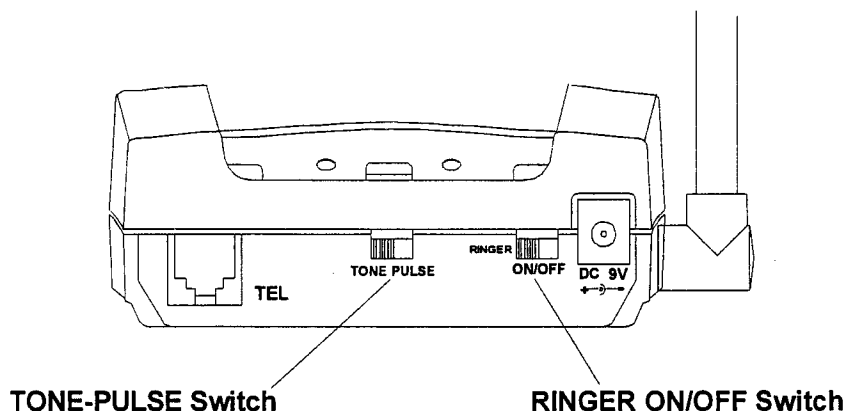

SETTING THE RINGER ON/OFF SWITCH

The **RINGER** switch can be used to turn the ringer on and off. The **RINGER** switch must be on for the handset to ring during an incoming call. Set the **RINGER** switch to the **ON** position for normal operation. (See Figure 9)

1. If no ringer sound is desired, set the **RINGER** switch to the **OFF** position.

OPERATION

SECURITY CODE INFORMATION

Your JB-950 cordless telephone uses a security code that prevent your cordless handset conversation from being accessed by a phone on a different line. Once the cordless handset battery is fully charged, the handset will automatically select a security code from over 65,000 combinations. The security code is changed every time the cordless handset is placed in the base unit cradle.

If you experience difficulty with placing or receiving calls, you may have lost the security code. The cordless handset can no longer communicate with the base. Reset by placing handset on base unit for 2 seconds. If that does not work, unplug the AC power adapter from the wall outlet, then disconnect the cordless handset battery for 2 seconds, then reconnect. Place handset back on base unit and then plug in the AC power adapter.

MAKING AND RECEIVING CALLS

The cordless handset automatically searches and selects the clearest of 40 channels when the **TALK** button is pressed. There may be a 1-2 second delay while the handset scans for the clearest channel. The **TALK** LED indicator will flash during scan.

To make a call, press the **TALK** button, the **TALK** LED indicator on the handset will light. (See Figure 1)

1. When dial tone is heard, use the key pad buttons to enter the number that you want to call.
2. To hang up a call, press the **TALK** button or place the handset on the base unit.
3. To answer a call when the handset is in the base, pick up the handset. The **TALK** LED indicator will light.
4. To answer a call when the handset is not on the base unit, press the **TALK** button. The **TALK** LED indicator will light.

MAINTAINING COMMUNICATION WITH THE BASE UNIT

Placing a call too far away from the base unit may result in static and noise to hear in the cordless handset receiver. If interference occurs during a call, the cordless handset might lose communication with the base and the call might be disconnected.

1. If you experience interference during a call, press the **CHANNEL** button to switch to another channel until you have good reception. (See Figure 1)

OPERATION — continued

2. You must be in usable range of the base unit to change channels. The base unit antenna should be in a fully upright position.
3. If changing channels does not eliminate the interference, move closer to base unit or the cordless handset will turn off automatically after 16 seconds.
4. If the cordless handset turns off because it is out of range, you must reset it by placing it back on the base unit to re establish the security code.

SETTING THE HANDSET RECEIVE VOLUME

The **VOLUME** control allows you to adjust the handset receive sound level. This is useful when you are in a noisy area.

1. Set the **VOLUME** switch on the side of the handset to the **NORM** or **HIGH** position as desired. (See Figure 1)

USING THE FLASH BUTTON

Pressing the **FLASH** button provides the electronic equivalent of momentarily pressing the hook switch.

1. For example, If you have Call Waiting, you can put the present call on hold and answer a second call by pressing **FLASH** button.
2. Press the **FLASH** button again to return to the original call. (See Figure 1)
3. The redial memory does not store the **FLASH** entry or the digits you press after pressing the **FLASH** button.

USING THE PAGE BUTTON

If you have misplaced the handset, press and hold the page button for about ten seconds. A series of paging tones will sound from the remote handset for approximately 60 seconds, allowing time to locate the handset. (See Figure 10)

USING TONE SERVICES ON A PULSE LINE

Some special phone services, such as bank-by-phone, require tone signals. If you have pulse service, you can still use these special tone services.

OPERATION - continued

1. Dial the service's main number.
2. Press the * (asterisk) button at the point that signals are required, then dial the additional digits of the number. The phone will send these numbers as tone signals.
3. The phone automatically resets to pulse mode when you hang up.

USING THE REDIAL BUTTON

The last number dialed (up to 32 digits) is stored in redial memory until another number is dialed. If desired, the last number can be quickly dialed from memory.

1. Momentarily pressing the **TALK** button located on the on cordless handset. (See Figure 1)
2. When you hear a dial tone, press the **REDIAL** button.

STORING A NUMBER IN MEMORY

The JBE-950 allows you to store telephone numbers up to 16 digits in length into each of the 10 keypad memory. Locations.

1. To store a number in memory, confirm that the **TALK** indicator is off, t
2. Press the **MEMORY** button, then enter the number you want to store.
3. After you have entered the number, press the **MEMORY** button again.
4. Press the desired keypad button (0-9) where you want to store the number. A long beep tone will be heard confirming that the phone number has been stored in memory.
5. When storing numbers for special services (such as alternate long distance or bank-by-phone), store the service's main phone number in one memory location and numbers containing additional information in second memory location.
6. Each time the * (asterisk) keypad button is pressed, it uses one of the available digits. If more than 16 digits are entered during programming, an error tone will sound and the programming mode will be canceled. Please try again.
7. In case a wrong digit is entered, press the **FLASH** button to clear all the entered digits and then re-enter the number to be stored.

OPERATION — continued

8. Write the stored number next to the memory location number on the memory index card located on the base unit using a pencil.
9. If you receive a call while you are storing a number in memory, press the **TALK** button to answer the call. After completing the call, begin programming again from the first step.
10. To change a telephone number stored in memory, simply store a new number in that memory location.

DIALING A STORED NUMBER

To dial a telephone number stored in memory, press the **TALK** button, the **TALK** LED indicator will light.

1. When dial tone is heard, press the **MEMORY** button, press the keypad memory location button that contains the number you want to dial.
2. The stored number you have selected will be automatically dialed.


USING THE TELEPHONE NUMBER INDEX

A telephone number index is provided on the base unit. You can use it to write the names of the persons whose telephone numbers you have stored in the speed dial memories.

1. The index can be erased many times to accommodate change if you use a pencil. (See Figure 10).

OPERATION — continued

 
FIGURE 10

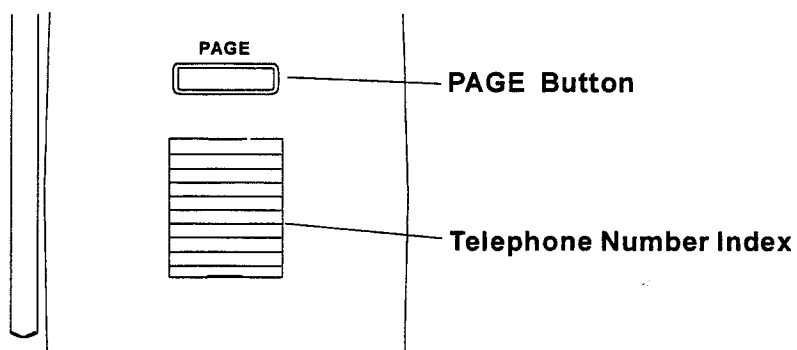

USING A HEADSET WITH THE CORDLESS HANDSET

Your JB-950 cordless handset contains a 2.5mm headset jack. The headset jack gives you the option of using a cordless phone headset (not included), that when used with the belt clip, provides hands-free convenience.

 FIGURE 11

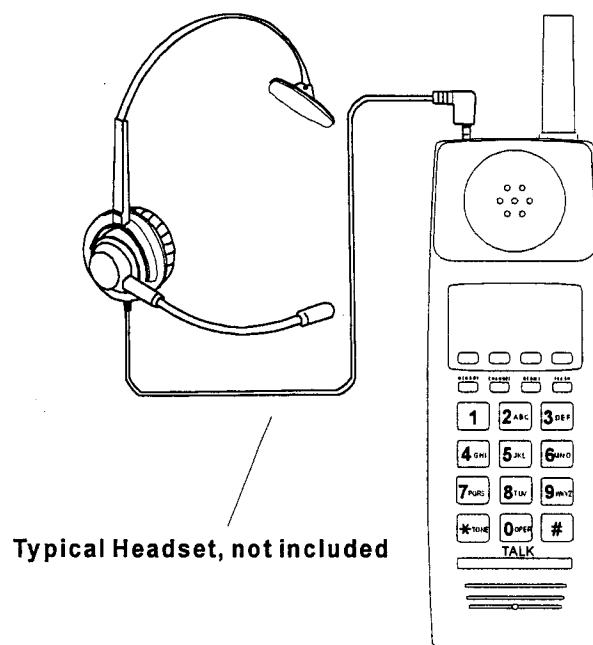

OPERATION — continued

1. If you desire to use an optional headset (not included), you must use one that has a 2.5mm diameter connector plug.
2. Insert the 2.5mm diameter headset plug into the handset jack located on the top of the cordless handset jack.
3. For best operation, adjust the microphone boom until it is about 2 inches from your mouth while talking in a normal tone of voice.

MAINTENANCE

REPLACING THE BATTERY PACK

If you follow the instructions in "Connecting and Charging the Battery Pack" elsewhere in this manual, the battery pack should last for several years. If the battery pack does not hold a charge for more than 2 hours after an overnight charge, replace the battery pack with a new 3.6volt, 400 mAH battery pack.

Note: The replacement battery pack must have a connector that fits the connector pin located in the handset battery compartment. Replacement battery packs can be obtained directly from TT Systems LLC. If you desire to purchase an exact replacement battery pack, an order form can be with this manual.

Caution: Please refer to and read the BATTERY CAUTIONARY INFORMATION found at the beginning of this manual prior to replacing the battery pack.

Important: Your telephone contains a rechargeable nickel cadmium battery pack. At the end of the battery pack's useful life, it must be recycled or disposed of properly. Contact your local, county, or state hazardous waste management authorities for information on recycling or disposal programs in your area.

1. Install the new battery pack as described below, then charge the battery pack for about 15 hours before you use it the first time.
2. To avoid losing numbers stored in memory, install and begin charging the new battery pack immediately after removing the old one.
3. Remove the optional belt clip if installed.
4. Remove the handset battery compartment cover.
5. Gently pull on the battery connector to disconnect it, then remove the battery pack.
6. Slide the battery pack's connector onto the connector onto the connector pins.
7. Put the battery pack into the compartment and Replace the battery cover.

MAINTENANCE – continued

The JBE-950 has been designed to give years of trouble free service. To help insure its longevity, please read the following maintenance instructions:

- Keep the JB-950 dry. If it gets wet, first unplug the AC adapter then wipe the unit dry immediately. Liquids can contain minerals that can corrode electronic circuits.
- Use and store the JB-950 only in normal temperature environments. High temperatures can shorten the life of electronic components and distort or melt its plastic parts.
- Keep the JB-950 away from dust and dirt, which can cause premature product failure.
- Handle the JB-950 gently and carefully. Dropping it can cause serious damage to circuitry, or plastic case, which may result in causing it to malfunction.
- It is the responsibility of users requiring service to report the need for service to TT Systems LLC. They will make the necessary arrangements for repair or replacement.
- Should you have any questions about the operation of the BE-900CHT cordless telephone please call **1-914-968-2100**, between the hours of **9:00 A.M.** and **4:30 P.M.** eastern time. Or you may contact TT Systems LLC for technical assistance via our internet Website: <http://www.tech@ttsystems.com>

CAUTION: Any changes or modifications in the construction of this device which is not expressly approved by the party responsible for compliance could void the user's authority to operation this equipment.

TROUBLESHOOTING

We do not expect you to have any problem with your phone, but if you do, the following suggestions may help.

SYMPTOM	SUGGESTION
The phone does not work.	Connect the battery. (See page 8)
	Fully extend the base's antenna and raise it to a vertical position.
	Ensure the phone's modular cord and the AV adapter are installed correctly connected.
	Recharge the keypad's battery pack. If the battery power is too low, the TALK/LOW BATT. Indicator will not light.
	Reset the security access-protection code by placing the keypad in the cradle, disconnect the AC power and then reconnect AV power.
Interference is severe	Move the keypad closer to the base.
	Keep the base and remote keypad away from interference sources such as computers, radio-controlled toys, wireless microphones, wireless alarm systems, wireless intercoms and room monitors, fluorescent lights, and electrical appliances.
	Turn off the interfering device.
	Hang up and redial the number.
The range decreases	Fully extend the base's antenna and raise it to a vertical position.
	Ensure the antenna is not touching a metal surface.
	Recharge the keypad battery pack.
The volume level drops or you hear unusual sounds when someone picks up another phone on the same line.	Hang up the second phone.

FCC REQUIREMENTS

This equipment complies with Part 68 of the FCC Rules. On the bottom or back of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. Upon request, you must provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5).

If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. If advanced notice isn't practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, disconnect this equipment from the network until the problem has been corrected or until you are sure the equipment is not malfunctioning.

- This telephone cannot be used on coin service pay the telephones.
- Connection of this telephone to party lines is subject to state tariffs.
- This telephone is Hearing Aid Compatible.

INTERFERENCE INFORMATION

This equipment generates and uses radio frequency energy and if not installed and used properly in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of the FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the radio or TV receiving antenna. Relocate this device with respect to the receiver. Move this device away from the receiver.
- If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.
- The user may find the following booklet, prepared by the Federal Communications Commission, helpful:
- **"How to Identify and Resolve Radio-TV Interference Problems"**

This booklet is available from the U.S. Government printing Office, Washington, DC 20402, Stock Number. 04-000-00354-4. There may be a charge for this booklet

Aastra Telecom


Limited Warranty

- A. Aastra warrants that the JB-950 sold by Aastrs within the continental limits of the United States, Hawaii and Alaska, are free from defects in materials and workmanship under normal use and service for 1 year. This warranty is applicable only to the original purchaser of the JB-950, when accompanied by a sales receipt stating the date of purchase and name of the company from which purchased. This warranty is in lieu of and excludes all other warranties, expressed or implied, including any implied warranty of merchantability or fitness, and of any other obligation on the part of Aastra.
- B. If the JB-950 shall prove to be defective, then Aastra shall either replace or repair the JB-950 at its discretion as follows:
1. At no cost to the original purchaser except shipping charges, within 90 days of the date of purchase.
 2. Warranty service for your JB-950 is provided by TT System LLC. From 91 days to 365 days, you may return the JB-950 to TT Systems LLC at the following address:
TT Systems LLC
7 Odell Plaza
Yonkers, New York 10701
Tel: 914-968-2100
- C. Shipping charges are at the customer's expense. Please include a copy of your sales receipt and a check or money order made out to TT Systems LLC for the amount of \$14.95 to cover shipping and handling.
- D. There is no informal dispute settlement mechanism available.
- E. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusions or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you.
- F. This warranty gives you specific legal rights, and you ma also have other rights which vary from state to state.
- G. This warranty does not extend to any JB-950 sold by Aastra which has been subjected to misuse, neglect, accident, improper application, improper application, improper installation or to use in violation of the instructions furnished by Aastra. This warranty does not extend to or apply to any JB-950 which has been repaired or altered by any persons who have not been expressly approved by Aastra.
- H. Aastra shall not be liable for any special or consequential damages or for loss or expense directly or indirectly arising from use of the products or any inability to use them either separately or in combination with other equipment or product accessories or from any other cause.
- I. Aastra reserves the right to make changes in the design of the JB-950 and to make additions or improvement to the JB-950 without incurring any obligation to modify any JB-950 previously sold.

WALL MOUNTING TEMPLATE

FIGURE 12

 Wall Mounting Guide

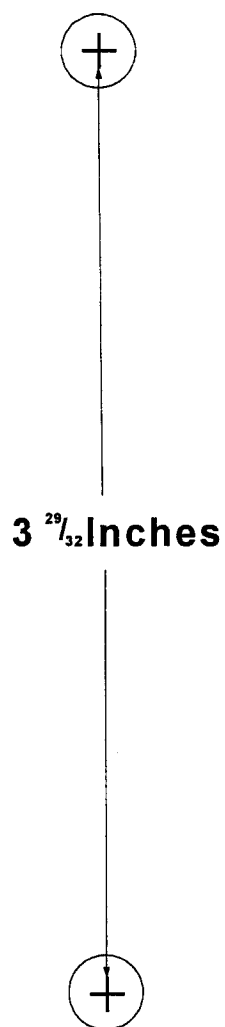

REMOVE AND USE TO LOCATE THE WALL MOUNTING SCREW LOCATIONS

To order a replacement battery pack for the
JB-950 cordless telephone, please mail this
order form to

TT AYSTEMS LLC

7 Odell Plaza

Yonkers, NY 10701

—Battery Packs @ \$14.95

Please enclose a check or money order made
out to TT SYSTEMS LLC for the amount of
\$14.95 for each Battery Pack. Shipping and
handling is included in the price.

Please ship order to: **Name:**

Company:

Address:

City, State, and Zip:

(This is your mailing label)

From:

TT SYSTEMS LLC

7 Odell Plaza

Yonkers, NY 10701

To:

.....
.....
.....