

2 To Use Monitor

Note: Batteries must be fully charged for portable use.

1. Slide the channel/off switch on the Child's Unit to either A or B to turn the unit on.
2. Slide the channel selector switch on the Parent's Unit to the same channel as the Child's Unit (A or B). For the Monitor to work properly, both units must be set to the same channel.
3. Slide the on/off switch on the Parent's Unit to the on position.
4. Turn the volume dial on the Parent's Unit clockwise to the desired loudness level.
5. Keep the Parent's Unit with you. For best reception keep both units as near upright as possible.

Range:

The range of the Monitor will vary with the surroundings. You may want to test its workable range by walking through your house and yard and listening for the volume and clarity of the sounds being transmitted.

Using belt clip:

 
 
Slide onto your belt or waistband. The belt clip has two slots; you can thread your belt through these slots for added security.

Changing channels:

Always keep both units set to the same channel (A or B). If you experience interference or static with one channel, switch to the other.

Positioning antennas:

Always be certain the antennas on both units are straight up.

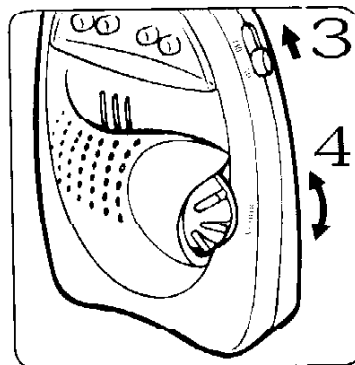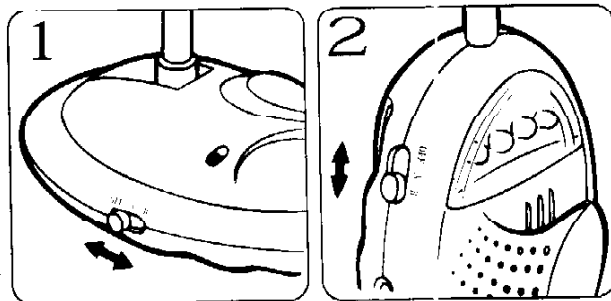

Lights

Here's how to interpret the lights on the Parent's Unit.

1 Power Indicator

Light is Green - Both units are on, and the Monitor is ready to transmit sound.

Light is Red - Batteries in Parent's Unit are weak. Begin recharging as soon as possible.

Not Lit - Unit is not receiving power. (See "Troubleshooting." "No power.")

 
2 Two Quiet Sound Lights

No Lights Lit - No sound from Child's Unit (baby is quiet).

One or Two Lights Green - Quiet sounds (baby may be whimpering or talking).

3 One Loud Sound Light

Light is Red - Loud sounds (baby may be crying or talking loudly).

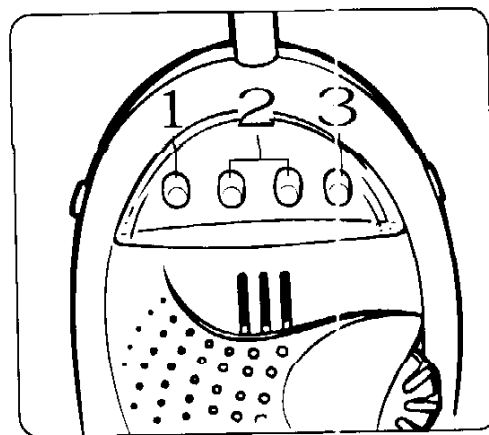

To Use the Finder

1. If the Parent's Unit is misplaced, press the finder button on the Child's Unit. The Parent's Unit will begin to beep.
2. Let the audio signal guide you to the Parent's Unit.
3. Once you locate the Parent's Unit, turn the unit off. The beeping will stop.
4. Wait at least 5 seconds, then turn the Parent's Unit back on. (Be sure the Parent's Unit remains set to the same channel as the Child's unit, A or B.)