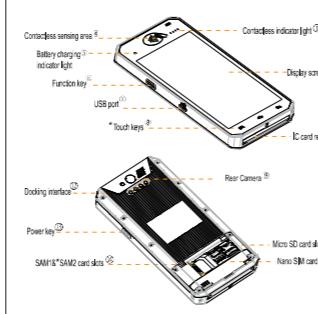


<p>Statement</p> <p>In order to use the terminal safely and correctly, please read this operation guide carefully before use and deploy the terminal. Please refer to all of the related contracts and agreements to the terminal or consult with the agent that sold the terminal to you in order to know all of the particular configurations clearly about this terminal.</p> <p>The pictures and photos in this guide are for reference only. If any of the pictures and photos do not match the terminal, please prevail in kind.</p> <p>Many of the network services in this guide are provided by the 3rd party network service providers. Therefore, whether or not be able to use these network services are mainly depending on the 3rd party network service providers.</p> <p>The company reserves all the rights to this guide. In other words, no individuals or parties are allowed to copy, excerpt, backup, and change any of the contents in this guide unless the company says so.</p> <p>Package Contents</p> <table border="1" data-bbox="257 752 619 875"> <thead> <tr> <th>Components Name</th> <th>Quantity</th> </tr> </thead> <tbody> <tr> <td>A80 Android MiniPOS Terminal</td> <td>1</td> </tr> <tr> <td>Power adapter</td> <td>1</td> </tr> <tr> <td>USB cable</td> <td>1</td> </tr> <tr> <td>Quick operation guide (including warranty card and certification)</td> <td>1</td> </tr> </tbody> </table>	Components Name	Quantity	A80 Android MiniPOS Terminal	1	Power adapter	1	USB cable	1	Quick operation guide (including warranty card and certification)	1	<p>Security</p> <ul style="list-style-type: none"> The installation and use of this product must strictly follow the instructions in this guide. Unauthorized disassembly of this device will result in the destruction of the built-in security key, resulting in disabling to use. Do not drop, scratch, twist, hit, and vibrate the machine or place heavy objects on the top of it. Do not use sharp objects to touch or collide with the unit, especially the display screen. Disobey to do so may cause the display screen to be damaged or not displayed properly. Wipe the screen with a soft, slightly moist, and non-maturing fabric to remove any traces of oil left by fingers. Do not use corrosive cleaners. This product uses the standard power adapter. Do not use non-standard power adapters, otherwise they may cause the equipment not being able to function as usual or cause serious damage. This product is an electrical product. Do not spill any liquid material, otherwise it may cause the risks of internal short-circuit and serious damage to the device. Do not insert any metal foreign matters into any interface or port of the device. Do not use the device placed in direct sunlight, high temperature, humid, dusty, or strong magnetic field environment. Finding the device damaged or broken down, please stop using the device immediately and contact the relevant after-sales service department. Unauthorized repair or maintenance is strictly forbidden. 	<p>Product Description</p>  <table border="1" data-bbox="936 707 1254 909"> <thead> <tr> <th>Item</th> <th>Features</th> </tr> </thead> <tbody> <tr> <td>Contactless indicator light</td> <td>The 4-color indicator provides a status indication for the operation that may vary depending on the application configuration.</td> </tr> <tr> <td>Display screen</td> <td>Touch screen, display transaction and operation prompt information, etc.</td> </tr> <tr> <td>IC card reader</td> <td>IC card slot.</td> </tr> <tr> <td>Contactless sensing area</td> <td>Induction area for contactless card to reading and writing.</td> </tr> <tr> <td>Battery charging indicator light</td> <td>The 2-color battery charging indicator light.</td> </tr> <tr> <td>Function key</td> <td>Customers can define the function.</td> </tr> </tbody> </table>	Item	Features	Contactless indicator light	The 4-color indicator provides a status indication for the operation that may vary depending on the application configuration.	Display screen	Touch screen, display transaction and operation prompt information, etc.	IC card reader	IC card slot.	Contactless sensing area	Induction area for contactless card to reading and writing.	Battery charging indicator light	The 2-color battery charging indicator light.	Function key	Customers can define the function.	<p>Item</p> <p>Features</p> <table border="1" data-bbox="1286 393 1572 595"> <thead> <tr> <th>Item</th> <th>Features</th> </tr> </thead> <tbody> <tr> <td>USB port</td> <td>Used for connecting external PC or other terminals, allows to do data transmission and battery charging.</td> </tr> <tr> <td>Touch keys</td> <td>Include Menu, Home, and Back key.</td> </tr> <tr> <td>Rear Camera</td> <td>Used for bar and QR code Scanning and taking photo, etc.</td> </tr> <tr> <td>Micro SD card slot</td> <td>Micro SD card slot.</td> </tr> <tr> <td>Nano SIM card slot</td> <td>Nano SIM card slot.</td> </tr> <tr> <td>Docking interface</td> <td>Connect Charging Dock or Docking Station.</td> </tr> <tr> <td>Power key</td> <td>For power-on, power-off, restarting, airplane mode.</td> </tr> <tr> <td>SAM1&SAM2</td> <td>SAM1 card slot on bottom and SAM2 card slot on top.</td> </tr> </tbody> </table> <p>Note: The features marked with an asterisk *** are optional.</p>	Item	Features	USB port	Used for connecting external PC or other terminals, allows to do data transmission and battery charging.	Touch keys	Include Menu, Home, and Back key.	Rear Camera	Used for bar and QR code Scanning and taking photo, etc.	Micro SD card slot	Micro SD card slot.	Nano SIM card slot	Nano SIM card slot.	Docking interface	Connect Charging Dock or Docking Station.	Power key	For power-on, power-off, restarting, airplane mode.	SAM1&SAM2	SAM1 card slot on bottom and SAM2 card slot on top.	<p>Troubles and Troubleshooting</p> <table border="1" data-bbox="1603 393 1889 550"> <thead> <tr> <th>Troubles</th> <th>Troubleshooting</th> </tr> </thead> <tbody> <tr> <td>Failing to turn on the device when pressing the power key</td> <td>The battery volume is low. Please recharge the battery.</td> </tr> </tbody> </table> <table border="1" data-bbox="1603 550 1889 707"> <thead> <tr> <th>Troubles</th> <th>Troubleshooting</th> </tr> </thead> <tbody> <tr> <td>Display screen shows error message about network or service</td> <td>1. The device may lost the ability of receiving signal when you are in a place where the signal is weak or reception is bad. Please try to relocate and try it again. 2. Some of the options may not be able to use because of the lack of reservation. Please contact your service providers for more information.</td> </tr> </tbody> </table> <table border="1" data-bbox="1603 707 1889 864"> <thead> <tr> <th>Troubles</th> <th>Troubleshooting</th> </tr> </thead> <tbody> <tr> <td>Touch screen slow or incorrect reaction</td> <td>If the device has a touch screen, and the screen reaction is incorrect, please try with the following options: 1. Take off the protective film on the screen because it may prevent the device recognize input correctly. We do not recommend to use any type of protective films for touch screens.</td> </tr> </tbody> </table> <table border="1" data-bbox="1603 864 1889 932"> <thead> <tr> <th>Troubles</th> <th>Troubleshooting</th> </tr> </thead> <tbody> <tr> <td>Short standby duration</td> <td>1. Please turn off some functions for saving power when do not using them, such as Bluetooth/WiFi/Data service, and etc. 2. Turn off not-in-use applications on the backstage will help to save power.</td> </tr> </tbody> </table>	Troubles	Troubleshooting	Failing to turn on the device when pressing the power key	The battery volume is low. Please recharge the battery.	Troubles	Troubleshooting	Display screen shows error message about network or service	1. The device may lost the ability of receiving signal when you are in a place where the signal is weak or reception is bad. Please try to relocate and try it again. 2. Some of the options may not be able to use because of the lack of reservation. Please contact your service providers for more information.	Troubles	Troubleshooting	Touch screen slow or incorrect reaction	If the device has a touch screen, and the screen reaction is incorrect, please try with the following options: 1. Take off the protective film on the screen because it may prevent the device recognize input correctly. We do not recommend to use any type of protective films for touch screens.	Troubles	Troubleshooting	Short standby duration	1. Please turn off some functions for saving power when do not using them, such as Bluetooth/WiFi/Data service, and etc. 2. Turn off not-in-use applications on the backstage will help to save power.	<p>Warranty Card</p> <p>Product Name: _____</p> <p>Product Model: _____</p> <p>Warranty terms:</p> <ol style="list-style-type: none"> Our company will provide you with high quality after-sales service. If the user causes product damage due to human factors, the company will charge maintenance fee when repairing. Please take good care of this card, which will be the warranty basis of our company.
Components Name	Quantity																																																														
A80 Android MiniPOS Terminal	1																																																														
Power adapter	1																																																														
USB cable	1																																																														
Quick operation guide (including warranty card and certification)	1																																																														
Item	Features																																																														
Contactless indicator light	The 4-color indicator provides a status indication for the operation that may vary depending on the application configuration.																																																														
Display screen	Touch screen, display transaction and operation prompt information, etc.																																																														
IC card reader	IC card slot.																																																														
Contactless sensing area	Induction area for contactless card to reading and writing.																																																														
Battery charging indicator light	The 2-color battery charging indicator light.																																																														
Function key	Customers can define the function.																																																														
Item	Features																																																														
USB port	Used for connecting external PC or other terminals, allows to do data transmission and battery charging.																																																														
Touch keys	Include Menu, Home, and Back key.																																																														
Rear Camera	Used for bar and QR code Scanning and taking photo, etc.																																																														
Micro SD card slot	Micro SD card slot.																																																														
Nano SIM card slot	Nano SIM card slot.																																																														
Docking interface	Connect Charging Dock or Docking Station.																																																														
Power key	For power-on, power-off, restarting, airplane mode.																																																														
SAM1&SAM2	SAM1 card slot on bottom and SAM2 card slot on top.																																																														
Troubles	Troubleshooting																																																														
Failing to turn on the device when pressing the power key	The battery volume is low. Please recharge the battery.																																																														
Troubles	Troubleshooting																																																														
Display screen shows error message about network or service	1. The device may lost the ability of receiving signal when you are in a place where the signal is weak or reception is bad. Please try to relocate and try it again. 2. Some of the options may not be able to use because of the lack of reservation. Please contact your service providers for more information.																																																														
Troubles	Troubleshooting																																																														
Touch screen slow or incorrect reaction	If the device has a touch screen, and the screen reaction is incorrect, please try with the following options: 1. Take off the protective film on the screen because it may prevent the device recognize input correctly. We do not recommend to use any type of protective films for touch screens.																																																														
Troubles	Troubleshooting																																																														
Short standby duration	1. Please turn off some functions for saving power when do not using them, such as Bluetooth/WiFi/Data service, and etc. 2. Turn off not-in-use applications on the backstage will help to save power.																																																														

3028002000123 产品说明书,英文,A80,兼容没有实体丝印图标,书纸,整体尺寸408*120mm,黑白印刷/安卓10定制版

<p>Aisino Vanstone Electronic (Beijing) Co.,Ltd.</p> <p>Address: 3F, No.2 Building, Aisino Corporation Park 18A, Xingshikou Road, Haidian District, Beijing, China 100195. Email: info@vanstone.com.cn</p> <p>Factory Name: Huizhou Vanstone Electronic Co., Ltd., Factory Address: 4F, No.12 Building, Aerospace Science and Technology Industrial Park, No.51, Zhongkai Road, Huizhou City, Guangdong Province, China 516006. Website: https://www.vanstone.com.cn</p>	<p>Troubles</p> <p>Troubleshooting</p> <p>1. Please ensure that Bluetooth and wireless functions have been turned on.</p> <p>2. Please ensure that the connected device has turned on its Bluetooth and wireless functions.</p> <p>3. Please ensure that the POS terminal and the connected device are within the maximum Bluetooth range of 10 meters.</p> <p>If the problem remains the same, please contact customer service.</p> <p>● If the power adapter plug or power cord is damaged, please do not use them in case of electric shock or fire.</p> <p>● Please do not touch power cord with wet hand or pull out the power adapter like pulling power cable.</p> <p>● Please do not touch the device and power adapter with wet hand in case of short circuit, malfunction, or electric shock.</p> <p>● Please stop using the power adapter and contact sales representatives for exchanging if the power adapter is caught in the rain, getting wet, or affected with damp seriously.</p> <p>● The power adapter has to meet all of the requirements from the EN IEC 62368-1.</p> <p>● If the device has to connect USB ports, please ensure that the USB ports has USB-IF identification, and its performance is qualified with the USB-IF requirements.</p> <p>Power adapter safety</p> <p>● When the device is charged, the power socket</p>	<p>Cautions for use</p> <p>Operating environment</p> <ul style="list-style-type: none"> ● Do not use the device in thunderstorms which can cause the device malfunction or electric shock. ● Keep the device away from rain, moisture and liquids containing acidic substances that can corrode electronic circuit boards. ● Do not store or use the device in a dusty or dirty place. ● Do not store the device in a high temperature place. High temperature will shorten the life of the electronic device. ● Do not place the device in a supercooling place. When the temperature of the device rises, moisture may be formed inside the equipment, which may damage the circuit board. ● Do not try to disassemble the device. Non-professional manipulating will damage the device. ● Do not use a pen, pencil, or other sharp objects to touch the screen surface to avoid scratching the screen. ● Do not drop, strike, or seriously crash the device. Rough behaviors may damage the device and Accessories requirements. <p>Cautions</p> <p>There will be a danger of explosion using the wrong model of battery. The battery must be disposed in accordance with the instructions.</p>	<p>should be installed near the device and should be easy to touch. The charging area of the equipment must be clean without debris, flammable or chemical substance.</p> <ul style="list-style-type: none"> ● When charging is over or uncharged, please cut off the connection between the power adapter and the device, and please unplug the charger from the power socket. ● Please do not drop or crash the power adapter. Once the shell of the adapter is damaged, please contact the agent or distributor who sell the equipment to exchange the power adapter. ● It is forbidden to charge the host overnight without being attended. <p>Battery safety</p> <ul style="list-style-type: none"> ● Please do not shoot circuit batteries, or contact the battery terminals with metal or other conductive objects. ● Please do not disassemble, squeeze, twist, or cut the battery. ● Please do not insert external matter into the battery, contact the battery with water or other liquid, and expose the battery to open flame, explosion source, or other risk sources. ● Please do not place or store the battery in an over-temperature environment. ● Please do not throw the battery into water. ● Do not touch the skin or eyes if a battery leak occurs. If you are stained, rinse the contact area with plenty of water and seek medical attention immediately. ● Please do not use broken or damaged battery. When the standby duration of the device is obviously shorter than usual, please exchange a new battery. <p>Accessories requirements</p> <p>● Please do not use the wrong model of battery. The battery must be disposed in accordance with the instructions.</p>	<p>FCC compliance statement</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> – Reorient or relocate the receiving antenna. – Increase the separation between the
--	--	--	--	---