



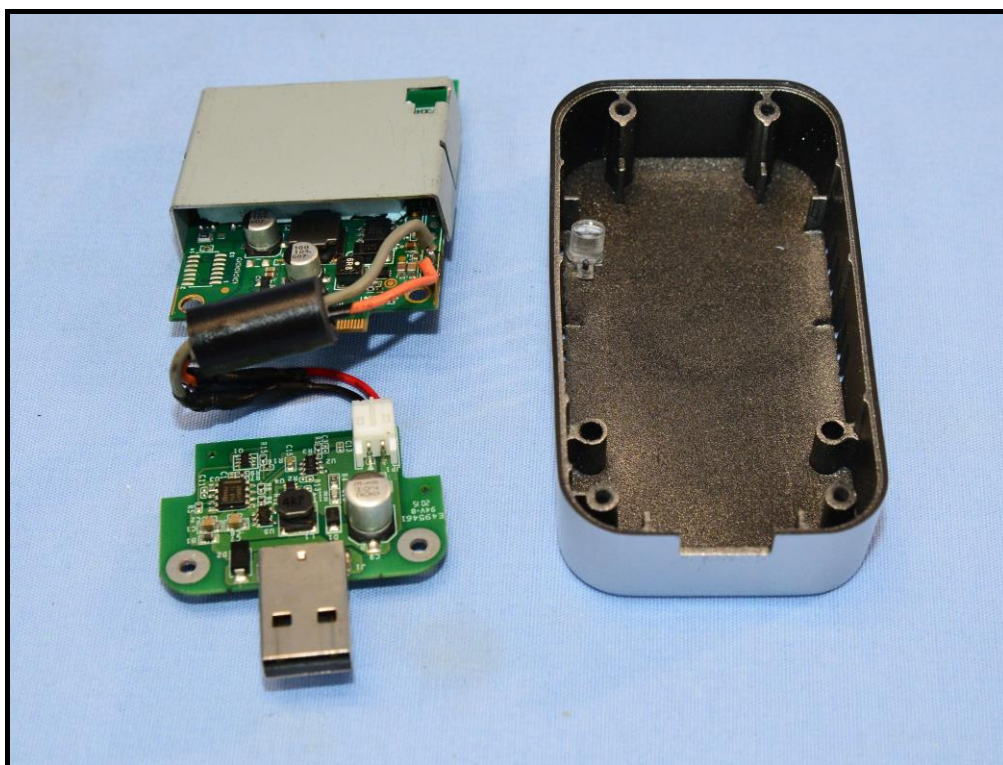


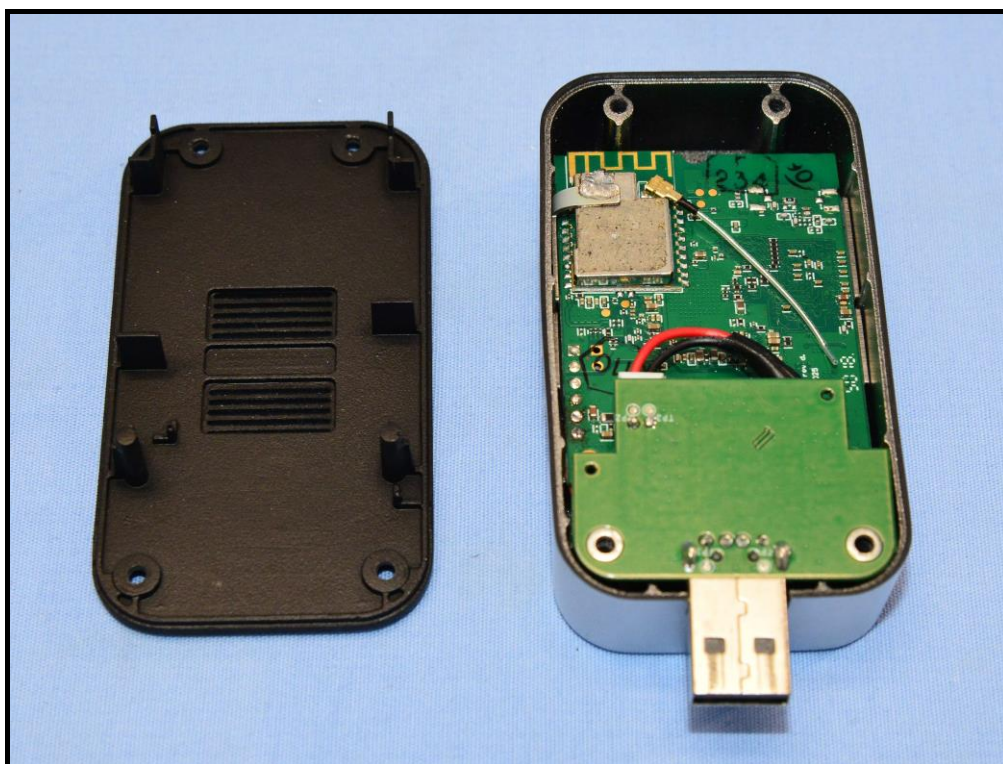

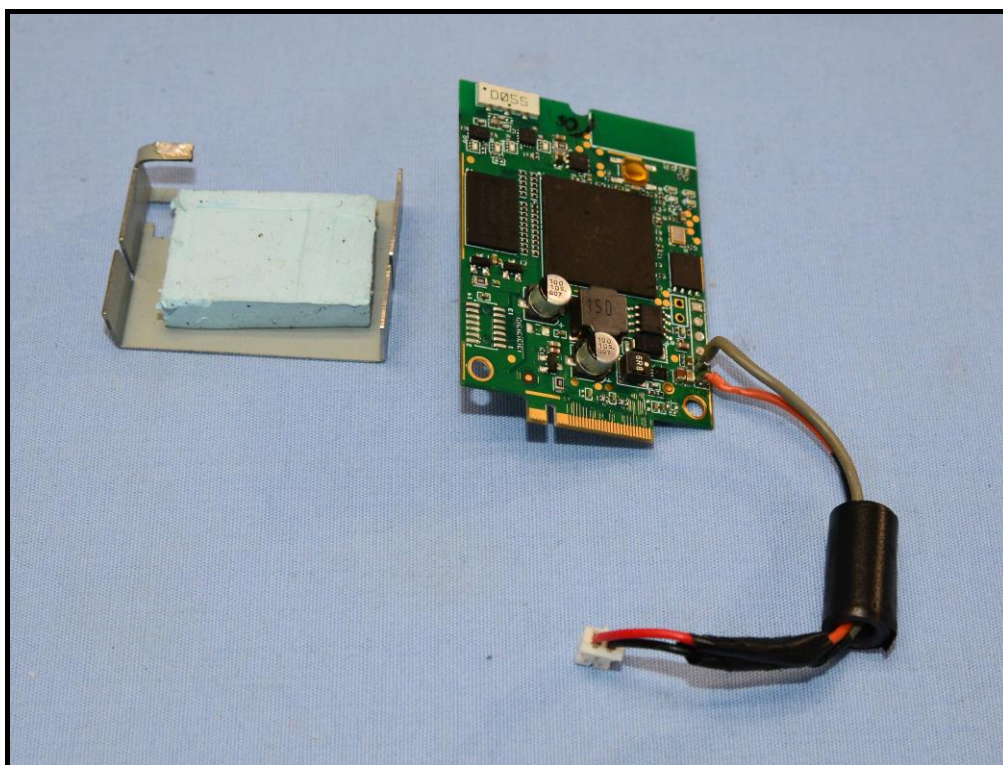

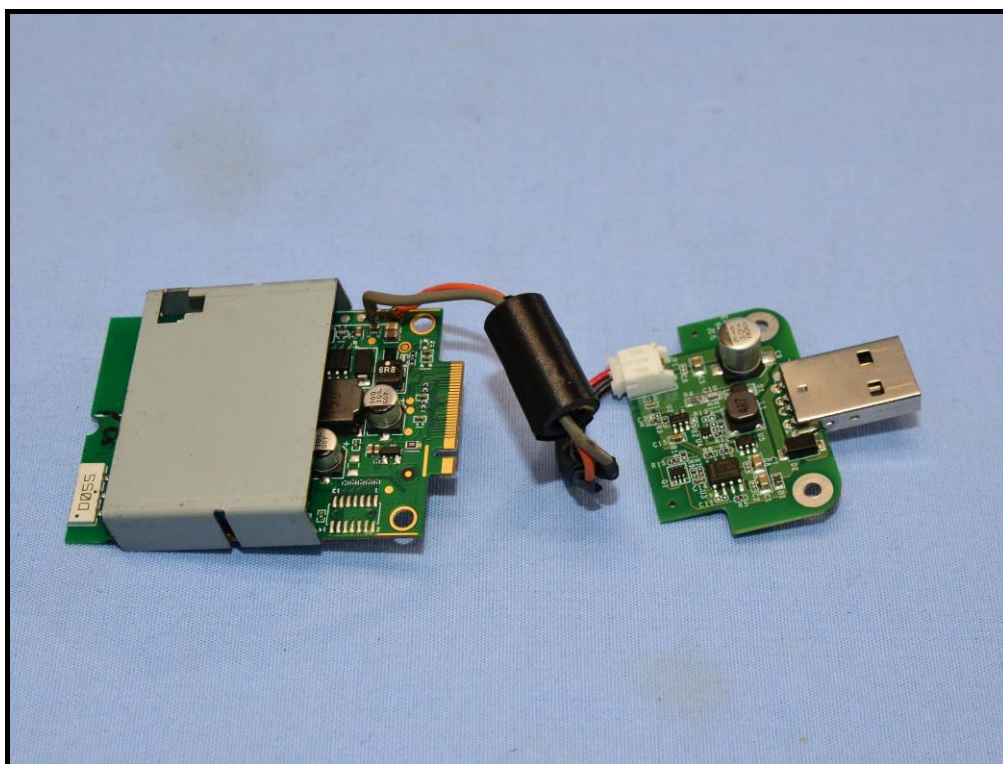

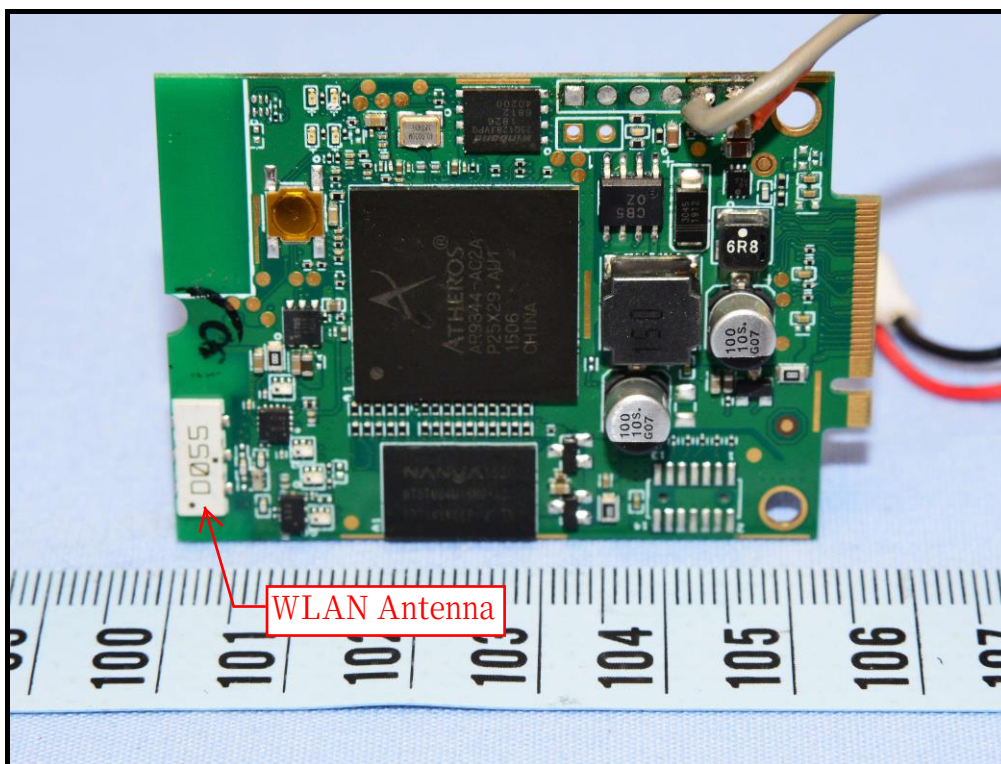

The integrated onboard PCB antenna is permanently disabled when an external antenna is connected to the I-PEX connector.

